


N10156

DISASSEMBLY

1. REMOVE AIR INLET DAMPER CONTROL SERVOMOTOR

Remove the 2 screws and the air inlet damper control servomotor.

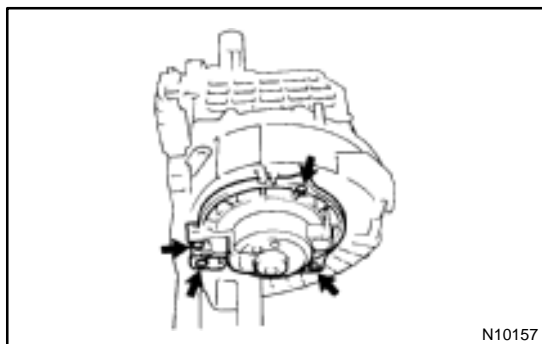

N10157

2. REMOVE BLOWER MOTOR

- (a) Remove the screw and wire harness clamp.
- (b) Remove the 3 screws and the blower motor.