


AIR INLET SERVOMOTOR INSPECTION

1. REMOVE INSTRUMENT PANEL
(See page [BO-100](#))



2. REMOVE AIR INLET SERVOMOTOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and the servomotor.

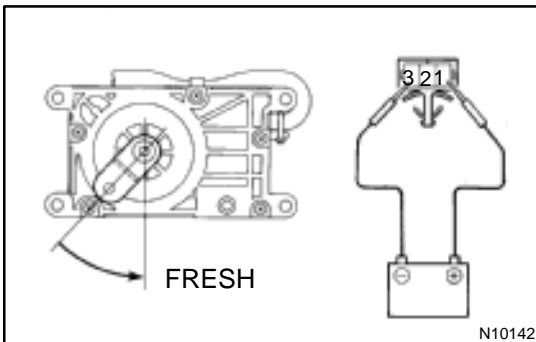


3. INSPECT AIR INLET SERVOMOTOR

Inspect servomotor operation

- (1) Connect the positive (+) lead from the battery to terminal 1 the negative (-) lead to terminal 3, check that the arm rotates to the "FRESH" side smoothly.

- (2) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, check that the arm rotates to the "RECIRC" side smoothly,

If operation is not as specified, replace the servomotor.

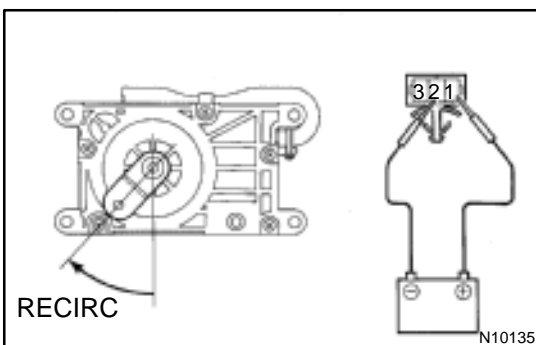

4. INSTALL AIR INLET SERVOMOTOR

- (a) Install the servomotor and 2 screws.
- (b) Connect the connector.

5. INSTALL INSTRUMENT PANEL
(See page [BO-104](#))