


## REMOVAL

### 1. 7A-FE:

#### REMOVE DRIVE BELT

- (a) Remove the alternator drive belt.
- (b) Loosen the idle pulley lock nut.
- (c) Loosen the adjusting bolt and remove the compressor drive belt.

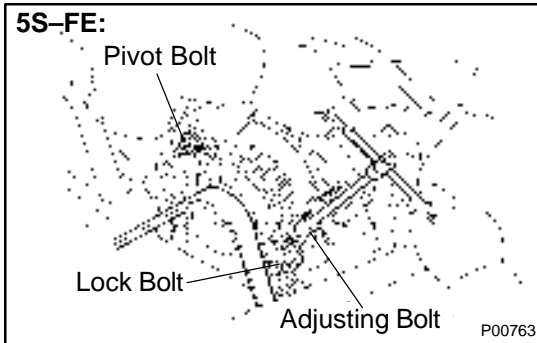

### 2. 5S-FE:

#### REMOVE DRIVE BELT

- (a) Loosen the pivot bolt.
- (b) Loosen the adjusting lock bolt.
- (c) Loosen the adjusting bolt.
- (d) Remove the drive belt.