



**REF.:** HEATING & AIR  
CONDITIONING  
**NO.:** AC002-96  
**DATE:** MAY 31, 1996  
**MODEL:** ALL MODELS

## A/C COMPRESSOR MAINTENANCE FOR STORED VEHICLES

Page 1 of 1

When a vehicle is stored for a long period, the volume of oil in the A/C compressor may decrease due to oil flow into the condenser, pipes, etc.

If the A/C system is turned on at high engine RPM after a long storage period, A/C compressor damage may result.

To minimize the possibility of damage to the A/C compressor while storing a vehicle, perform the following recommended procedure at least once a month to lubricate the compressor.

### RECOMMENDED PROCEDURE FOR A/C COMPRESSOR LUBRICATION:

1. Turn off A/C and blower switches prior to starting engine.
2. Start and warm-up engine until engine speed drops below 1,000 RPM.
3. Turn on the A/C system using the following settings:
  - A/C switch: On
  - Blower Speed: High
  - Engine speed: Below 1,000 RPM
4. Keep A/C on with engine idling for 30 seconds.
5. Turn off A/C system and stop engine.