



BRAKE PEDAL COMPONENTS

AUTOMATIC TRANSAXLE

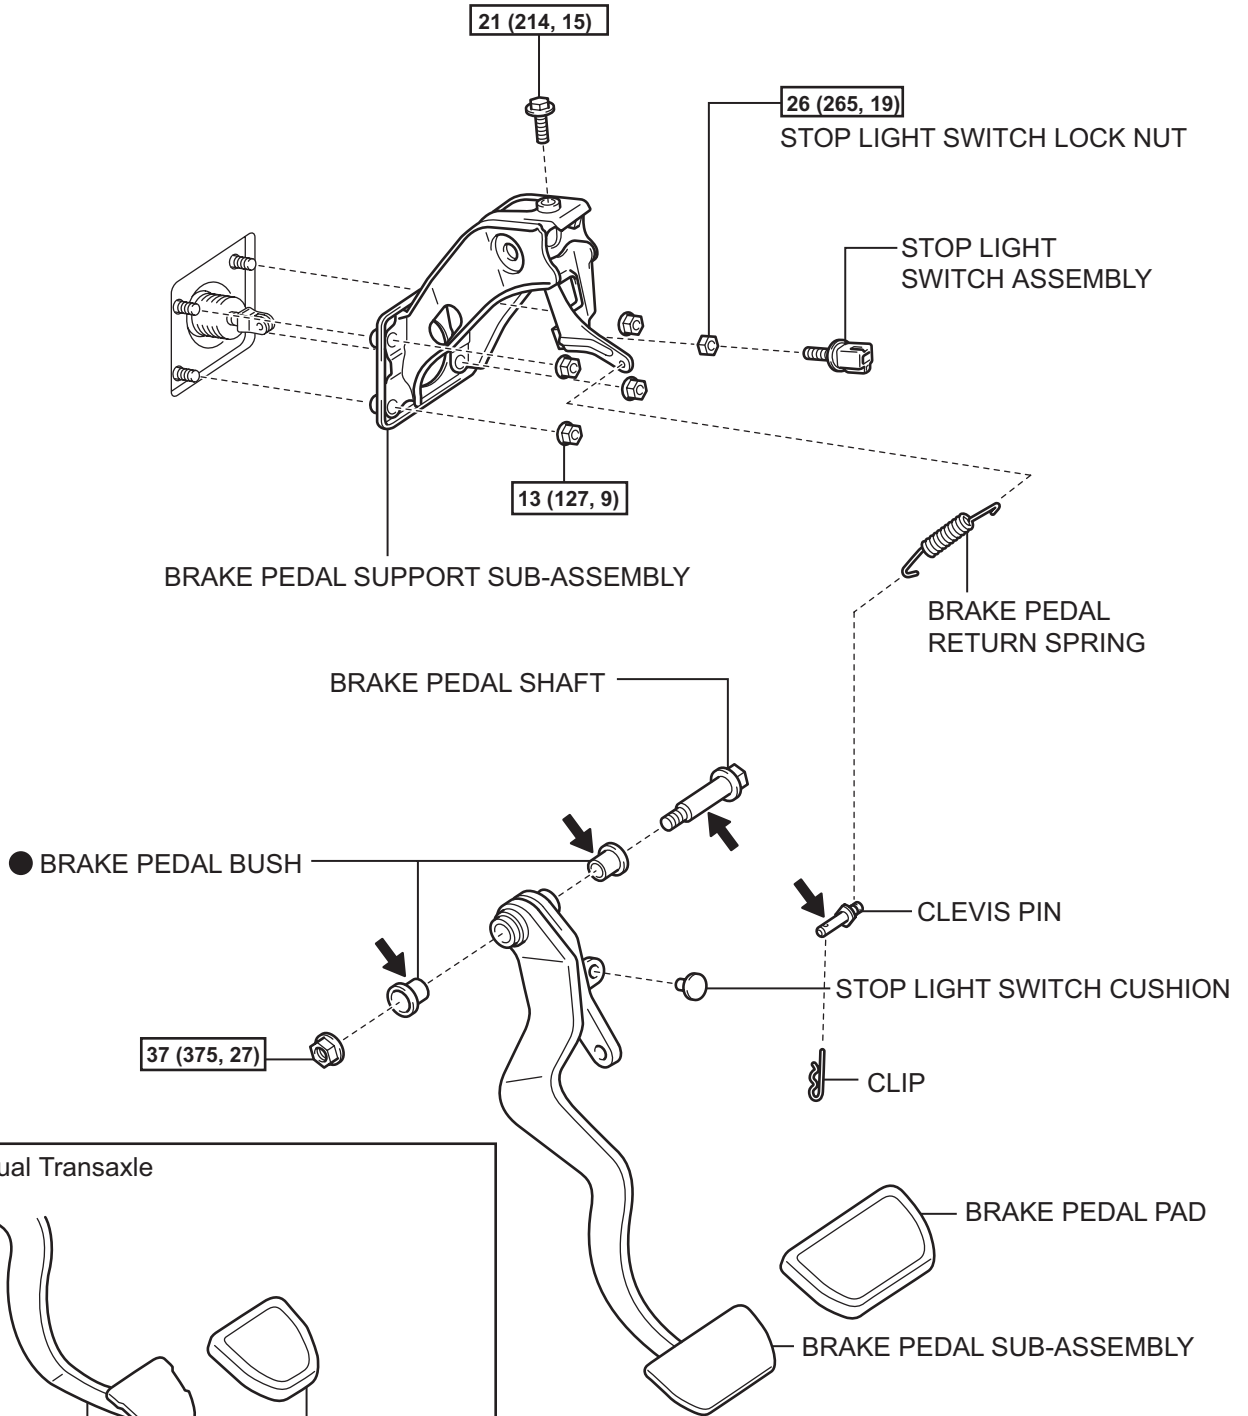

Manual Transaxle

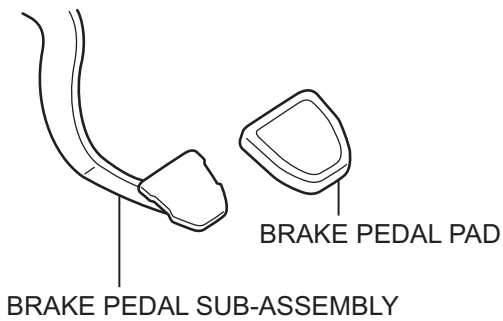

$N \cdot m$ (kgf \cdot cm, ft. \cdot lbf) : Specified torque

● Non-reusable part

← Lithium soap base glycol grease

BR

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE LOWER INSTRUMENT PANEL ASSEMBLY**
(See page [IP-19](#))


3. **DISCONNECT MASTER CYLINDER PUSH ROD CLEVIS**

- (a) Disconnect the stop light switch connector.
- (b) Remove the brake pedal return spring.
- (c) Remove the clip and clevis pin, and disconnect the master cylinder push rod clevis from the brake pedal.

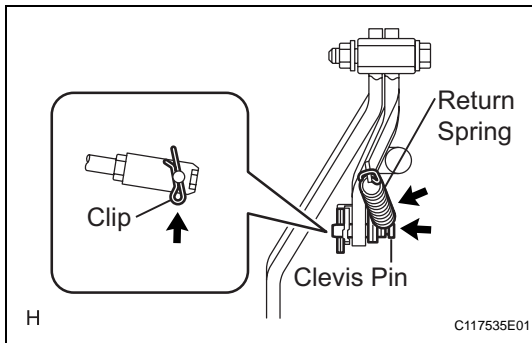

4. **REMOVE BRAKE PEDAL SUPPORT SUB-ASSEMBLY**

- (a) Remove the bolt from the brake pedal support.

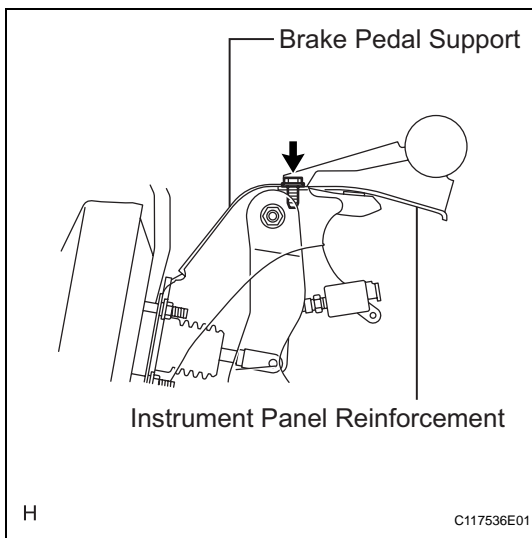

- (b) Remove the 4 nuts and brake pedal support.

5. **REMOVE BRAKE PEDAL SUB-ASSEMBLY**

- (a) Remove the brake pedal shaft and nut from the brake pedal support.
- (b) Remove the brake pedal and 2 bushes.
- (c) Remove the stop lamp switch cushion.

6. **REMOVE STOP LIGHT SWITCH ASSEMBLY**

- (a) Loosen the stop light switch lock nut.
- (b) Remove the stop light switch from the brake pedal support.

7. **REMOVE BRAKE PEDAL PAD**

- (a) Remove the brake pedal pad from the brake pedal.

