


## INSTALLATION


### 1. INSTALL STEERING COLUMN ASSEMBLY

- Install the steering column from the front side, and install the steering column clamp to the instrumental reinforcement.
- Install the steering column with the bolt.  
**Torque: 21 N\*m (210 kgf\*cm, 15 ft.\*lbf)**
- Connect the connectors and wire harness clamps.

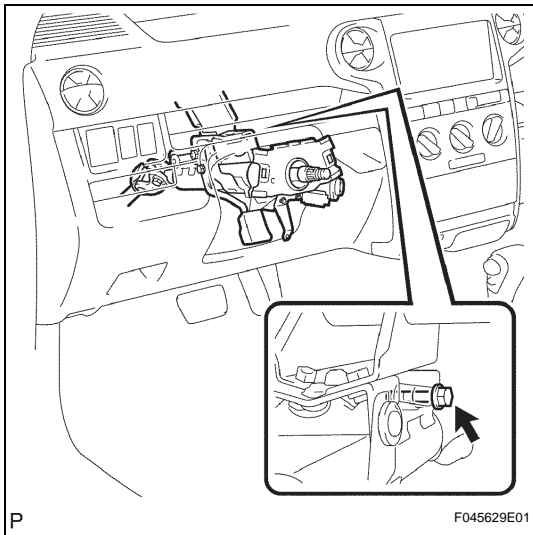


### 2. INSTALL STEERING INTERMEDIATE SHAFT ASSEMBLY

- Align the matchmarks on the main shaft and steering intermediate shaft.
- Install the steering intermediate shaft with the bolt.  
**NOTICE:**  
Install the intermediate shaft with the distinction paint facing the steering column side.

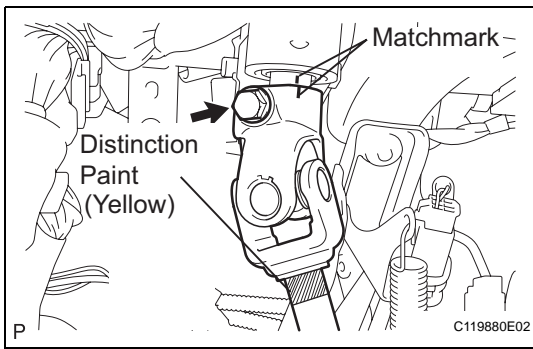

### 3. CONNECT STEERING INTERMEDIATE SHAFT ASSEMBLY

- Align the matchmarks on the sliding yoke and intermediate shaft.
- Connect the intermediate shaft with the bolt.  
**Torque: 28 N\*m (286 kgf\*cm, 21 ft.\*lbf)**

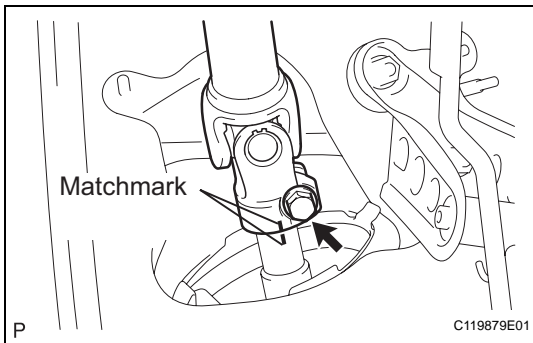

### 4. INSTALL STEERING COLUMN HOLE COVER PLATE


- Install the column hole cover plate with the clip.

### 5. INSTALL WINDSHIELD WIPER SWITCH ASSEMBLY (See page [WW-24](#))

### 6. INSTALL HEADLIGHT DIMMER SWITCH ASSEMBLY (See page [LI-25](#))

### 7. PLACE FRONT WHEELS FACING STRAIGHT AHEAD


### 8. INSTALL SPIRAL CABLE SUB-ASSEMBLY (See page [RS-197](#))

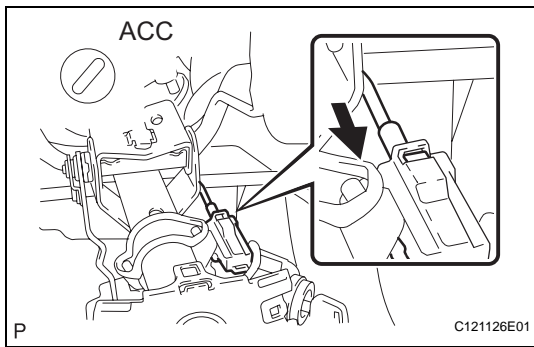

**9. CONNECT FLOOR SHIFT PARKING LOCK CABLE ASSEMBLY (for Automatic Transaxle)**


- (a) With the key in the ACC position, connect the floor shift parking lock cable.

**10. CHECK KEY INTERLOCK OPERATION**

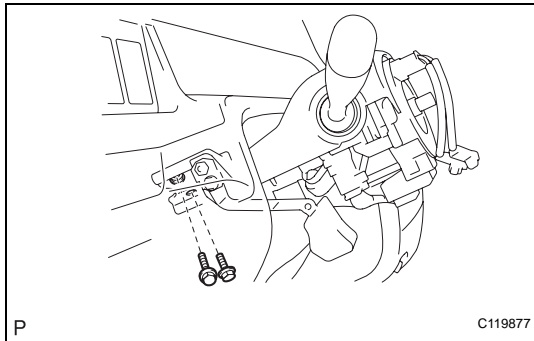

**11. INSTALL STEERING COLUMN COVER**

- (a) Install the column cover upper.  
 (b) Install the 2 bolts.  
**Torque: 21 N\*m (210 kgf\*cm, 15 ft.\*lbf)**

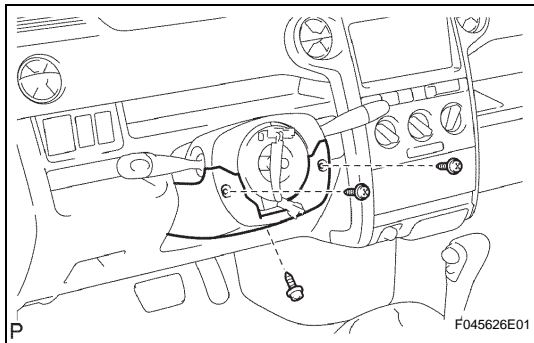

- (c) Install the column cover lower with the 3 screws.

**12. INSTALL SPIRAL CABLE SUB-ASSEMBLY (See page [RS-197](#))**

**13. INSTALL STEERING WHEEL ASSEMBLY**

- (a) Align the matchmarks on the steering wheel and steering main shaft.  
 (b) Install the steering wheel with the set nut.  
**Torque: 50 N\*m (510 kgf\*cm, 37 ft.\*lbf)**  
 (c) Connect the connector.

**14. INSTALL STEERING PAD ASSEMBLY (See page [RS-188](#))**

**15. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

**16. INSPECT STEERING PAD ASSEMBLY**

- (a) Inspect the steering pad (see page [RS-187](#)).

**17. PERFORM VSC SYSTEM CALIBRATION**

- (a) Perform VSC system calibration (see page [BC-15](#)).

**18. INSPECT SRS WARNING LIGHT**

- (a) Inspect the SRS warning light (see page [RS-18](#)).