

DISASSEMBLY

1. REMOVE A/C AMPLIFIER
2. REMOVE DRAIN HOSE
3. REMOVE BLOWER RESISTOR

Remove the 2 screws and blower resistor.

4. SEPARATE UPPER AND LOWER UNIT CASES

- (a) Using a knife, cut off the each parking.
- (b) Remove the 4 screws and 4 clips.
- (c) Separate the upper and lower unit case.

5. REMOVE EVAPORATOR FROM LOWER UNIT CASE

HINT:


If evaporator was replace, add compressor oil to compressor.

Add 40 cc (1.4 fl. oz.)

Compressor oil: ND-OIL 8 or equivalent

6. REMOVE THERMISTOR FROM EVAPORATOR

Pull out the the thermistor from evaporator.

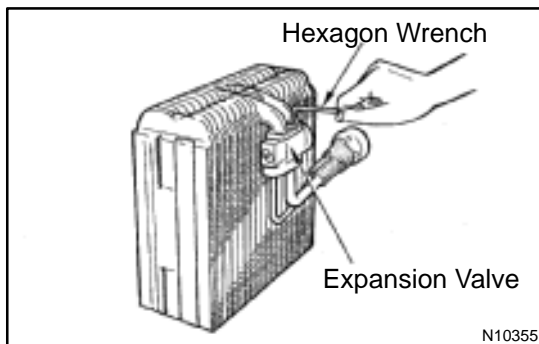

7. REMOVE EXPANSION VALVE

Using a hexagon wrench, remove the 2 bolts and separate the evaporator and expansion valve.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

HINT:

Lubricate 4 new O-rings with compressor oil and install them to the tubes.