

## DISASSEMBLY

### 1. REMOVE HEATER BLOWER SWITCH

Remove the 2 screws and heater blower switch.

### 2. REMOVE A/C CONTROL KNOBS

- (a) Remove the heater control lens.
- (b) Remove the A/C control knobs.