



## BLOWER MOTOR INSPECTION

AC1GP-05

1. REMOVE LOWER FINISH PANEL  
(See page [BO-100](#))

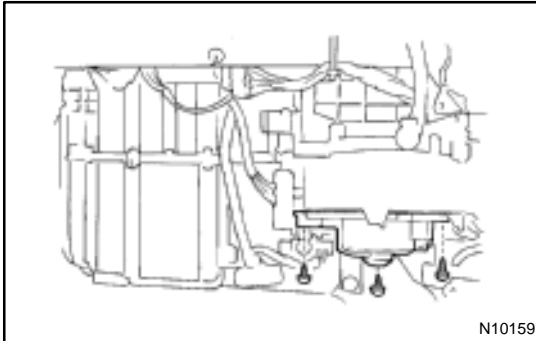

2. REMOVE BLOWER MOTOR
  - (a) Disconnect the connector.
  - (b) Remove the 3 screws and motor.

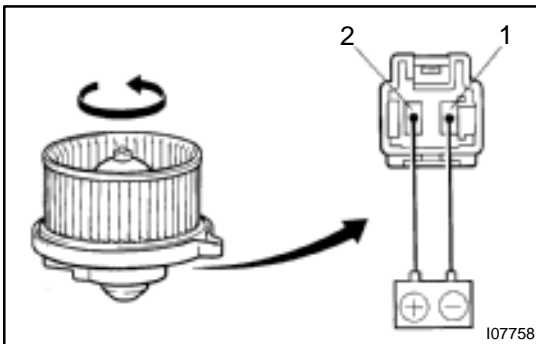

3. INSPECT FRONT BLOWER MOTOR OPERATION  
Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the motor operations smoothly.  
If operation is not as specified, replace the blower motor.
4. INSTALL BLOWER MOTOR
  - (a) Install the motor and 3 screws.
  - (b) Connect the connector.
5. INSTALL LOWER FINISH PANEL  
(See page [BO-104](#))