



# BLOWER RESISTOR INSPECTION

AC16Q-03

1. REMOVE LOWER FINISH PANEL  
(See page [BO-100](#))

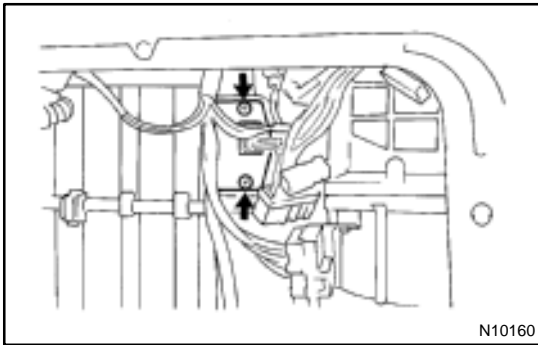

2. REMOVE BLOWER RESISTOR
  - (a) Disconnect the connector.
  - (b) Remove the 2 screws and the blower resistor.

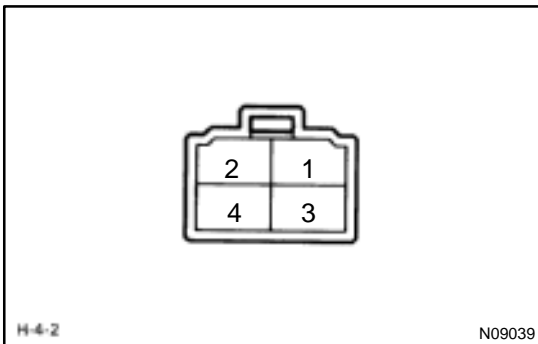

3. INSPECT BLOWER RESISTOR CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2 - 3 - 4	Continuity

If continuity is not as specified, replace the blower resistor.

4. INSTALL BLOWER RESISTOR
  - (a) Install the blower resistor and 2 screws.
  - (b) Connect the connector.
5. INSTALL LOWER FINISH PANEL  
(See page [BO-104](#))