



AIR OUTLET SERVOMOTOR INSPECTION

AC1GS-02

1. REMOVE NO. 1 INSTRUMENT LOWER FINISH PANEL (See page BO-100)
2. REMOVE FINISH PANEL (See page BO-100)
3. REMOVE NO. 2 HEATER TO REGISTER DUCT (See page BO-100)

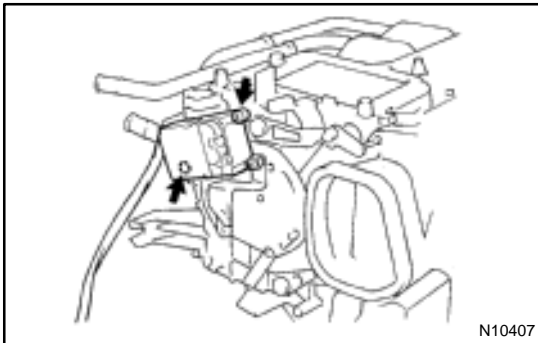

4. REMOVE AIR OUTLET SERVOMOTOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and the servomotor.

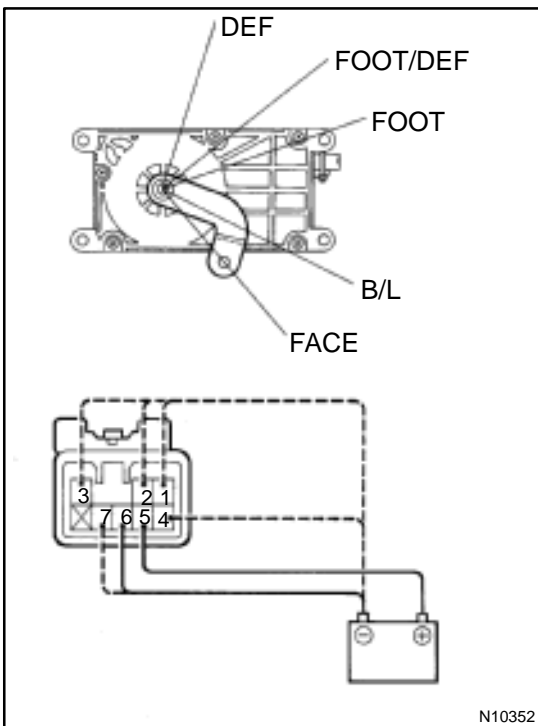

5. INSPECT AIR OUTLET SERVOMOTOR

Inspect servomotor operation

- (1) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 6.
- (2) Connect the negative (-) lead from the battery to each terminal and check that the arm rotates to each position, as shown in the chart below.

Connected terminal	Position
1	FACE
2	B/L
3	FOOT
4	FOOT/DEF
7	DEF

If operation is not as specified, replace the servomotor.

6. INSTALL AIR OUTLET SERVOMOTOR
 - (a) Install the servomotor and 2 screws.
 - (b) Connect the connector.
7. INSTALL NO. 2 HEATER TO REGISTER DUCT (See page BO-100)
8. INSTALL FINISH PANEL (See page BO-100)
9. INSTALL NO. 1 INSTRUMENT LOWER FINISH PANEL (See page BO-100)