


ENGINE COOLANT TEMPERATURE (ECT) SWITCH INSPECTION

AC1HE-03


1. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all the coolant.

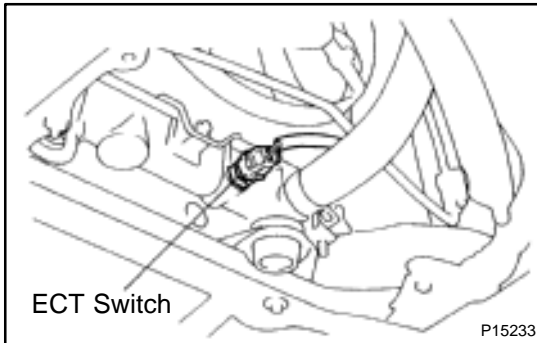

2. REMOVE ECT SWITCH

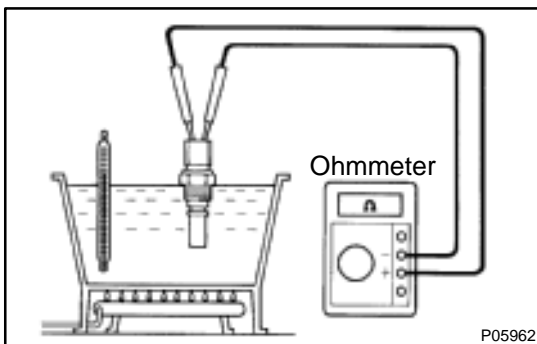

3. INSPECT SWITCH CONTINUITY

- (a) Using an ohmmeter, check that no continuity exists between the terminals when the coolant temperature is above 90 °C (194 °F).
- (b) Using an ohmmeter, check that continuity exists between the terminals when the coolant temperature is below 83 °C (181 °F).

If no continuity exists, replace the switch.

4. INSTALL ECT SWITCH

5. REFILL ENGINE COOLANT