



## INSTALLATION

Installation is in the reverse order of removal

(See page AC-58).

**AFTER INSTALLATION, ADJUST WATER VALVE CONTROL CABLE**

- (a) Set the temperature control dial at "COOL" position.
- (b) Set the water valve control lever to "COOL" position and install the control cable and lock the clamp.

**HINT:**

Lock the clamp during lightiy pulling the outer cable in the direction shown in the illustration by an arrow.