

REMOVAL

1. **REMOVE INSTRUMENT LOWER FINISH PANEL**
(See page [BO-100](#))

2. **REMOVE HEATER AIR DUCT NO.2**

Remove the screw and heater air duct No.2.

3. **DISCONNECT A/C CONTROL CABLES**


- (a) Remove the water valve control cable guide.
- (b) Disconnect the mix cool damper control cable from the heater unit.

4. **REMOVE UPPER CONSOLE PANEL**

(See page [BO-100](#))

5. **REMOVE CENTER CLUSTER FINISH PANEL**

(See page [BO-100](#))

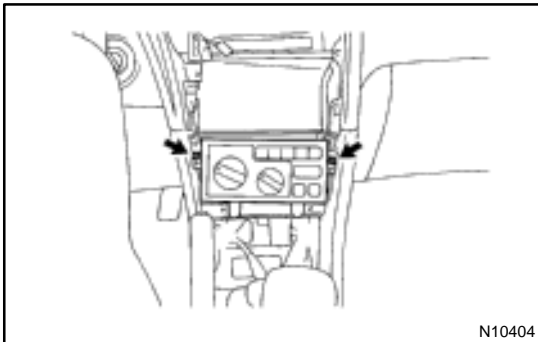

6. **REMOVE A/C CONTROL ASSEMBLY**

- (a) Remove the 2 screws.
- (b) Pull out the A/C control assembly, then disconnect the connector.