


## REMOVAL

### 1. REMOVE COOLING UNIT (See page AC-26)

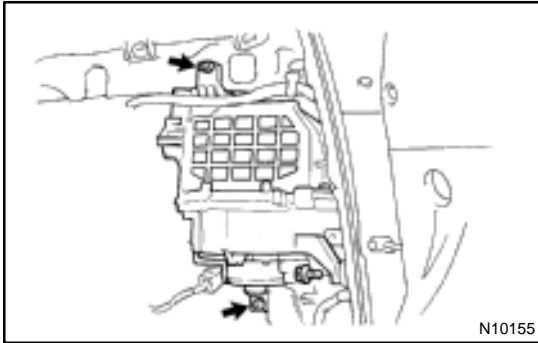

### 2. REMOVE BLOWER UNIT

- (a) Disconnect the connector from the blower motor and air inlet servomotor.
- (b) Remove wire harness clamp.
- (c) Remove the 2 nuts, a bolt and the blower unit.