


ENGINE INSPECTION

MA00R-22

HINT:

Inspect these items when the engine is cold.

1. **REPLACE TIMING BELT**
(7A-FE: See page [EM-11](#))
(5S-FE: See page [EM-11](#))
2. **INSPECT DRIVE BELT**
(7A-FE: See page [CH-2](#))
(5S-FE: See page [CH-2](#))
3. **REPLACE SPARK PLUGS**
(7A-FE: See page [IG-1](#))
(5S-FE: See page [IG-1](#))

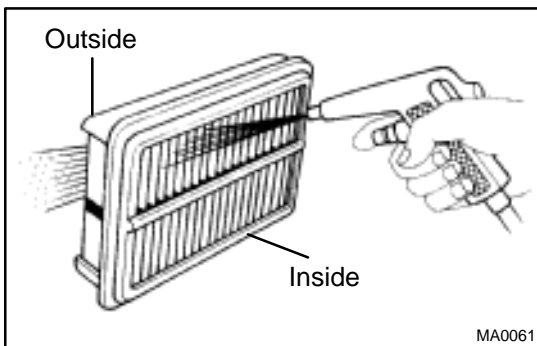

4. **INSPECT AIR FILTER**
 - (a) Visually check that the air filter is not excessively dirty, damaged or oily.
If necessary, replace the air filter.
 - (b) Clean the air filter compressed air.
First blow from the inside thoroughly, then blow off the outside of the air filter.
5. **REPLACE AIR FILTER**
Replace the air filter with a new one.
6. **REPLACE ENGINE OIL AND OIL FILTER**
(7A-FE: See page [LU-2](#))
(5S-FE: See page [LU-2](#))
7. **REPLACE ENGINE COOLANT**
(7A-FE: See page [CO-2](#))
(5S-FE: See page [CO-2](#))
8. **INSPECT CHARCOAL CANISTER**
(7A-FE: See page [EC-5](#))
(5S-FE: See page [EC-6](#))
9. **REPLACE GASKET IN FUEL TANK CAP**
(7A-FE: See page [SF-27](#))
(5S-FE: See page [SF-30](#))
10. **INSPECT FUEL LINES AND CONNECTIONS**
(7A-FE: See page [SF-27](#))
(5S-FE: See page [SF-30](#))
11. **INSPECT EXHAUST PIPES AND MOUNTINGS**
(7A-FE: See page [EC-12](#))
(5S-FE: See page [EC-14](#))
12. **ADJUST VALVE CLEARANCE**
(7A-FE: See page [EM-4](#))
(5S-FE: See page [EM-4](#))