

# ***SECTION 1-1***


---

## **OPERATION OF INSTRUMENTS AND CONTROLS**

### **Overview of instruments and controls**


Instrument panel overview .....	2
Instrument cluster overview .....	4
Indicator symbols on the instrument cluster .....	5

**Instrument panel overview**

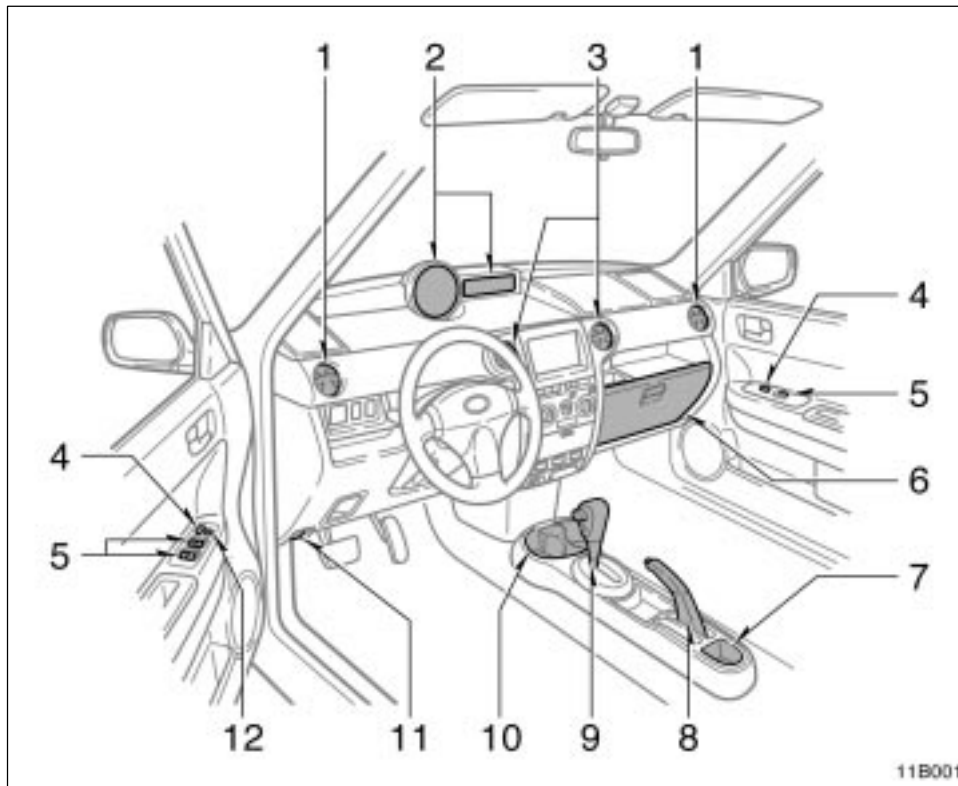


1. Side vent
2. Instrument cluster
3. Center vents
4. Power door lock switch
5. Power window switches
6. Glove box
7. Rear cup holder
8. Parking brake lever
9. Automatic transmission selector lever or manual transmission gear shift lever
10. Front cup holders
11. Hood lock release lever
12. Window lock switch

05.05.20

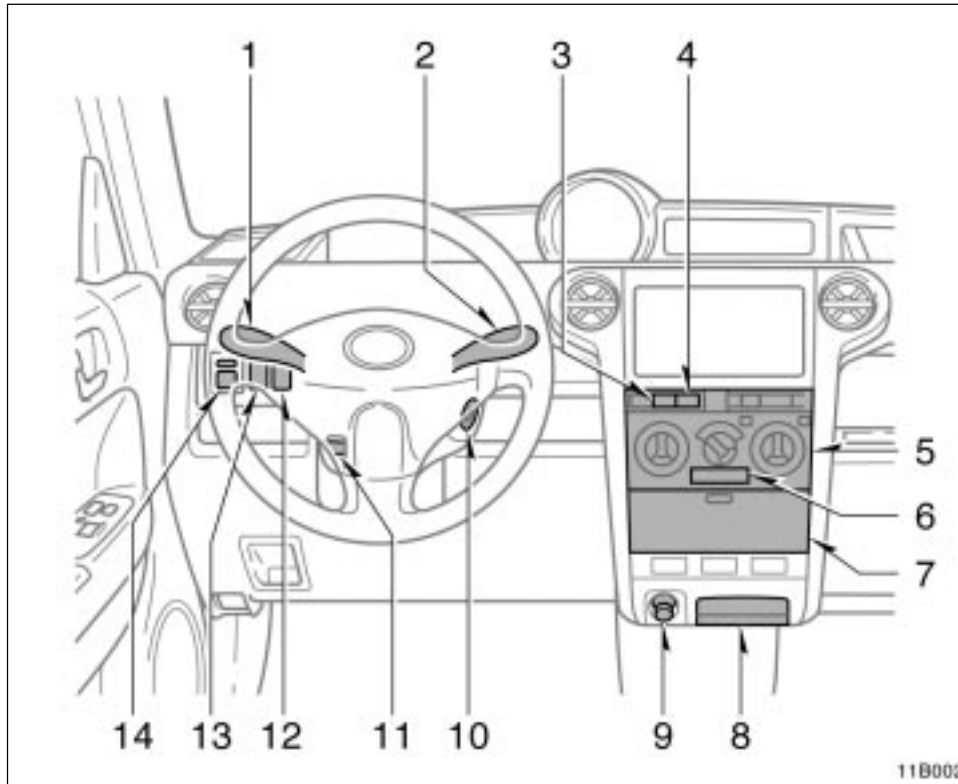

1. Headlight and turn signal switches
2. Wiper and washer switches
3. Rear window defogger switch
4. Emergency flasher switch
5. Air conditioning controls
6. Front passenger's seat belt reminder light
7. Auxiliary box
8. Ashtray
9. Cigarette lighter
10. Ignition switch
11. Tilt steering lock release lever
12. Traction control system off switch
13. Instrument panel light control dial
14. Power rear view mirror control switches

Instrument cluster overview

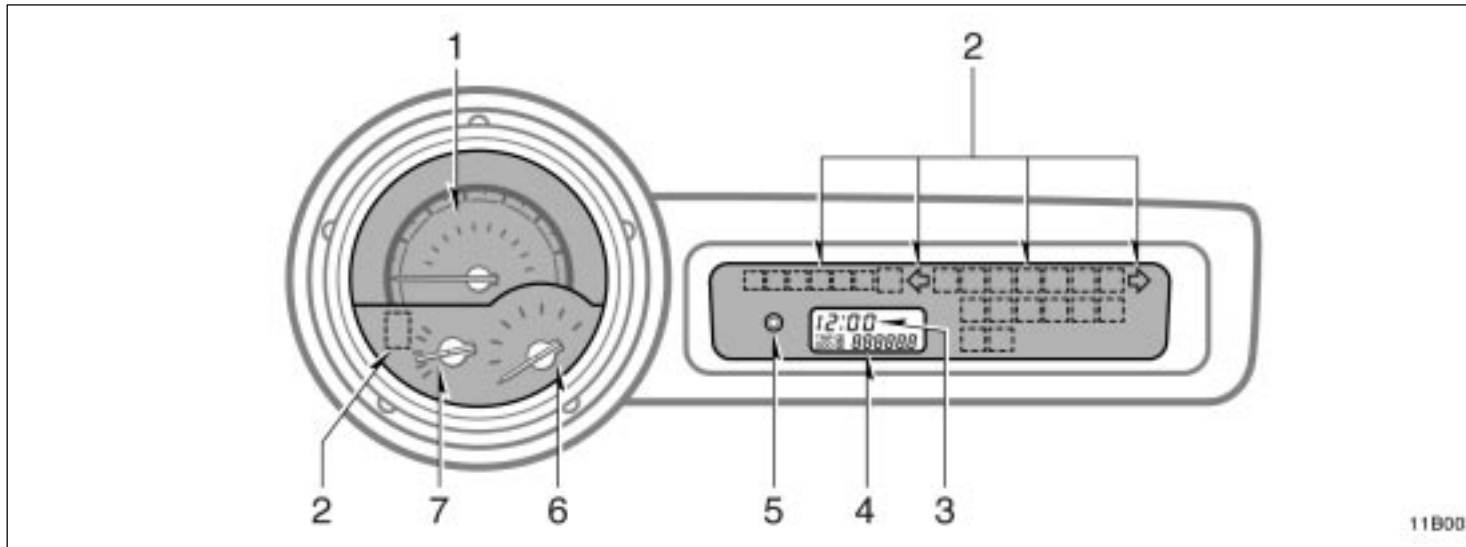

1. Speedometer

2. Service reminder indicators and indicator lights

3. Clock

4. Odometer and two trip meters





 





 

 
5. Clock reset and trip meter reset knob

6. Tachometer

7. Fuel gauge

## 05.05.20

### Indicator symbols on the instrument cluster

<b>BRAKE</b>	Brake system warning light*		Open door warning light*
	Driver's seat belt reminder light*		SRS warning light*
<b>PASSENGER</b> 	Front passenger's seat belt reminder light*	<b>VSC</b>	Vehicle stability control system and traction control system warning light*
	Charging system warning light*		Low fuel level warning light*
<b>MAINT REQD</b>	Engine oil replacement reminder light		Turn signal indicator lights
	Malfunction indicator lamp*		Headlight high beam indicator light
	Low engine oil pressure warning light*	<b>O/D OFF</b>	Overdrive-off indicator light
 (blue)	Low engine coolant temperature indicator light*		Slip indicator light
 (red)	High engine coolant temperature warning light*	<b>TRAC OFF</b>	Traction control system off indicator light
<b>ABS</b>	Anti-lock brake system warning light*		

\*: For details, see "Service reminder indicators and warning buzzers" on page 77.

**05.05.20**