


2006

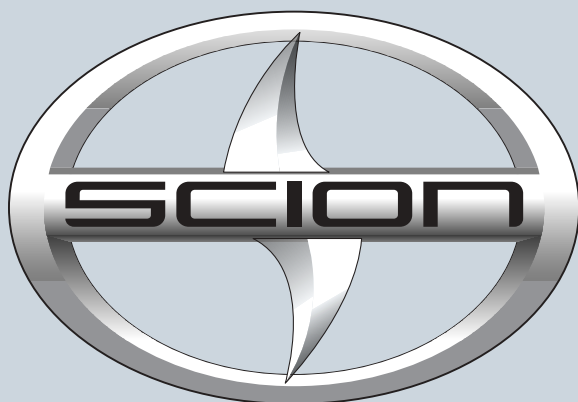

Scheduled Maintenance Guide

This publication pertains to the following Scion models:

- › 2005 & 2006 xA
- › 2005 & 2006 xB
- › 2005 & 2006 tC

Now that you've got your Scion on the road, you want to make sure it keeps going. That's where scheduled maintenance comes in. Taking your car in for regular service will help your ride run better and last longer. It will keep your repair bills down, too.

This booklet makes it easy to keep your Scion running smoothly. It lists all the factory-recommended services and tells you when your vehicle needs them. Be sure to look this booklet over carefully and keep it in your glove box. Do what it says and your Scion should be happy for many miles to come.

Complimentary Oil Changes

To help you get started with regular maintenance, Scion provides your vehicle's first three oil changes on a complimentary basis. To find out how to obtain your complimentary oil changes, see page 3.

Remember that changing the oil is just one of the maintenance services that should be performed regularly on your Scion. Make sure that all the other services recommended in this booklet are performed on your car as well.

Put It In Writing

To help you keep track of your Scion's service history, each maintenance chart in this booklet includes:

- › Boxes to check for each service item performed
- › Space for the maintenance provider to include a service verification stamp
- › Space to write the date and mileage that service is performed

Documenting your service history may make your car worth more when you're ready to sell. There's a reason smart people write things down.

In addition to scheduled maintenance, your vehicle requires general maintenance such as fluid checks and visual inspections. These procedures are explained in the "Vehicle Maintenance and Care" section of the *Owner's Manual*. To keep your Scion out of trouble, be sure to perform these procedures regularly.

Scion is a marque of Toyota Motor Sales, U.S.A., Inc.

Maintenance Records

To make sure your warranty coverage stays intact, you need to maintain your Scion according to the recommendations in this booklet. You should keep records of vehicle maintenance, including date and mileage at time of service and a description of service items performed and parts installed. The scheduled maintenance log can help you keep track of this information. If you sell your car, be sure to give your maintenance records to the new owner.

Scion will not deny a warranty claim solely because you don't have records to show that you maintained your vehicle. However, damage or failures caused by lack of proper maintenance are not covered under warranty.

Maintenance Providers

You can have maintenance and repair services done by any automotive service provider you choose, or you can do them yourself. Scion won't deny a warranty claim solely because you used a service provider other than a Scion dealership for maintenance and repairs. However, damage or failures caused by improper maintenance or repairs are not covered under warranty.

Note: Only Scion dealerships and Toyota dealerships are authorized to provide warranty service/repairs for your Scion.

Dealer-Recommended Maintenance

Your dealer may recommend more frequent maintenance intervals or more maintenance services than those listed in the scheduled maintenance log. You don't need to have these additional services performed to maintain your warranty coverage. Ask your dealer to explain any recommended maintenance that is not included in the scheduled maintenance log.

For a complete description of Scion warranty coverages, check out the booklet called *2006 Owner's Warranty Information*. You'll find it in your glove box.

» Table of Contents «

Using the Maintenance Log Charts	2
Complimentary Oil Changes	3
Scheduled Maintenance Log	4
Explanation of Maintenance Items	20
Vehicle Identification	23

Miles or Months?

Scion recommends obtaining scheduled maintenance for your vehicle every 5,000 miles or six months, whichever comes first.

For example:

- › If you drive 5,000 miles in less than six months, you should obtain maintenance at **5,000 miles** — don't wait until six months.
- › If at six months you have driven less than 5,000 miles, you should obtain maintenance at **six months** — don't wait until 5,000 miles.

Be sure to keep an eye on your mileage so that you obtain maintenance when recommended. If you are a low-mileage driver, mark your calendar to remind yourself to obtain maintenance every six months.

Special Operating Conditions

In addition to standard maintenance items, the maintenance log indicates services that should be performed on vehicles that are driven under especially demanding conditions. These “special operating conditions” and their required maintenance items are clearly indicated in each chart.

Note: You should perform these additional maintenance services if you drive *primarily* under any of the special operating conditions indicated. If you drive only occasionally under these conditions, it is not necessary to perform the additional services.

To help you get started with regular maintenance, Scion provides your vehicle's first three oil changes on a complimentary basis. While they don't have to be your initial three oil changes, the oil changes must be obtained within 3 years or 36,000 miles (whichever occurs first) of your vehicle's original in-service date. If you bought your Scion used and the previous owner did not use all three oil changes, you are entitled to the remaining complimentary oil changes if your car is still within 3 years or 36,000 miles of its original in-service date.

To obtain a complimentary oil change, call a Scion dealership or participating Toyota dealership to make an appointment. The dealership will verify that the service was performed by completing one of the boxes on the inside back cover of this booklet.

Complimentary oil changes include change of engine oil and oil filter only. You are responsible for the cost of any other services performed at the time of your complimentary oil changes, including other maintenance services listed in the scheduled maintenance log.

5,000 Miles or 6 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

10,000 Miles or 12 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

15,000 Miles or 18 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Tighten drive shaft bolt
- ☐ Visually inspect brake linings/drums and brake pads/discs
- ☐ Inspect the following:

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Radiator core and condenser
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Steering gear box
<input type="checkbox"/> Engine coolant	<input type="checkbox"/> Steering linkage and boots

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

² Perform these service items only if you drive primarily under the conditions indicated.

20,000 Miles or 24 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

25,000 Miles or 30 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

30,000 Miles or 36 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Replace engine air filter
- ☐ Replace spark plugs (xA and xB)³
- ☐ Tighten drive shaft bolt
- ☐ Inspect the following:

<ul style="list-style-type: none"> <input type="checkbox"/> Ball joints and dust covers <input type="checkbox"/> Brake lines and hoses <input type="checkbox"/> Brake linings/drums and brake pads/discs⁴ <input type="checkbox"/> Drive shaft boots <input type="checkbox"/> Engine coolant <input type="checkbox"/> Exhaust pipes and mountings <input type="checkbox"/> Front differential oil 	<ul style="list-style-type: none"> <input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses <input type="checkbox"/> Fuel tank cap gasket <input type="checkbox"/> Radiator core and condenser <input type="checkbox"/> Steering gear box <input type="checkbox"/> Steering linkage and boots <input type="checkbox"/> Transmission fluid or oil
---	---

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Replace front differential oil⁵
- ☐ Replace manual transmission oil
- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Required under the terms of the Emission Control Warranty.

⁴ Inspect thickness measurement and disc runout.

⁵ Applies to vehicles equipped with manual transmission.

35,000 Miles or 42 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

40,000 Miles or 48 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

45,000 Miles or 54 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Tighten drive shaft bolt
- ☐ Visually inspect brake linings/drums and brake pads/discs
- ☐ Inspect the following:

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Radiator core and condenser
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Steering gear box
<input type="checkbox"/> Engine coolant	<input type="checkbox"/> Steering linkage and boots

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

² Perform these service items only if you drive primarily under the conditions indicated.

50,000 Miles or 60 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

55,000 Miles or 66 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

60,000 Miles or 72 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Replace spark plugs (xA and xB)³
- ☐ Replace engine air filter
- ☐ Tighten drive shaft bolt
- ☐ Inspect the following:

<ul style="list-style-type: none"> <input type="checkbox"/> Ball joints and dust covers <input type="checkbox"/> Brake lines and hoses <input type="checkbox"/> Brake linings/drums and brake pads/discs⁴ <input type="checkbox"/> Drive belts⁵ <input type="checkbox"/> Drive shaft boots <input type="checkbox"/> Engine coolant <input type="checkbox"/> Engine valve clearance <input type="checkbox"/> Exhaust pipes and mountings 	<ul style="list-style-type: none"> <input type="checkbox"/> Front differential oil <input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses <input type="checkbox"/> Fuel tank cap gasket <input type="checkbox"/> Radiator core and condenser <input type="checkbox"/> Steering gear box <input type="checkbox"/> Steering linkage and boots <input type="checkbox"/> Transmission fluid or oil
---	--

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Replace front differential oil
- ☐ Replace transmission fluid or oil
- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Required under the terms of the Emission Control Warranty.

⁴ Inspect thickness measurement and disc runout.

⁵ Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.

65,000 Miles or 78 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

70,000 Miles or 84 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

75,000 Miles or 90 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Tighten drive shaft bolt
- ☐ Visually inspect brake linings/drums and brake pads/discs
- ☐ Inspect the following:

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Radiator core and condenser
<input type="checkbox"/> Drive belts	<input type="checkbox"/> Steering gear box
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Engine coolant	

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

² Perform these service items only if you drive primarily under the conditions indicated.

80,000 Miles or 96 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

85,000 Miles or 102 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

90,000 Miles or 108 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Replace engine air filter
- ☐ Replace spark plugs (xA and xB)³
- ☐ Tighten drive shaft bolt
- ☐ Inspect the following:

<ul style="list-style-type: none"> <input type="checkbox"/> Ball joints and dust covers <input type="checkbox"/> Brake lines and hoses <input type="checkbox"/> Brake linings/drums and brake pads/discs⁴ <input type="checkbox"/> Drive belts <input type="checkbox"/> Drive shaft boots <input type="checkbox"/> Engine coolant <input type="checkbox"/> Exhaust pipes and mountings <input type="checkbox"/> Front differential oil 	<ul style="list-style-type: none"> <input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses <input type="checkbox"/> Fuel tank cap gasket <input type="checkbox"/> Radiator core and condenser <input type="checkbox"/> Steering gear box <input type="checkbox"/> Steering linkage and boots <input type="checkbox"/> Transmission fluid or oil
---	---

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Replace front differential oil⁵
- ☐ Replace manual transmission oil
- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Required under the terms of the Emission Control Warranty.

⁴ Inspect thickness measurement and disc runout.

⁵ Applies to vehicles equipped with manual transmission.

95,000 Miles or 114 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

100,000 Miles or 120 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Replace engine coolant³
- ☐ Rotate tires
- ☐ Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect ball joints and dust covers
- ☐ Inspect drive shaft boots
- ☐ Inspect engine air filter
- ☐ Inspect steering linkage and boots
- ☐ Tighten drive shaft bolt
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

105,000 Miles or 126 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Tighten drive shaft bolt
- ☐ Visually inspect brake linings/drums and brake pads/discs
- ☐ Inspect the following:
 - ☐ Ball joints and dust covers
 - ☐ Brake lines and hoses
 - ☐ Drive belts
 - ☐ Drive shaft boots
 - ☐ Engine coolant
 - ☐ Exhaust pipes and mountings
 - ☐ Radiator core and condenser
 - ☐ Steering gear box
 - ☐ Steering linkage and boots

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Inspect engine air filter
- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See page 21 for additional information.

110,000 Miles or 132 Months	
<div><input type="checkbox"/> Replace engine oil and oil filter¹</div> <div><input type="checkbox"/> Rotate tires</div> <div><input type="checkbox"/> Visually inspect brake linings/drums and brake pads/discs</div>	
<div>Additional Maintenance Items for Special Operating Conditions²</div> <div>Driving in desert or on dirt roads:<div><input type="checkbox"/> Inspect ball joints and dust covers</div><div><input type="checkbox"/> Inspect drive shaft boots</div><div><input type="checkbox"/> Inspect engine air filter</div><div><input type="checkbox"/> Inspect steering linkage and boots</div><div><input type="checkbox"/> Tighten drive shaft bolt</div><div><input type="checkbox"/> Tighten nuts and bolts on chassis</div></div> <div>Driving while towing:<div><input type="checkbox"/> Tighten nuts and bolts on chassis</div></div>	
<div>Dealer Service Verification:</div>	
Date:	Mileage:

115,000 Miles or 138 Months	
<div><input type="checkbox"/> Replace engine oil and oil filter¹</div> <div><input type="checkbox"/> Rotate tires</div> <div><input type="checkbox"/> Visually inspect brake linings/drums and brake pads/discs</div>	
<div>Additional Maintenance Items for Special Operating Conditions²</div> <div>Driving in desert or on dirt roads:<div><input type="checkbox"/> Inspect ball joints and dust covers</div><div><input type="checkbox"/> Inspect drive shaft boots</div><div><input type="checkbox"/> Inspect engine air filter</div><div><input type="checkbox"/> Inspect steering linkage and boots</div><div><input type="checkbox"/> Tighten drive shaft bolt</div><div><input type="checkbox"/> Tighten nuts and bolts on chassis</div></div> <div>Driving while towing:<div><input type="checkbox"/> Tighten nuts and bolts on chassis</div></div>	
<div>Dealer Service Verification:</div>	
Date:	Mileage:

120,000 Miles or 144 Months

- ☐ Replace engine oil and oil filter¹
- ☐ Rotate tires
- ☐ Replace engine air filter
- ☐ Replace spark plugs³
- ☐ Tighten drive shaft bolt
- ☐ Inspect the following:

<ul style="list-style-type: none"> <input type="checkbox"/> Ball joints and dust covers <input type="checkbox"/> Brake lines and hoses <input type="checkbox"/> Brake linings/drums and brake pads/discs⁴ <input type="checkbox"/> Drive belts <input type="checkbox"/> Drive shaft boots <input type="checkbox"/> Engine coolant <input type="checkbox"/> Engine valve clearance <input type="checkbox"/> Exhaust pipes and mountings 	<ul style="list-style-type: none"> <input type="checkbox"/> Front differential oil <input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses <input type="checkbox"/> Fuel tank cap gasket <input type="checkbox"/> Radiator core and condenser <input type="checkbox"/> Steering gear box <input type="checkbox"/> Steering linkage and boots <input type="checkbox"/> Transmission fluid or oil
---	--

Additional Maintenance Items for Special Operating Conditions²

Driving in desert or on dirt roads:

- ☐ Tighten nuts and bolts on chassis

Driving while towing:

- ☐ Replace front differential oil
- ☐ Replace transmission fluid and oil
- ☐ Tighten nuts and bolts on chassis

Dealer Service Verification:

Date:

Mileage:

¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

² Perform these service items only if you drive primarily under the conditions indicated.

³ Required under the terms of the Emission Control Warranty.

⁴ Inspect thickness measurement and disc runout.

The following descriptions are provided to give you a better understanding of the maintenance items that should be performed on your vehicle. The scheduled maintenance log indicates at which mileage/time intervals each item should be performed. Please note that many maintenance items should be performed only by a qualified technician.

For further information on maintenance items you can perform yourself, see the "Vehicle Maintenance and Care" and "Do-It-Yourself Maintenance" sections of the *Owner's Manual*.

Automatic Transmission Fluid

Replace at specified intervals. When performing inspections, check each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

Ball Joints and Dust Covers

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Brake Lines and Hoses

Visually inspect for proper installation. Check for chafing, cracks, deterioration and signs of leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Brake Linings/Drums and Brake Pads/Discs

Check the brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. Check the pads for excessive wear and the discs for runout, excessive wear and fluid leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Differential Oil

Replace at specified intervals. When performing inspections, check each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

Drive Belts

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

Drive Shaft Boots

Check the drive shaft boots and clamps for cracks, deterioration and damage. Replace any deteriorated or damaged parts and, if necessary, repack the grease. A qualified technician should perform these operations.

Engine Air Filter

Replace at specified intervals. When performing inspections, check for damage, excessive wear and oiliness, and replace if necessary.

Engine Coolant

Drain and flush the cooling system and refill with an ethylene-glycol type coolant. Inspect the radiator, condenser and/or intercooler for leaves, dirt and insects and clean if necessary. Inspect hoses and connections for corrosion and leaks. Tighten connections and replace parts as necessary. A qualified technician should perform these operations.

Note: Your Scion is equipped with Genuine Toyota Super Long-Life Coolant. The replacement intervals for engine coolant recommended in this booklet are based on replacement with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids). If another type of ethylene-glycol coolant is used, replacement intervals may be different.

Engine Oil and Oil Filter

Replace the oil filter and drain and refill the engine oil at specified intervals. For recommended oil grade and viscosity, refer to the *Owner's Manual*.

Engine Valve Clearance

Inspect for excessive lifter noise and engine vibration and adjust if necessary. A qualified technician should perform this operation.

Exhaust Pipes and Mountings

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses

Visually inspect for corrosion, damage, cracks and loose or leaking connections. Tighten connections or replace parts as necessary.

Fuel Tank Cap Gasket

Visually inspect for cracks, deterioration and damage and replace if necessary.

Nuts and Bolts on Chassis and Body

Re-tighten the seat-mounting bolts and front/rear suspension member retaining bolts to specified torque.

Radiator Core and Condenser

Inspect for damage, debris, dirt, insects and signs of leakage. Have any problem repaired by a qualified technician.

Spark Plugs

Replace at specified intervals. Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

Steering Gear Box

Inspect for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

Steering Linkage and Boots

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration, cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

Tire Rotation

Tires should be rotated according to the instructions in the *Owner's Manual*. When rotating tires, check for damage and uneven wear. Replace if necessary.

Model _____

In-service date _____

Selling dealership _____

Key number _____

Body style _____

Mileage at delivery _____

Selling dealership phone number _____

Vehicle Identification Number _____

[illegible]

[illegible]

[illegible]

You Are Entitled to Three Complimentary Oil Changes for Your 2006 Scion



These oil changes must be obtained within 3 years or 36,000 miles (whichever occurs first) of your vehicle's original in-service date. To set up an appointment for a complimentary oil change, call your Scion dealership or participating Toyota dealership. See page 2 to determine how often you should change your vehicle's oil.

After performing a complimentary oil change, the dealership will complete one of the boxes below. Remember that changing the oil is just one of the maintenance services that should be performed regularly on your Scion. Make sure that all the other services recommended in this booklet are performed on your car as well.

Please note that you are responsible for the cost of any other services performed at the time of your complimentary oil changes, including other maintenance services listed in the scheduled maintenance log.

Complimentary Oil Change #1

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

Complimentary Oil Change #2

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

Complimentary Oil Change #3

DEALER SERVICE VERIFICATION:

DATE:

MILEAGE:

