

OIL FILTER
COMPONENTS

LU

OIL FILLER CAP

ENGINE UNDER COVER

5.0 (51, 44 in.*lbf)

17.2 (175, 13)

OIL FILTER

● GASKET

37.5 (382, 28)

DRAIN PLUG

N*m (kgf*cm, ft.*lbf) : Specified torque

● Non-reusable part


REPLACEMENT

CAUTION:

- Prolonged and repeated contact with mineral oil will result in the loss of natural oil from the skin, leading to dryness, irritation and dermatitis. In addition, used engine oil contains potentially harmful contaminants which may cause skin cancer.
- Wear protective clothing and gloves. Avoid contact with used oil. If contact occurs, wash the area thoroughly with soap and waterless hand cleaner. Never use gasoline, thinners, or solvents to wash the skin.
- In order to protect the environment, dispose of used oil and used oil filters at designated disposal sites only.

1. DRAIN ENGINE OIL

- Remove the oil filler cap.
- Remove the oil drain plug and drain the oil into a container.

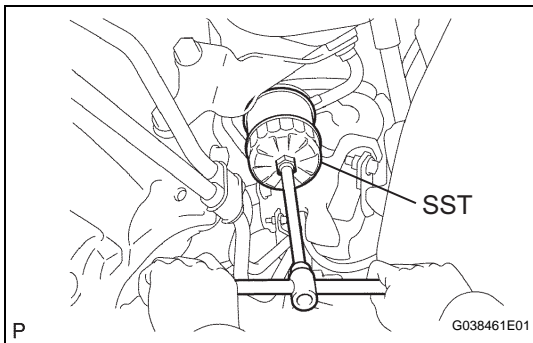


2. REMOVE OIL FILTER

- Using SST, remove the oil filter.
SST 09228-06501

3. INSTALL OIL FILTER

- Check and clean the oil filter installation surface.
- Apply clean engine oil to the gasket of a new oil filter.

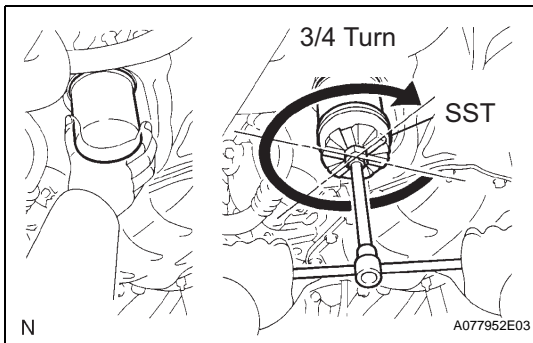

- Lightly screw the oil filter into place by hand. Tighten it until the gasket contacts the seat.

- Using SST, tighten the oil filter.

SST 09228-06501

- Depending on the work space available, choose from the following.

If enough space is available, use a torque wrench to tighten the oil filter.

Torque: 17.2 N*m (175 kgf*cm, 13 ft.*lbf)

If enough space is not available to use a torque wrench, tighten the oil filter a 3/4 turn by hand or use a common wrench.

4. ADD ENGINE OIL

- Clean and install the oil drain plug with a new gasket.

Torque: 37.5 N*m (382 kgf*cm, 28 ft.*lbf)

- Add fresh engine oil.

Standard capacity

Item	Specified Condition
Drain and refill with oil filter change	3.7 liters (3.9 US qts, 3.3 Imp. qts)
Drain and refill without oil filter change	3.4 liters (3.6 US qts, 3.0 Imp. qts)

Item	Specified Condition
Dry fill	4.1 liters (4.3 US qts, 3.6 Imp. qts)

(c) Install the oil filler cap.

5. CHECK FOR ENGINE OIL LEAKS