


INSTALLATION

1. INSTALL STARTER ASSEMBLY

- (a) Install the starter with the 2 bolts.
Torque: 37 N*m (377 kgf*cm, 27 ft.*lbf)
- (b) Install the starter wire to terminal 30 with the nut.
Torque: 9.8 N*m (100 kgf*cm, 7 ft.*lbf)
- (c) Connect the starter connector.

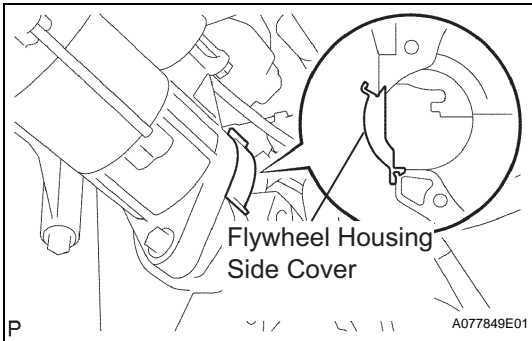

2. INSTALL FLYWHEEL HOUSING SIDE COVER

NOTICE:

- Insert the claw until it makes a "click" sound when installing the flywheel housing side cover.
- If the claw is deformed, replace the flywheel housing side cover.

3. INSTALL ENGINE UNDER COVER RH

- (a) Install the cover with the 4 bolts.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

4. INSTALL ENGINE UNDER COVER LH

- (a) Install the cover with the nut and 4 bolts.
Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL