





 



 


 
 
 


 
 


 


 








 
 

U340E AUTOMATIC TRANSMISSION



 

 
 






SST

	09023-12701	Union Nut Wrench 17mm	-
	09221-25026	Piston Pin Remover & Replacer	-
	(09221-00071)	Guide A	-
	09223-15030	Oil Seal & Bearing Replacer	-
	09308-00010	Oil Seal Puller	-
	09308-10010	Oil Seal Puller	-
	09316-60011	Transmission & Transfer Bearing Replacer	-
	(09316-00011)	Replacer Pipe	-
	09320-89010	Transfer Clutch Spring Compressor	-
	09350-32014	TOYOTA Automatic Transmission Tool Set	-
	(09351-32010)	One-way Clutch Test Tool	-









 
 


	(09351-32020)	Stator Stopper	-
	09350-36010	TOYOTA Automatic Transmission Tool Set	-
	09387-00020	Direct Clutch Wrench	-
	09387-00041	Bearing Puller Assembly	-
	(09387-01021)	Claw No.2	-
	(09387-02010)	Oil Seal Replacer	-
	(09387-02020)	One-way Clutch Test Tool Set	-
	09387-00060	Second Brake Wrench	-
	09387-00070	First & Reverse Brake Wrench	-
	09387-00120	Counter Drive Gear Nut Wrench	-
	09527-17011	Rear Axle Shaft Bearing Remover	-
	09554-14010	Differential Oil Seal Replacer	-




 



PP

	09564-32011	Differential Preload Adaptor	-
	09612-65014	Steering Worm Bearing Puller	-
	(09612-01010)	Claw A	-
	(09612-01040)	Claw D	-
	09726-27012	Front Suspension Arm Bushing Remover & Replacer	-
	(09726-02041)	Replacer	-
	09726-40010	Lower Control Shaft Bearing Replacer	-
	09930-00010	Drive Shaft Nut Chisel	-
	09950-40011	Puller B Set	-
	(09951-04010)	Hanger 150	-
	(09952-04010)	Slide Arm	-
	(09953-04020)	Center Bolt 150	-

	(09953-04030)	Center Bolt 200	-
	(09954-04010)	Arm 25	-
	(09955-04061)	Claw No.6	-
	(09957-04010)	Attachment	-
	(09958-04011)	Holder	-
	09950-60010	Replacer Set	-
	(09951-00190)	Replacer 19	-
	(09951-00220)	Replacer 22	-
	(09951-00320)	Replacer 32	-
	(09951-00350)	Replacer 35	-
	(09951-00390)	Replacer 39	-
	(09951-00400)	Replacer 40	-

PP

	(09951-00430)	Replacer 43	-
	(09951-00460)	Replacer 46	-
	(09951-00480)	Replacer 48	-
	(09951-00530)	Replacer 53	-
	(09951-00550)	Replacer 55	-
	(09951-00610)	Replacer 61	-
	(09951-00650)	Replacer 65	-
	(09951-00720)	Replacer 72	-
	(09952-06010)	Adapter	-
	09950-60020	Replacer Set No.2	-
	(09951-00680)	Replacer 68	-
	(09951-00750)	Replacer 75	-

	(09951-00790)	Replacer 79	-
	(09951-00890)	Replacer 89	-
	(09951-07150)	Handle 150	-
	09950-70010	Handle Set	-
	(09951-07100)	Handle 100	-
	(09951-07150)	Handle 150	-
	(09951-07200)	Handle 200	-