

TORQUE SPECIFICATIONS

Part Tightened	N*m	kgf*cm	ft.*lbf
Transmission control cable assembly x Body	5.0	51	44 in.*lbf
Floor shift shift lever assembly x Floor	12	122	9
Wire harness clamp x Manual transaxle	5.0	51	44 in.*lbf
Ground cable x Engine mounting bracket LH	26	260	19
Air cleaner bracket x Manual transaxle	19	195	14
Clutch release cylinder x Flexible hose tube	15	155	11
No. 1 engine hanger x Engine	40	408	408
Front suspension member reinforcement set bolt	47	479	35
Front suspension crossmember x body	Bolt A	70	52
	Bolt B	116	86
Engine mounting bracket LH x Manual transaxle	64	653	47
Rear engine mounting bracket x Manual transaxle	Bolt A	64	47
	Bolt B	18	13
Engine mounting insulator LH x Engine mounting bracket LH	49	500	36
Rear engine mounting insulator x Rear engine mounting bracket	64	653	47
Starter assembly x Manual transaxle	37	380	27
Starter assembly x Starter wire	9.8	100	87 in.*lbf
Manual transaxle x Engine	33	340	24
Filler plug x Manual transaxle	39	400	29
Drain plug x Manual transaxle	39	400	29
Bearing lock plate x Front transaxle case	11	115	8.3
No. 1 oil receiver pipe x Manual transmission case	17	175	13
No. 2 oil receiver pipe x Manual transmission case	17	17	13
Reverse restrict pin plug x Manual transmission case	13	130	9.3
Manual transaxle case receiver x Manual transmission case	11	115	8.3
No. 1 gear shift fork x No. 1 gear shift fork shaft	16	160	12
No. 2 gear shift fork x No. 2 gear shift fork shaft	16	160	12
No. 1 gear shift head x No. 2 gear shift fork shaft	16	160	12
Reverse shift arm bracket assembly x Front transaxle case	17	175	13
Manual transmission case x Front transaxle case	bolt	29	22
	nut	29	22
Reverse idler gear shaft bolt x Manual transmission case	29	300	22
No. 2 lock ball assembly x Manual transmission case	39	400	29
Shift detent ball x Manual transmission case	22	224	16
Shift detent ball x Front transaxle case	22	224	16
Bearing retainer rear x Manual transmission case	27	280	20
No. 3 gear shift fork x Gear shift fork shaft	16	160	12
Manual transmission output shaft rear set nut x output shaft	118	1200	87
Manual transmission case cover x Manual transmission case	18	185	14
Control shaft cover x Manual transmission case	20	200	14
No. 1 lock ball assembly x Manual transmission case	29	300	22

SS

Selecting bell crank assembly x Manual transmission case	25	250	18
Floor shift control lever housing support bracket x Front transaxle case	18	188	14
Back-up light switch assembly x Manual transmission case	40	410	30
Speedometer driven hole cover sub-assembly x Manual transaxle	11	115	8.3
Release fork support x Front transaxle case	37	375	25
Clutch release cylinder assembly x Manual transaxle	12	120	9
Manual transmission filler plug x Manual transaxle	39	29	29
Drain plug sub-assembly x Manual transmission case	39	29	29
No. 2 electing bell crank plate washer x Selecting bell crank	12	120	9
Front defferential ring gear x Front differential case	77	790	57