
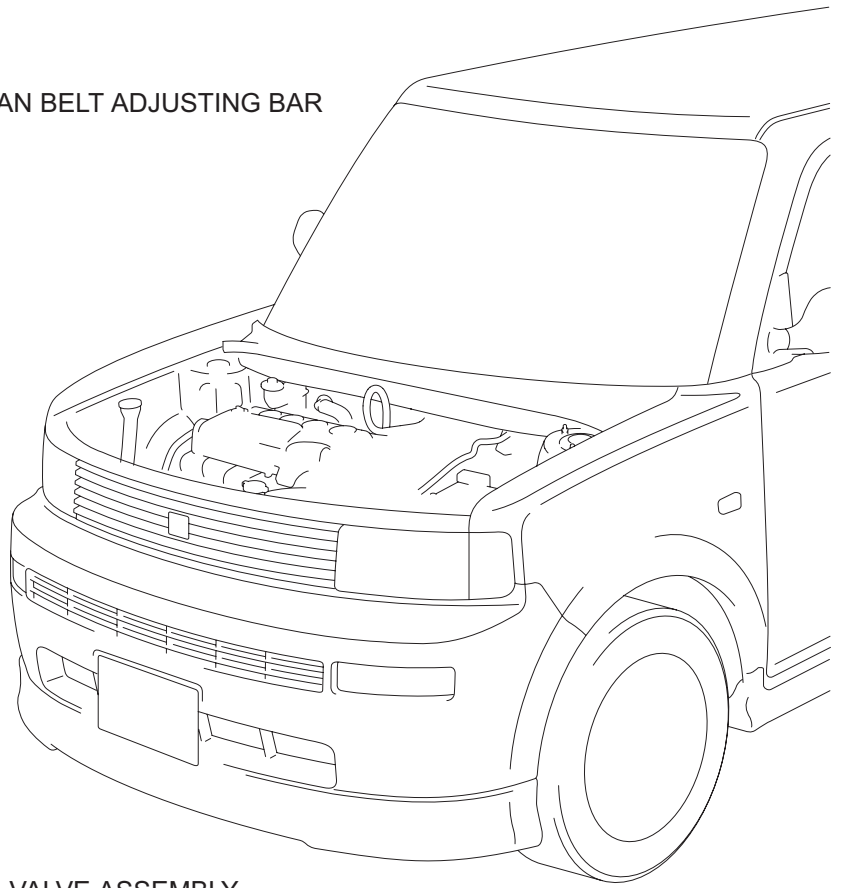


# CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY COMPONENTS

ES

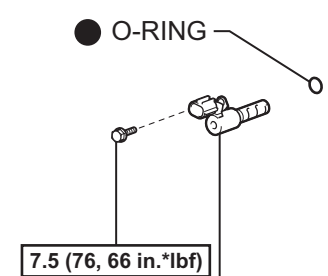

CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY

**N\*m (kgf\*cm, ft.\*lbf)** : Specified torque

● Non-reusable part

## REMOVAL


1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE FAN BELT ADJUSTING BAR**

(a) Remove the bolt, nut and adjusting bar.

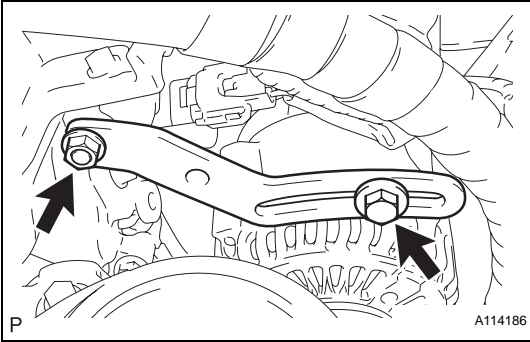

3. **REMOVE CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY**

(a) Disconnect the oil control valve connector.

(b) Remove the bolt and oil control valve.

(c) Remove the O-ring from the oil control valve.

