


**NOTICE:**


The terms cold and hot refer to the temperature of the sensors. Cold means approximately -10 to 50°C (14 to 122°F). Hot means approximately 50 to 100°C (122 to 212°F).

**INSTALLATION****1. INSTALL CAMSHAFT POSITION SENSOR**

- (a) Install the sensor with the bolt.  
**Torque: 8.0 N\*m (82 kgf\*cm, 71 in.\*lbf)**

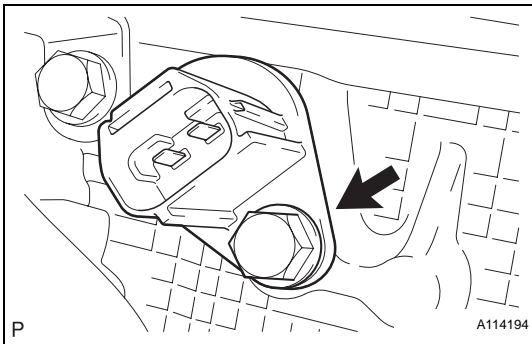

- (b) Connect the sensor connector.

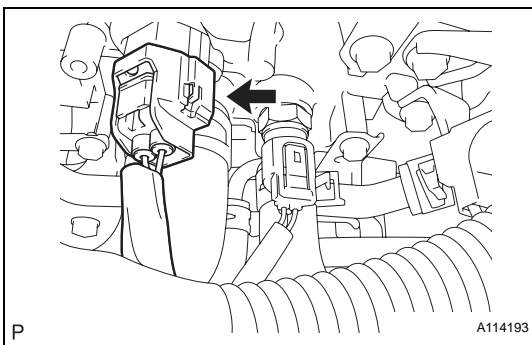**2. CONNECT ENGINE WIRE**

- (a) Connect the 2 clamps of the engine wire.

**3. INSTALL AIR CLEANER ASSEMBLY (See page [ES-348](#))****4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**