



INSTALLATION

1. **INSTALL CRANKSHAFT POSITION SENSOR**
 - (a) Install the sensor with the bolt.
Torque: 7.5 N*m (76 kgf*cm, 66 in.*lbf)
 - (b) Connect the sensor connector.
2. **INSTALL ENGINE UNDER COVER RH**
3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**