


ENGINE COOLANT TEMPERATURE SENSOR

COMPONENTS

ES

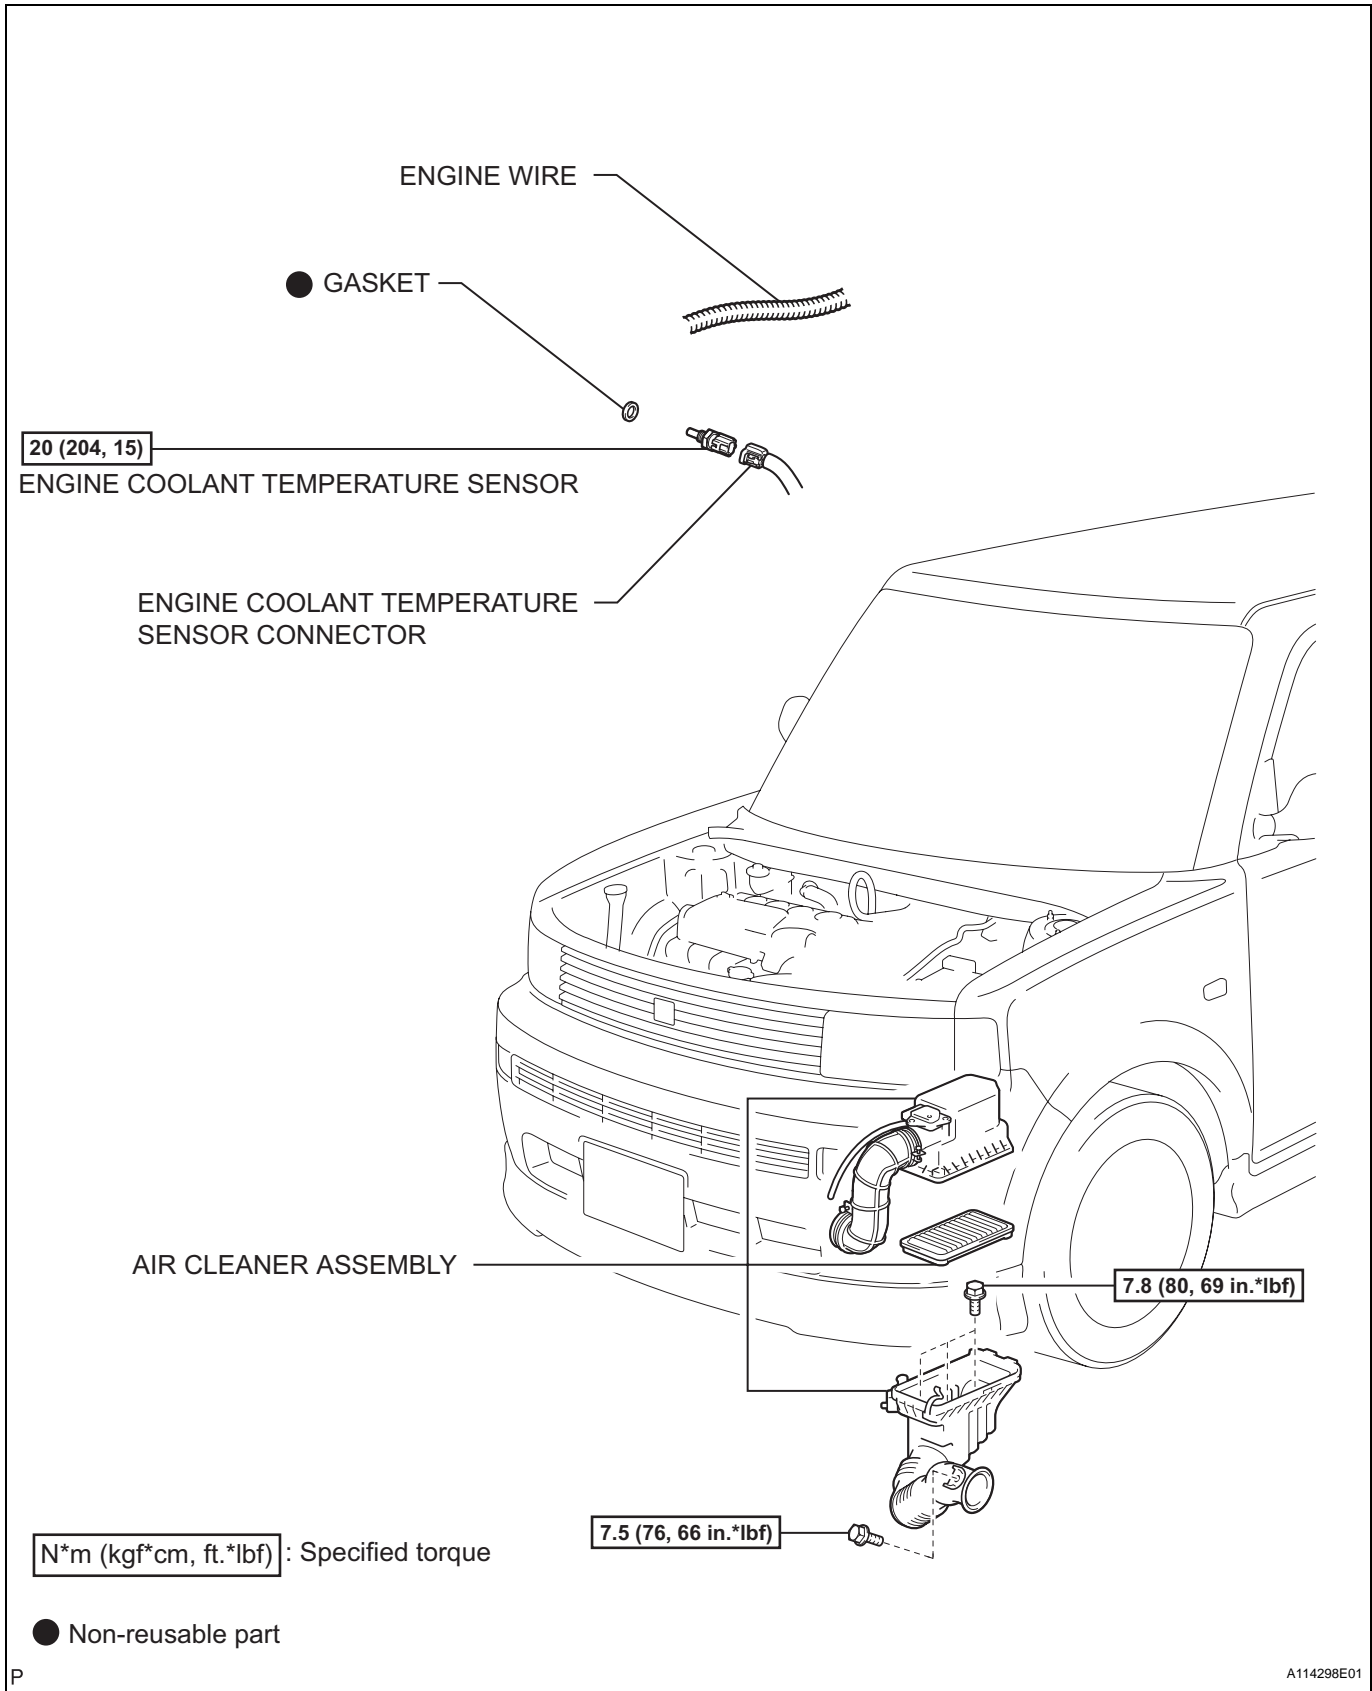

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE AIR CLEANER ASSEMBLY** (See page [ES-346](#))


3. **DISCONNECT ENGINE WIRE**

(a) Disconnect the 2 clamps of the engine wire.

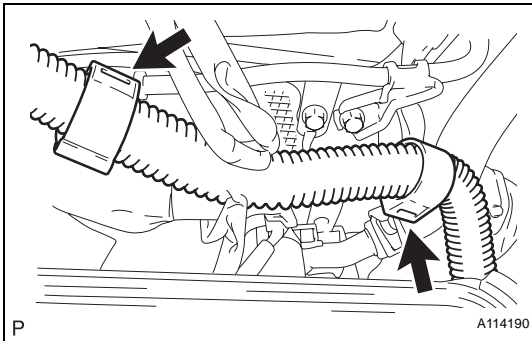

4. **REMOVE ENGINE COOLANT TEMPERATURE SENSOR**

(a) Disconnect the sensor connector.

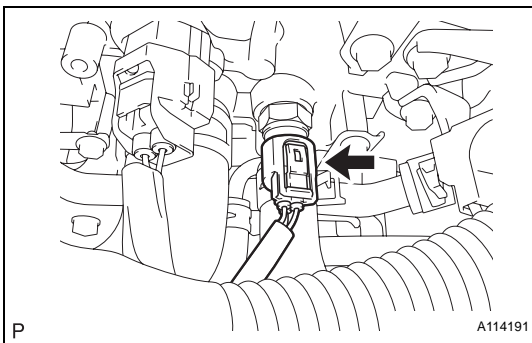

(b) Remove the sensor and gasket.

