

EFI RELAY

ON-VEHICLE INSPECTION

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE EFI RELAY (Marking: EFI)**

- (a) Remove the engine room relay block cover.
- (b) Remove the EFI relay from the engine room relay block.

3. **INSPECT EFI RELAY**

- (a) Measure the resistance of the EFI relay.

Standard resistance

| Tester Connection | Specified Condition |
|-------------------|--|
| 3 - 5 | 10 k Ω or higher |
| 3 - 5 | Below 1 Ω (when battery voltage is applied to terminals 1 and 2) |

If the result is not as specified, replace the EFI relay.

4. **INSTALL EFI RELAY**

5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

