



- (b) Check operation of the purge VSV.
- (1) Check that air does not flow from port E to port F.

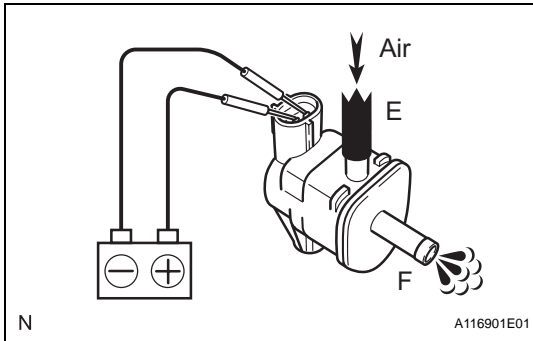


- (2) Apply battery voltage across terminals 1 and 2.
- (3) Check that air flows from port E to port F.
If the result is not as specified, replace the purge VSV.

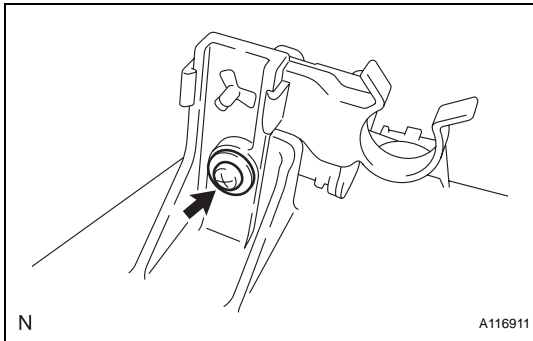

INSTALLATION

1. INSTALL PURGE VSV

- (a) Install the purge VSV with the screw.

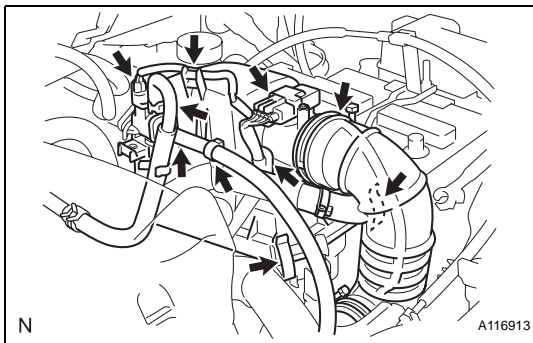

2. INSTALL AIR CLEANER CAP

- (a) Install the air cleaner cap and tighten the hose clamp.
- (b) Lock the 2 clamps holding the air cleaner cap to the air cleaner case.
- (c) Connect the purge line hose to the hose clamp.
- (d) Connect the 2 purge line hoses.
- (e) Connect the 2 wire harness clamps to the air cleaner cap.
- (f) Connect the purge VSV connector.
- (g) Connect the MAF meter connector.

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL