

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.



2. **REMOVE HEATED OXYGEN SENSOR**

(a) Disconnect the sensor connector.



(b) Using SST, remove the sensor.

SST 09224-00010

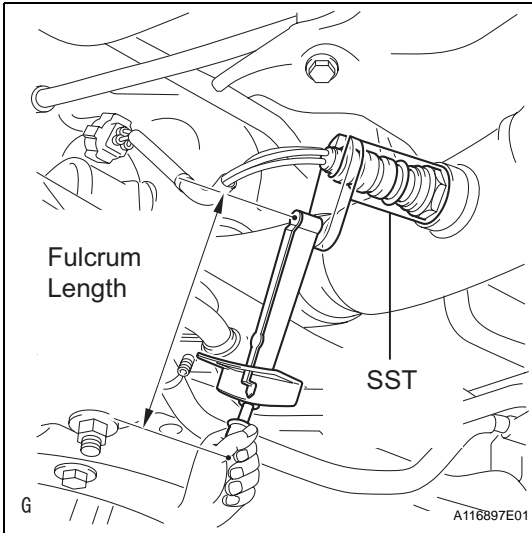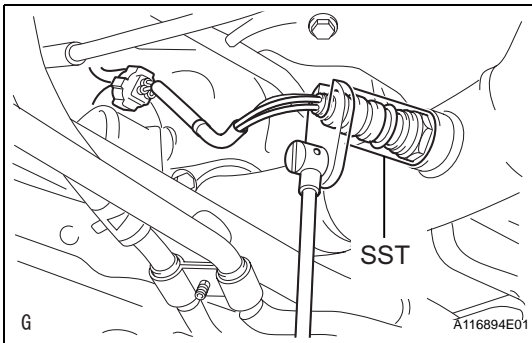

INSTALLATION

1. **INSTALL HEATED OXYGEN SENSOR**

(a) Using SST, install the sensor.

SST 09224-00010

Torque: 44 N*m (449 kgf*cm, 32 ft.*lbf) for use with SST

40 N*m (408 kgf*cm, 30 ft.*lbf) for use without SST

HINT:

Use a torque wrench with a fulcrum length of 30 cm (11.81 in.).

(b) Connect the sensor connector.

2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

3. **CHECK FOR EXHAUST GAS LEAKS**

If gas is leaking, tighten the problem areas to stop the leak. Replace damaged parts as necessary.