



2. REMOVE NO. 5 CENTER CLUSTER MODULE KNOB

- (a) Detach the 3 claws and remove the center cluster module knob.

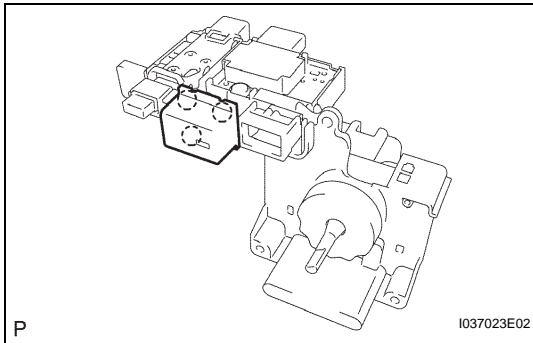


3. REMOVE NO. 6 CENTER CLUSTER MODULE KNOB

- (a) Detach the 3 claws and remove the center cluster module knob.

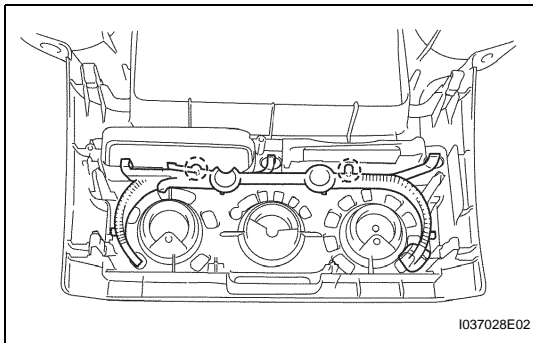

4. REMOVE CENTER CLUSTER MODULE INDICATOR LENS ASSEMBLY

- (a) Detach the 2 claws, and then remove the center cluster module indicator lens.

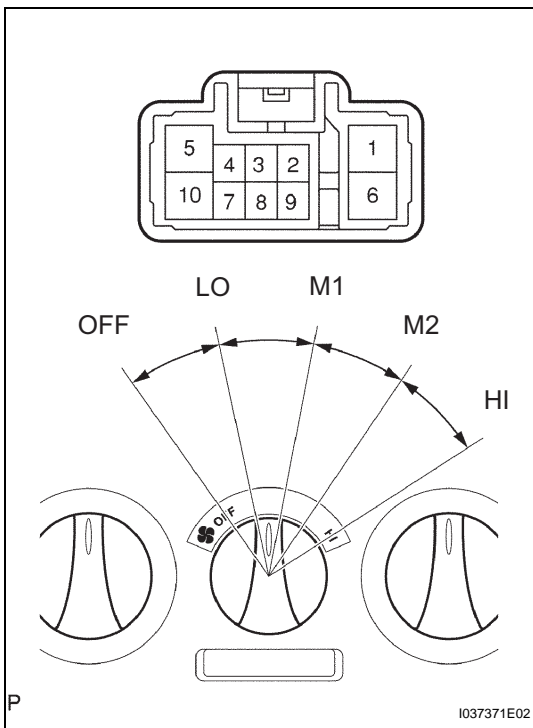

INSPECTION

1. INSPECT CENTER CLUSTER MODULE SWITCH

- (a) Inspect the blower switch resistance.
 - (1) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - 2 - 6 - 7 - 10	OFF	10 kΩ or higher
1 - 2	LO	Below 1 Ω
1 - 2 - 7	LO to M1	Below 1 Ω
1 - 2 - 7	M1	Below 1 Ω
1 - 2 - 7 - 6	M1 to M2	Below 1 Ω
1 - 2 - 6	M2	Below 1 Ω
1 - 2 - 6 - 10	M2 to HI	Below 1 Ω
1 - 2 - 10	HI	Below 1 Ω

If the result is not as specified, replace the center cluster module switch.

- (b) Inspect the illumination operation. Connect the positive (+) lead from the battery to terminal 4 and negative (-) lead to terminal 5, then check that the illuminations come on.

If there is a bulb that does not come on, replace the bulb.




- (c) Inspect the A/C switch resistance.
 (1) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
3 - 2	ON	Below 1 Ω
3 - 2	OFF	10 k Ω or higher

If the result is not as specified, replace the A/C switch.

- (d) Inspect the indicator operation.
 (1) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 1.
 (2) Push the A/C switch and then check that the indicator comes on.
 If the result is not as specified, replace the A/C switch.

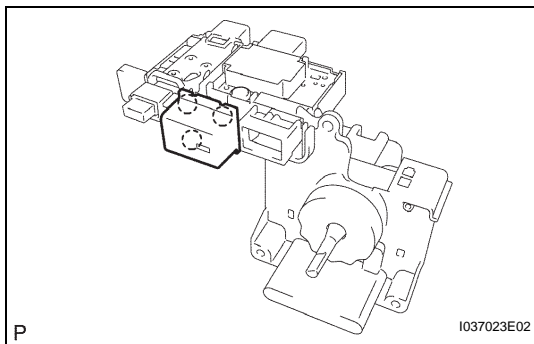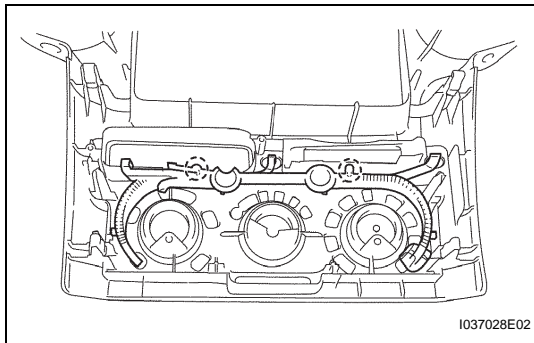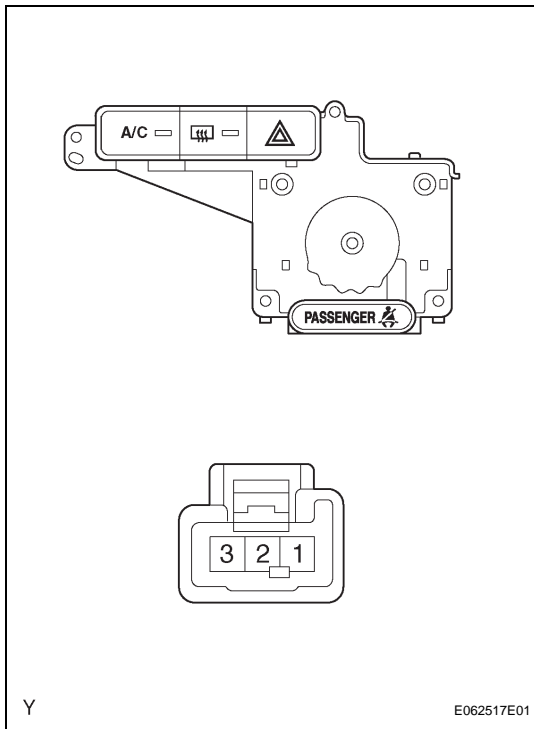


REASSEMBLY

1. INSTALL CENTER CLUSTER MODULE INDICATOR LENS ASSEMBLY

- (a) Attach the 2 claws to install the center cluster module indicator lens.


2. INSTALL NO. 6 CENTER CLUSTER MODULE KNOB

- (a) Attach the 3 claws to install the center cluster module knob.

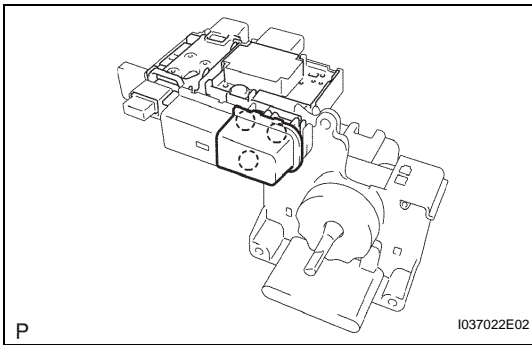


3. INSTALL NO. 5 CENTER CLUSTER MODULE KNOB

- (a) Attach the 3 claws to install the center cluster module knob.

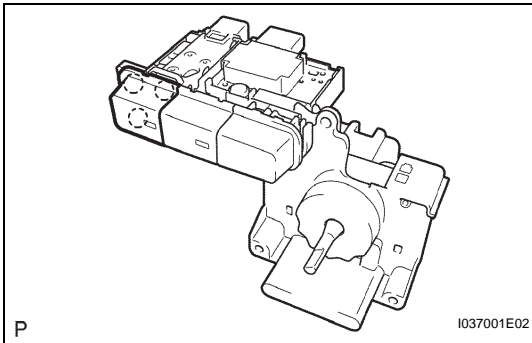

4. INSTALL NO. 7 CENTER CLUSTER MODULE KNOB


- (a) Attach the 3 claws to install the center cluster module knob.

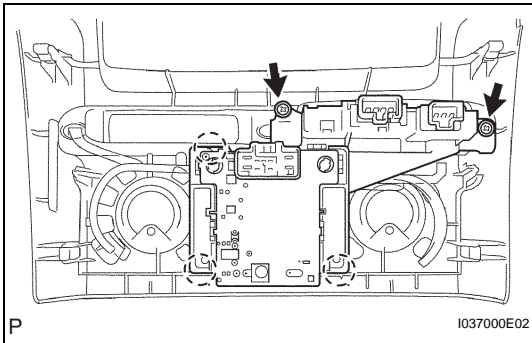

INSTALLATION


1. INSTALL CENTER CLUSTER MODULE SWITCH

- (a) Attach the 3 claws to install the center cluster module switch.
- (b) Install the 2 screws.

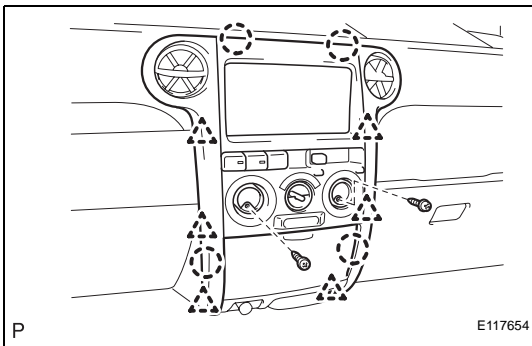

2. INSTALL INSTRUMENT CLUSTER FINISH PANEL CENTER

- (a) Connect the connectors.
- (b) Attach the 6 clips and 4 claws to install the instrument cluster finish panel.
- (c) Install the 2 screws.

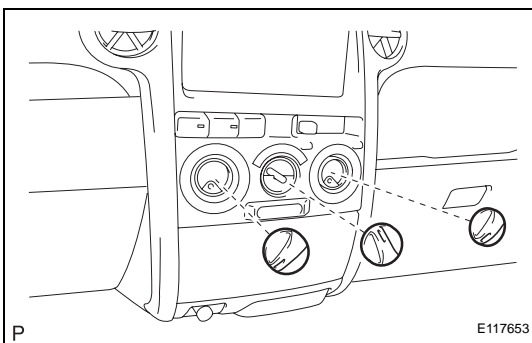

3. INSTALL HEATER CONTROL KNOB

- (a) Install the 3 heater control knobs.

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL