




HEATER SWITCH

COMPONENTS

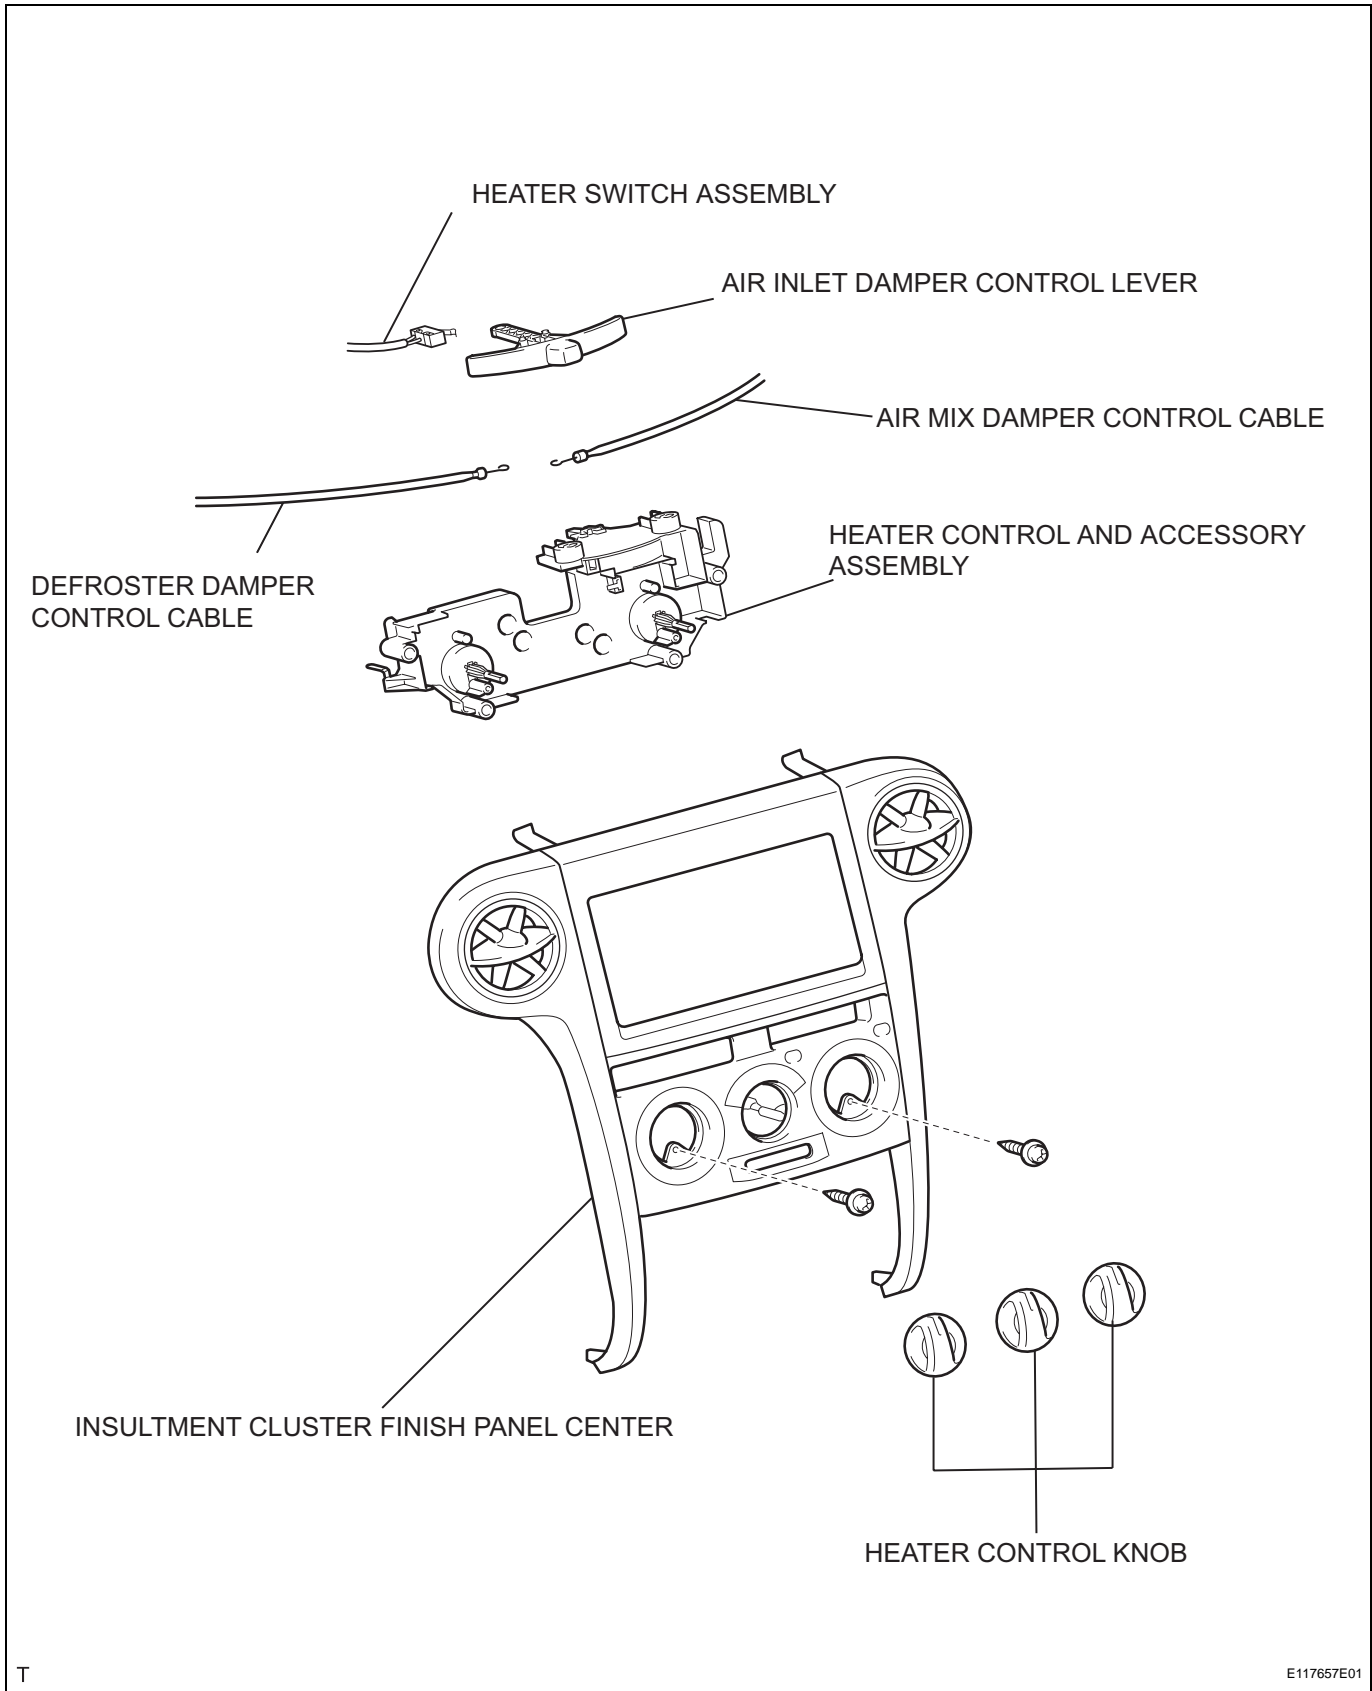

REMOVAL

1. **REMOVE HEATER CONTROL AND ACCESSORY ASSEMBLY**
 - (a) Remove the heater control and accessory (see page AC-99).
2. **REMOVE HEATER SWITCH ASSEMBLY**
 - (a) Remove the 2 screws and heater switch.

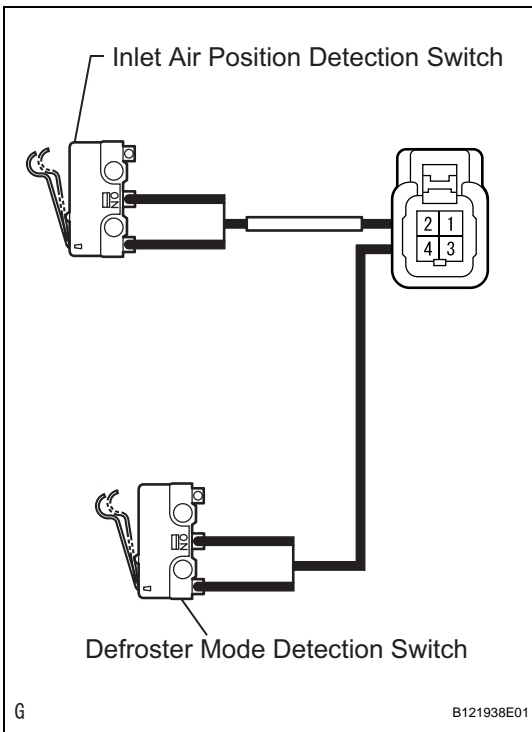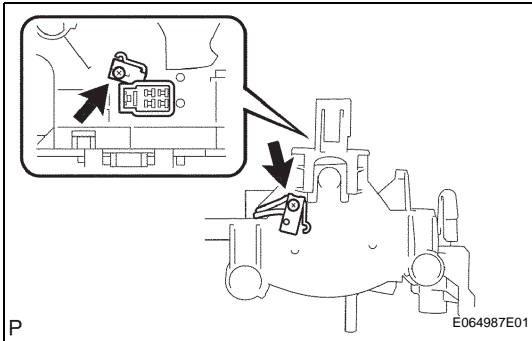

INSPECTION

1. **INSPECT HEATER SWITCH ASSEMBLY**
 - (a) Measure the resistance of the switch.
- Standard resistance**

| Tester Connection | Switch Condition | Specified Condition |
|-------------------------------------|------------------|------------------------|
| Inlet Air Position Detection Switch | 1 - 2 | OFF 10 kΩ or higher |
| | 1 - 2 | ON Below 1 Ω |
| Defroster Mode Detection Switch | 3 - 4 | OFF 10 kΩ or higher |
| | 3 - 4 | ON Below 1 Ω |

If the result is not as specified, replace the heater switch.

INSTALLATION

1. **INSTALL HEATER SWITCH ASSEMBLY**
 - (a) Install the heater switch with the 2 screws.
2. **INSTALL HEATER CONTROL AND ACCESSORY ASSEMBLY**
 - (a) Install the heater control and accessory (see page AC-100).

