




BLOWER RESISTOR

COMPONENTS

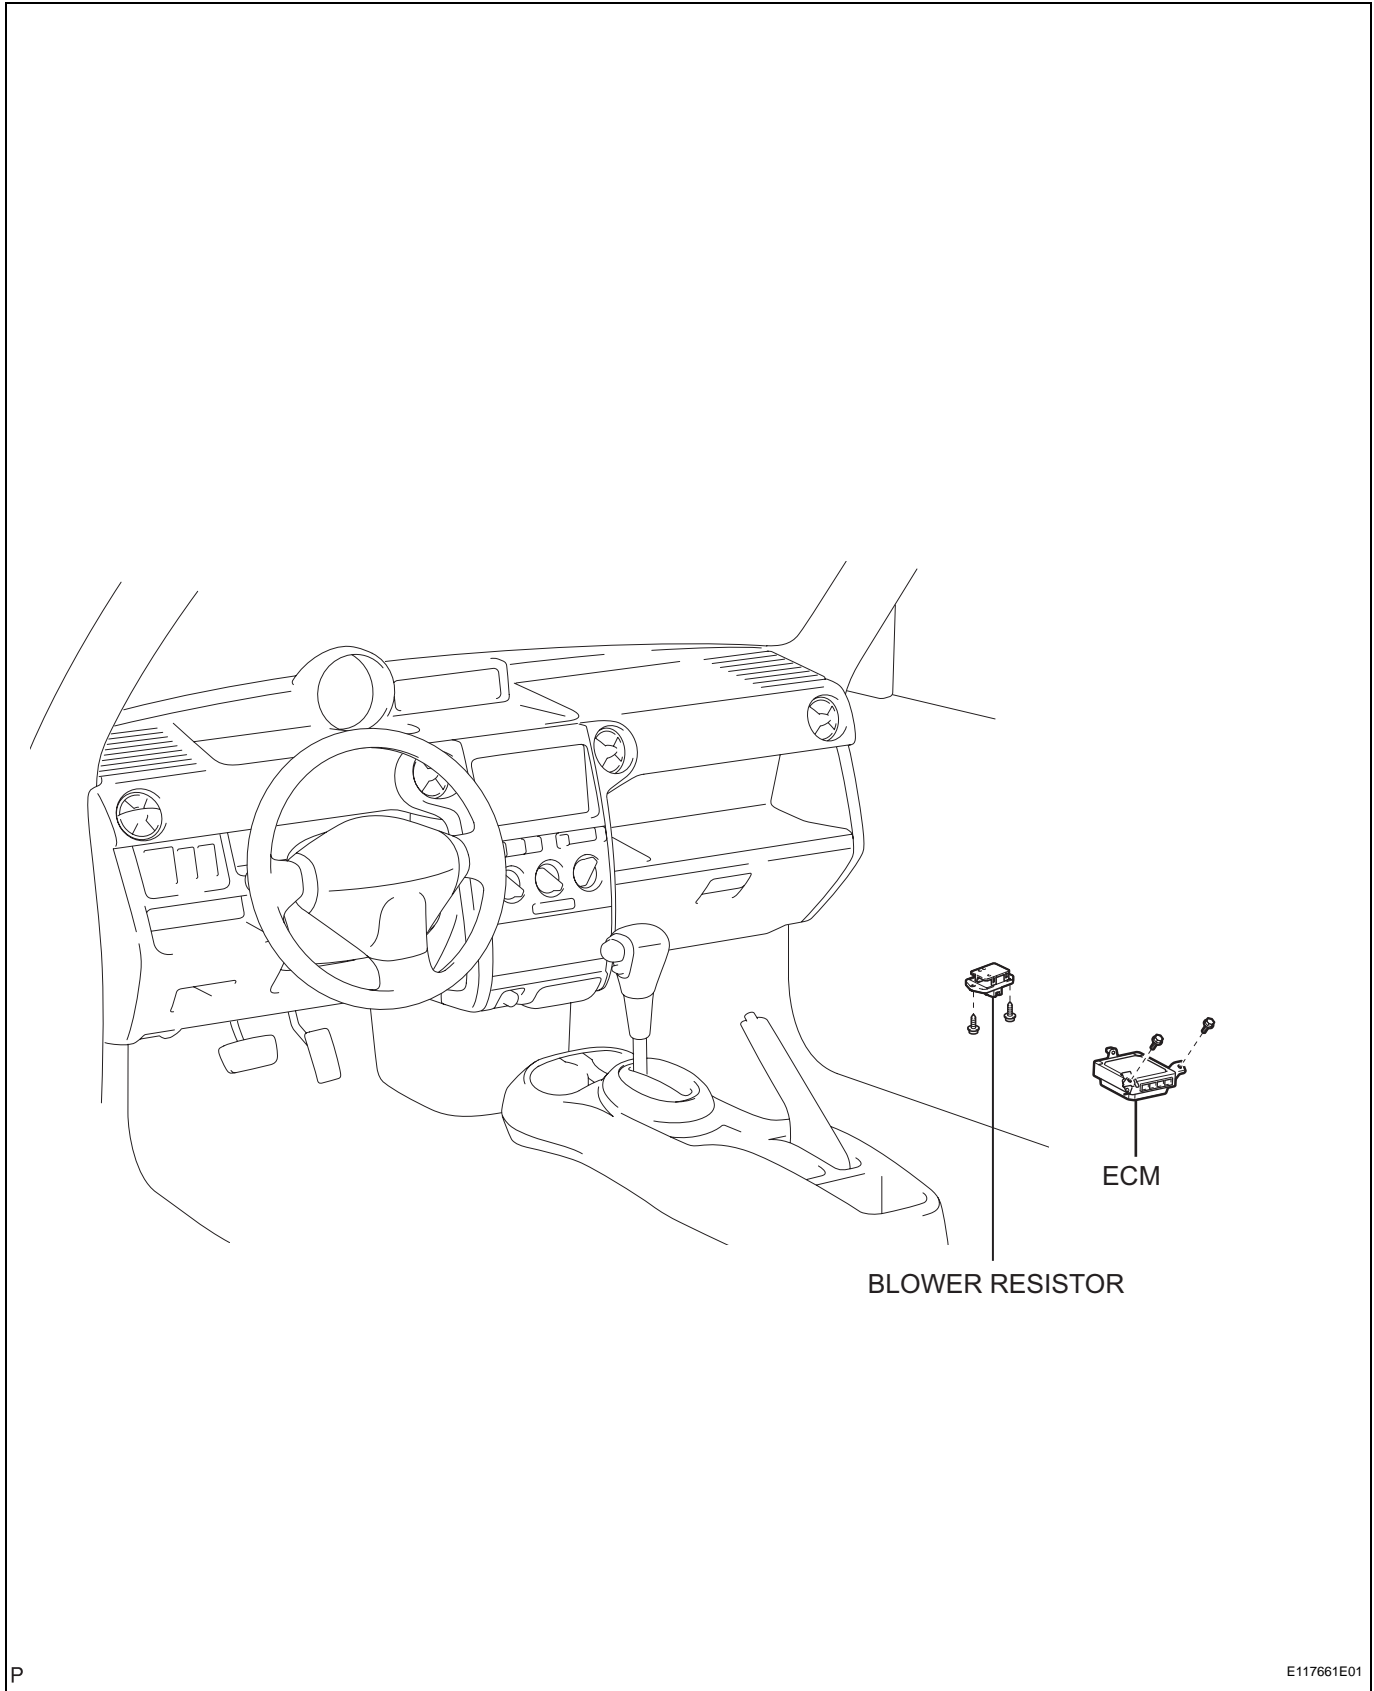

REMOVAL

1. REMOVE ECM COVER (See page [AC-52](#))
2. REMOVE ECM (See page [AC-52](#))
3. REMOVE BLOWER RESISTOR
 - (a) Disconnect the connector.
 - (b) Remove the 2 screws and blower resistor.

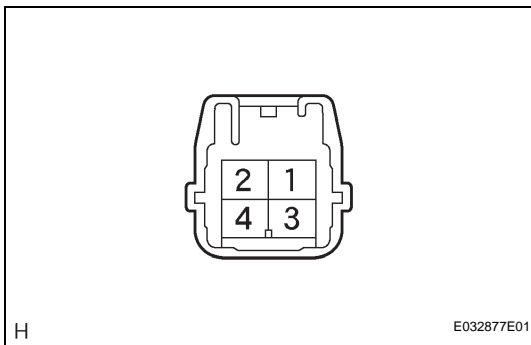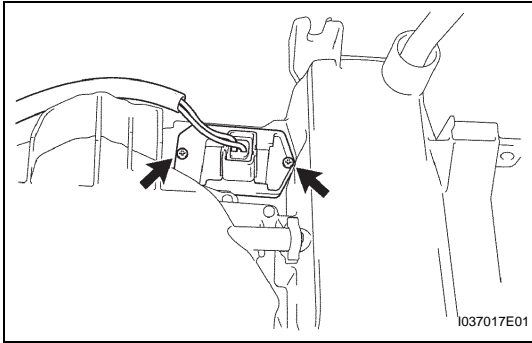

INSPECTION

1. INSPECT BLOWER RESISTOR
 - (a) Measure the resistance of the resistor.

Standard resistance

Tester Connection	Specified Condition
1 - 2	1.386 to 1.595 Ω
1 - 3	0.363 to 0.418 Ω
1 - 4	2.595 to 2.986 Ω

If the result is not as specified, replace the blower resistor.

INSTALLATION

1. INSTALL BLOWER RESISTOR
 - (a) Install the blower resistor with the 2 screws.
 - (b) Connect the connector.
2. INSTALL ECM (See page [AC-60](#))
3. INSTALL ECM COVER (See page [AC-60](#))

