

## REMOVAL



1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


### CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. DRAIN ENGINE COOLANT
3. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM (See page AC-45)
4. DISCONNECT SUCTION HOSE SUB-ASSEMBLY (See page AC-51)
5. DISCONNECT LIQUID TUBE SUB-ASSEMBLY (See page AC-52)
6. DISCONNECT HEATER WATER INLET HOSE
  - (a) Using pliers, grip the claw of the clip and slide the clip to disconnect the heater water hose.
7. DISCONNECT HEATER WATER OUTLET HOSE
 


HINT:  
Use the same procedures described for the inlet hose.
8. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY
  - (a) Remove the instrument panel (see page IP-4).
9. REMOVE LOWER INSTRUMENT PANEL ASSEMBLY
  - (a) Remove the instrument panel (see page IP-17).
10. REMOVE ECM (See page AC-52)
11. REMOVE AIR CONDITIONING BLOWER ASSEMBLY (See page AC-52)
12. REMOVE AIR CONDITIONING AMPLIFIER ASSEMBLY
13. REMOVE DEFROSTER NOZZLE ASSEMBLY
  - (a) Remove the clip.
  - (b) Detach the 2 claws and remove the defroster nozzle.

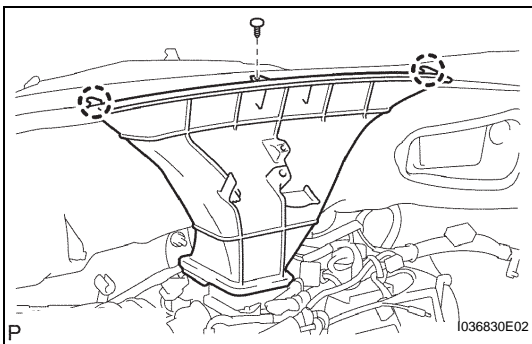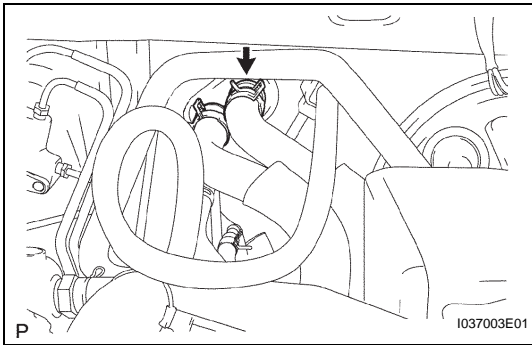

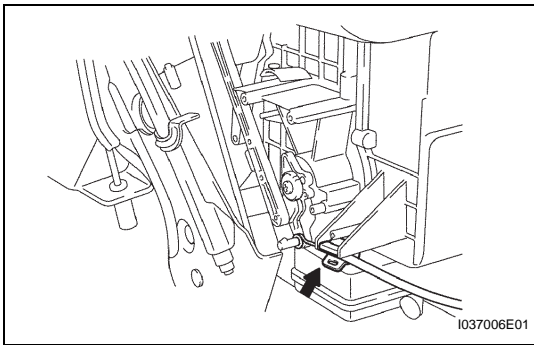


**14. REMOVE DEFROSTER DAMPER CONTROL CABLE SUB-ASSEMBLY**

- (a) Disconnect the outer cable.
- (b) Disconnect the inner cable and remove the defroster damper control cable.

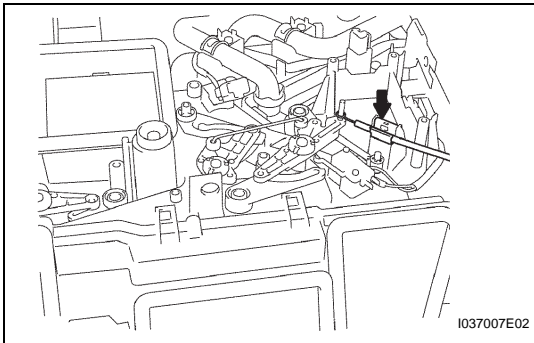


**15. REMOVE AIR MIX DAMPER CONTROL CABLE SUB-ASSEMBLY**

- (a) Disconnect the air outer cable.
- (b) Disconnect the inner cable and remove the air mix damper control cable.

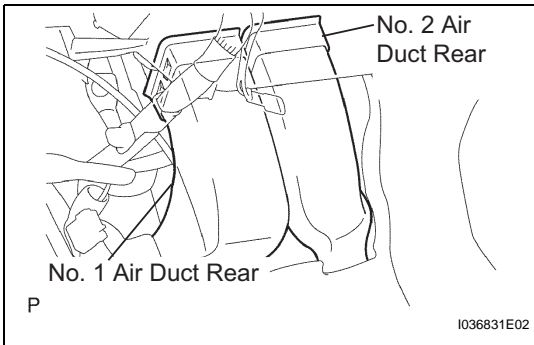


**16. DISCONNECT NO. 2 AIR DUCT REAR**

**17. DISCONNECT NO. 1 AIR DUCT REAR**

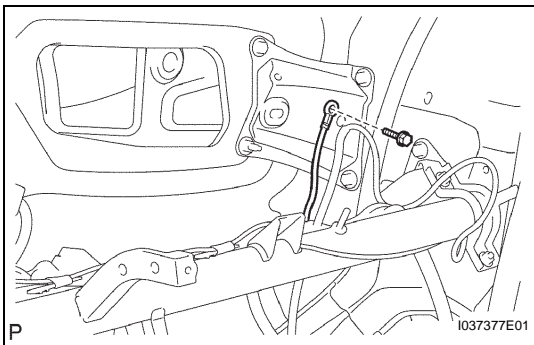

**18. REMOVE HEATER RADIATOR ASSEMBLY**

- (a) Disconnect the 3 connectors.
- (b) Remove the bolt and disconnect the ground wire from the PTC heater.

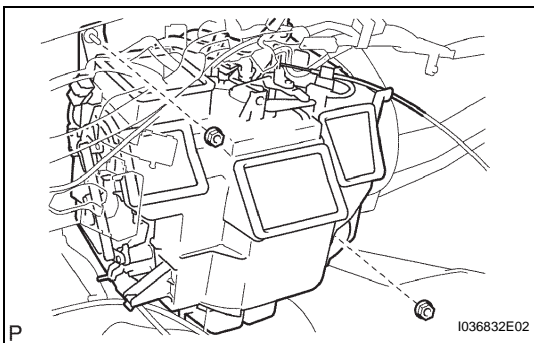


- (c) Remove the 2 nuts and heater radiator.

## DISASSEMBLY


### 1. REMOVE AIR DUCT ASSEMBLY

- (a) Detach the 4 claws and remove the air duct.

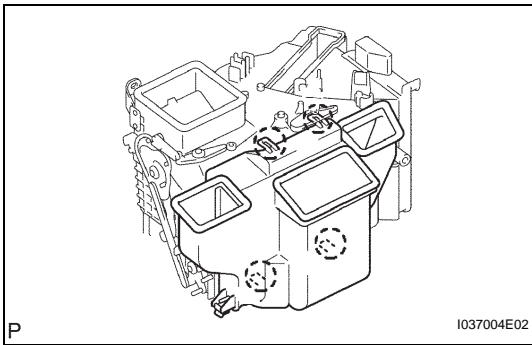


### 2. REMOVE HEATER COVER

- (a) Remove the screw.  
 (b) Detach the 2 claws and remove the heater cover.

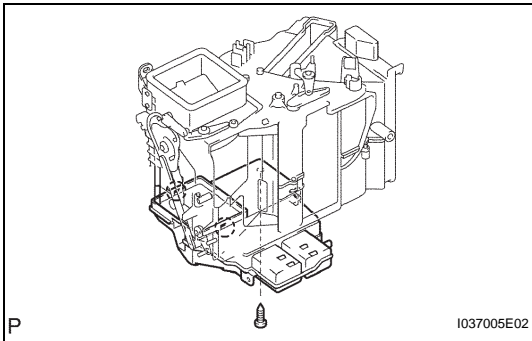


### 3. REMOVE THERMISTOR ASSEMBLY

- (a) Detach the claw and remove the clamp.  
 (b) Remove the thermistor.

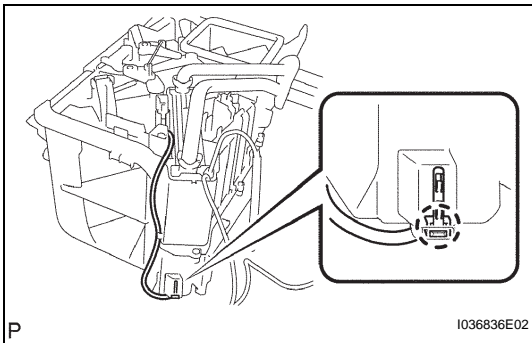

### 4. REMOVE HEATER RADIATOR UNIT SUB-ASSEMBLY

- (a) Remove the 4 screws and No. 2 cooler wiring.

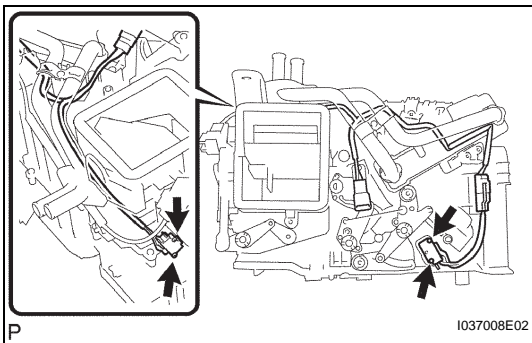

- (b) Remove the screw and bracket.  
 (c) Detach the clamp and disconnect the connector.  
 (d) Remove the heater radiator unit.

