
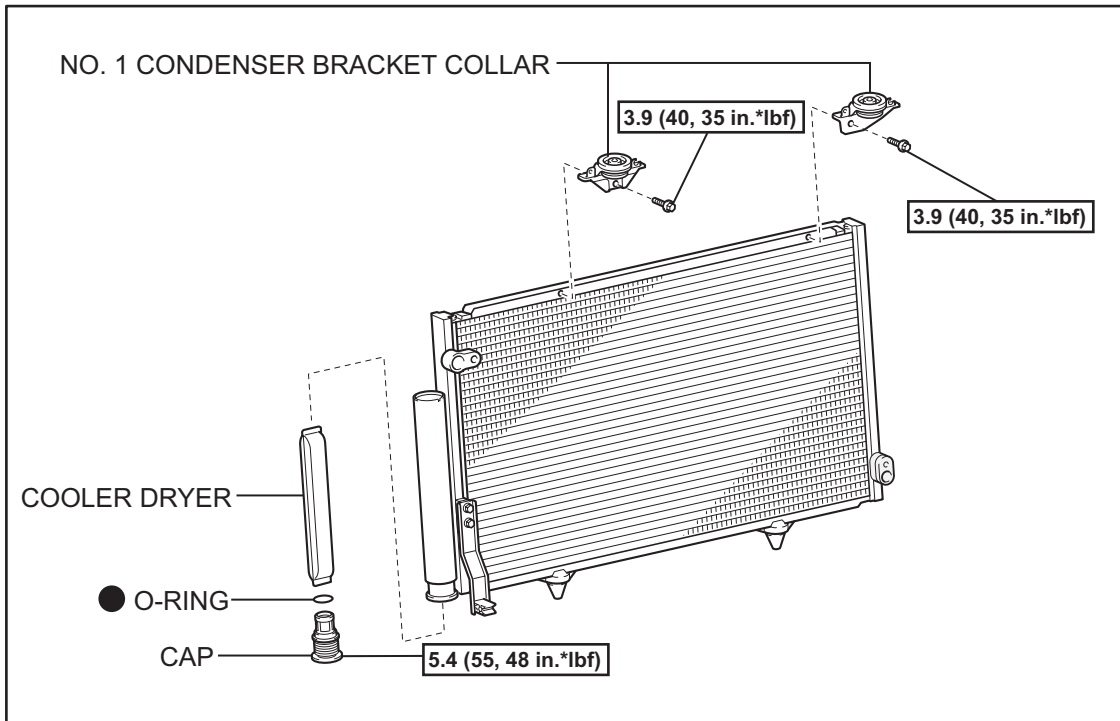


CONDENSER COMPONENTS

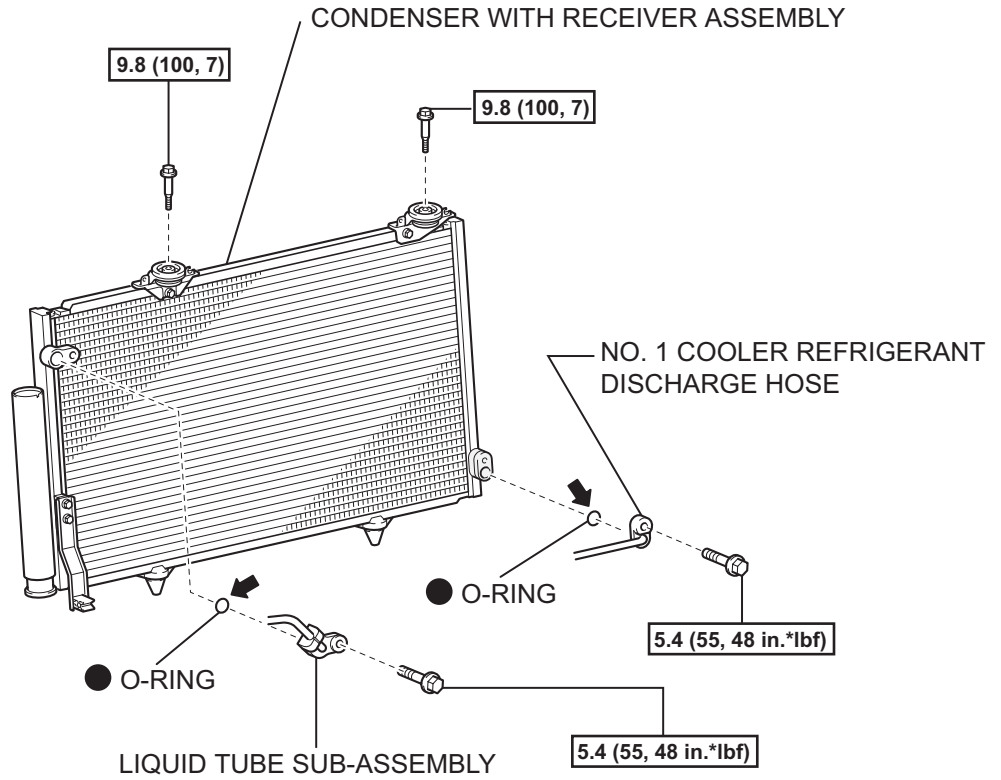

N*m (kgf*cm, ft.*lbf) : Specified torque ● Non-reusable part ← Compressor oil ND-OIL 8 or equivalent

ON-VEHICLE INSPECTION

1. INSPECT CONDENSER WITH RECEIVER ASSEMBLY

- (a) If the fins of the condenser are dirty, clean them with water. Dry the fins with compressed air.

NOTICE:

Be careful not to damage the condenser.

- (b) If a fin of the condenser is bent, use a screwdriver or pliers to straighten it.

2. CHECK CONDENSER FOR LEAKAGE OF REFRIGERANT

- (a) Using a gas leak detector, check the pipe joints for gas leakage.

If gas leakage is detected in a joint, check the torque of the joint.