


# HEATER BLOWER MOTOR RELAY

## ON-VEHICLE INSPECTION

1. REMOVE HEATER BLOWER MOTOR RELAY  
(Marking: HEATER)
  - (a) Remove the relay from the instrument panel junction block.
2. INSPECT HEATER BLOWER MOTOR RELAY
  - (a) Measure the resistance of the relay.  
**Standard resistance**

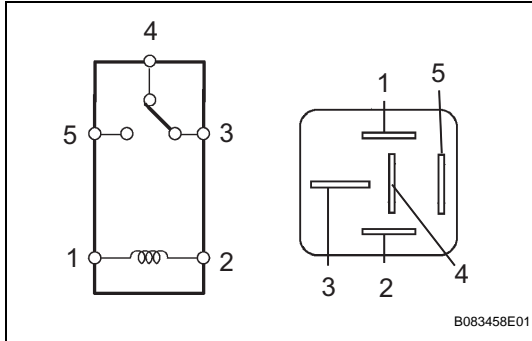

Tester Connection	Specified Condition
3 - 4	Below 1 $\Omega$
3 - 5	10 k $\Omega$ or higher
3 - 5	Below 1 $\Omega$ (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.

3. INSTALL HEATER BLOWER MOTOR RELAY