

PTC HEATER RELAY

ON-VEHICLE INSPECTION

1. **REMOVE PTC HEATER RELAY (Marking: HTR SUB1)**
 - (a) Remove the heater relay from the engine room relay block.
2. **INSPECT PTC HEATER RELAY**
 - (a) Measure the resistance of the relay.

Standard resistance

| Tester Connection | Specified Condition |
|-------------------|---|
| 3 - 5 | 10 kΩ or higher |
| 3 - 5 | Below 1 Ω (when battery voltage is applied to terminals 1 and 2) |

If the value is not as specified, replace the PTC heater relay.

3. **INSTALL PTC HEATER RELAY**

