

FRONT NO. 2 SPEAKER

ON-VEHICLE INSPECTION

1. INSPECT NO. 2 FRONT SPEAKER ASSEMBLY

- (a) Replace the right and left speakers with one another and check if they play normally.

OK:

They play normally.

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE NO. 2 INSTRUMENT PANEL SPEAKER PANEL SUB-ASSEMBLY (See page [IP-5](#))

3. REMOVE NO. 2 FRONT SPEAKER ASSEMBLY LH

- (a) Remove the 2 bolts and speaker.
- (b) Disconnect the connector.

