

REAR SPEAKER

REMOVAL

HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE REAR DOOR SCUFF PLATE RH (See page [IR-6](#))

3. REMOVE REAR DOOR SCUFF PLATE LH (See page [IR-6](#))

4. REMOVE REAR DOOR OPENING TRIM RH

5. REMOVE REAR DOOR OPENING TRIM LH

6. REMOVE REAR SEAT ASSEMBLY

(a) Rear seat assembly (see page [SE-12](#)).


7. REMOVE BACK DOOR WEATHERSTRIP


8. REMOVE SPARE WHEEL COVER ASSEMBLY

9. REMOVE DECK TRIM COVER REAR (See page [IR-7](#))

10. REMOVE REAR SPEAKER ASSEMBLY LH

- (a) Disconnect the connector.
- (b) Remove the 3 bolts and speaker .

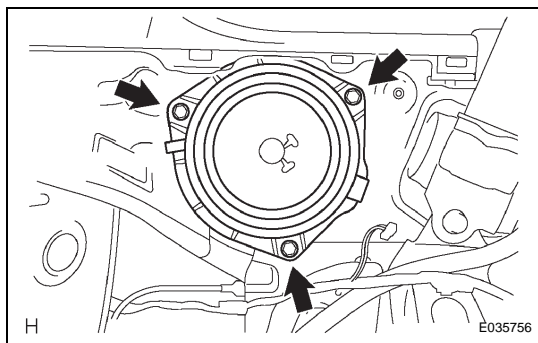

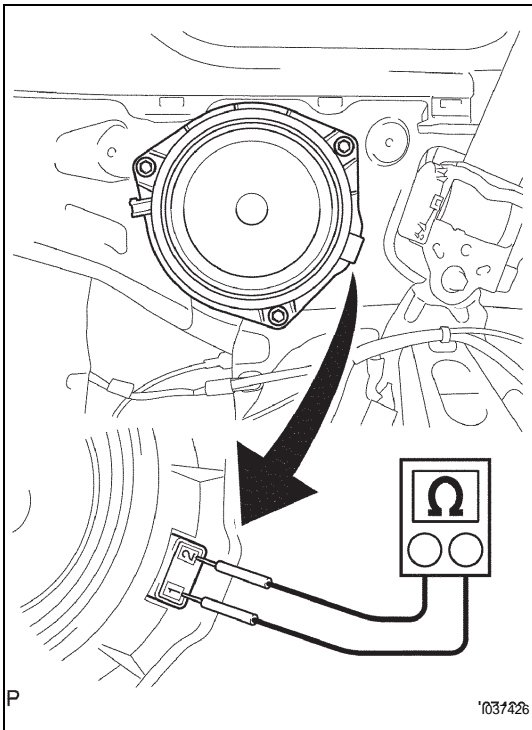

INSPECTION

1. INSPECT REAR SPEAKER ASSEMBLY

- (a) Measure the resistance of the speaker..

Standard resistance

Tester Connection	Condition	Specified Condition
1 - 2	Always	4 Ω