

AUTOMATIC TRANSAXLE FLUID

ADJUSTMENT


1. CHECK TRANSAXLE FLUID LEVEL

HINT:

Drive the vehicle so that the engine and transaxle are at normal operating temperature.

Fluid temperature:

70 to 80°C (158 to 176°F)

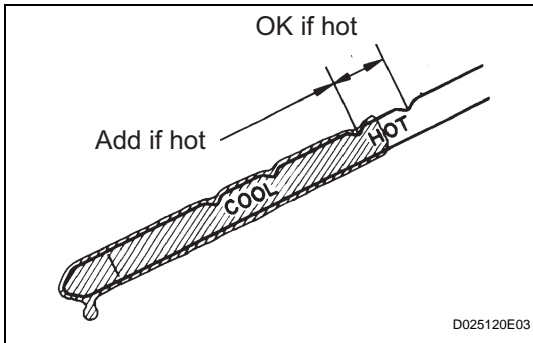

- Park the vehicle on a level surface and set the parking brake.
- With the engine idling and the brake pedal depressed, adjust the shift lever to each position from P to L position, and return it to the P position.
- Take out the ATF dipstick and wipe it clean.
- Fully insert it back into the pipe.
- Take it out and check that the fluid level is at the HOT position.

If there are leaks, it is necessary to repair or replace O-rings, FIPGs, oil seals, plugs and/or other parts.