


PARK / NEUTRAL POSITION SWITCH

COMPONENTS

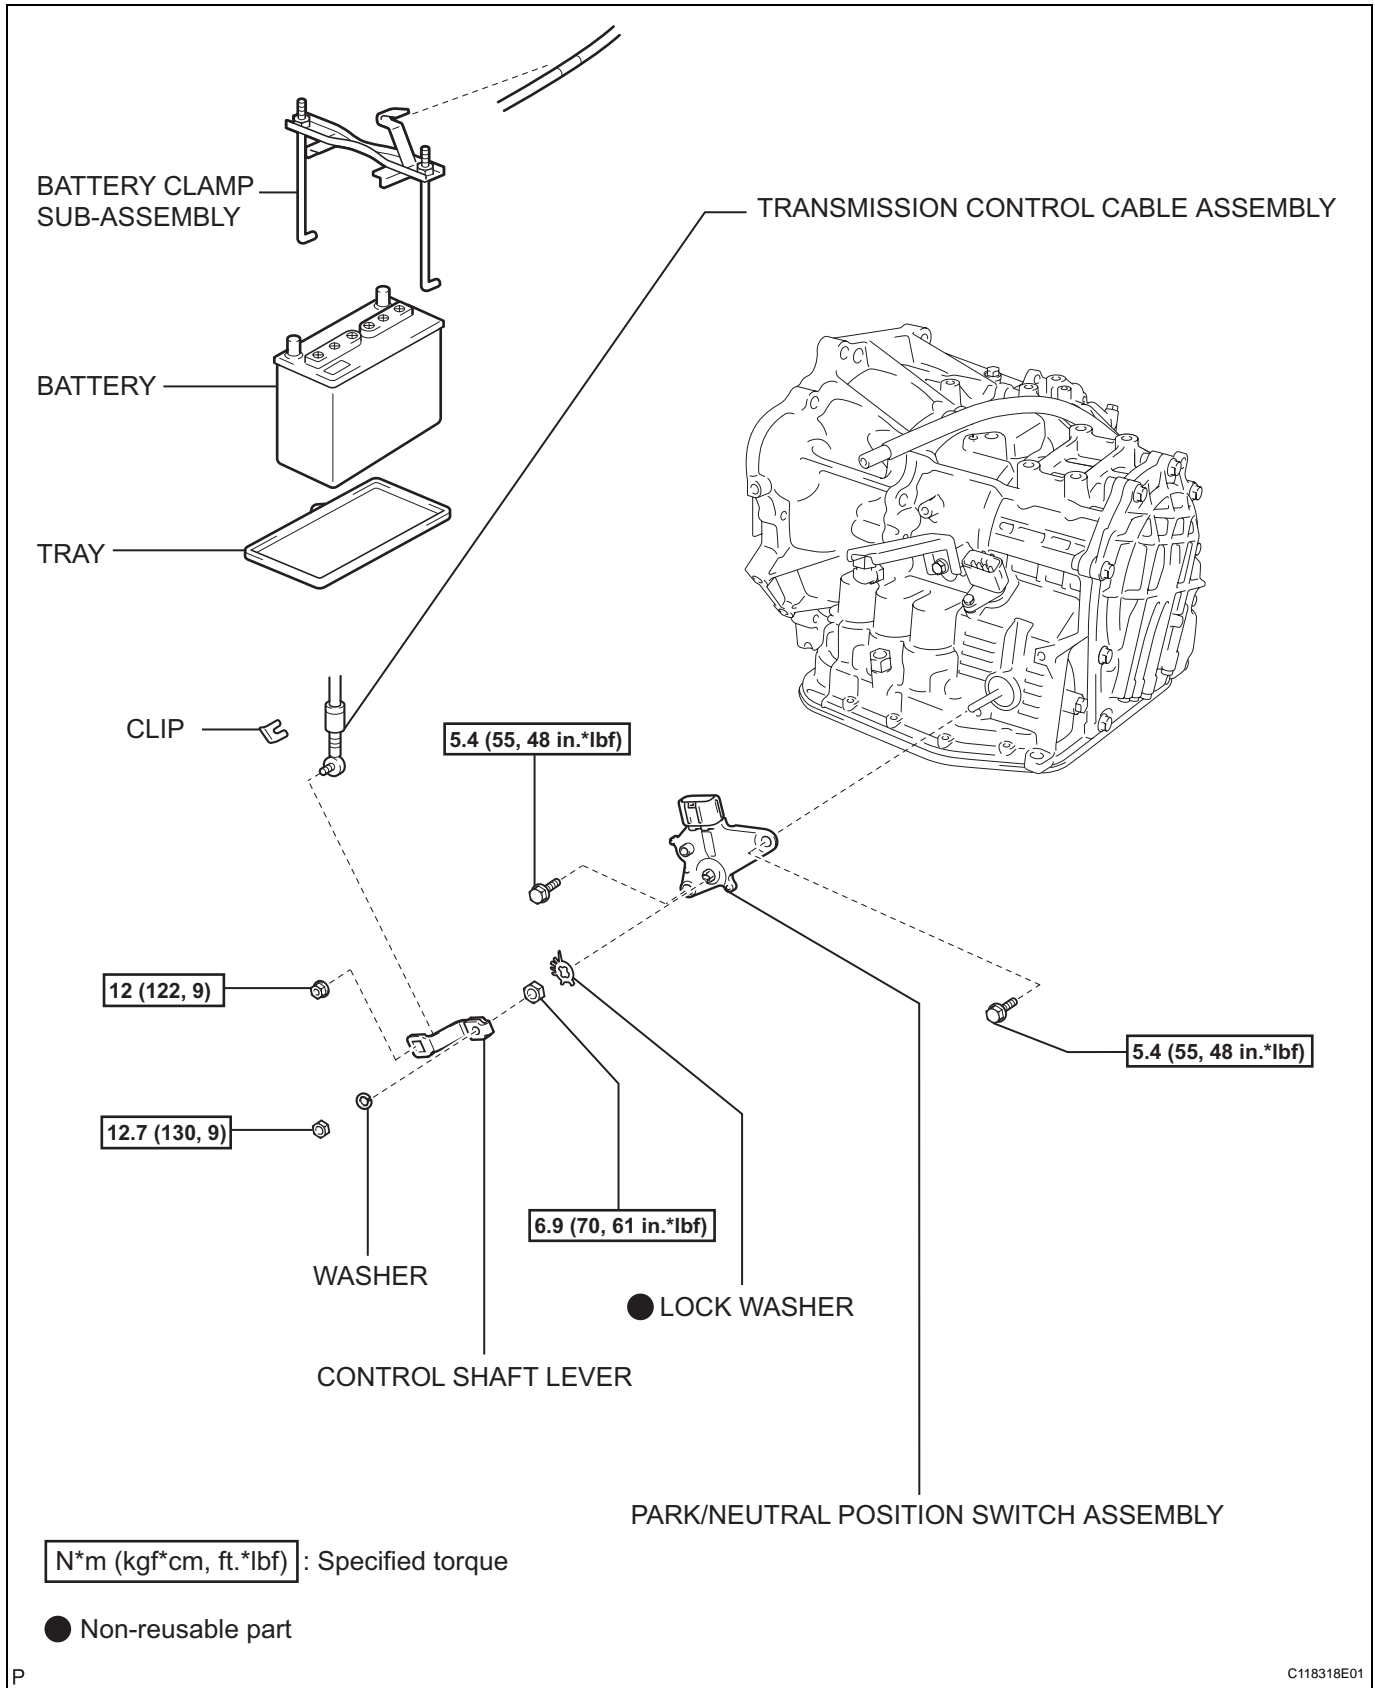

AX

ON-VEHICLE INSPECTION

1. INSPECT PARK/NEUTRAL POSITION SWITCH ASSEMBLY

- (a) Apply the parking brake and turn the ignition switch ON.
- (b) Depress the brake pedal and check that the engine starts when the shift lever is on N or P, but does not start in other positions.
- (c) Check that the back-up light illuminates and the reverse warning buzzer sounds when the shift lever is on R, but do not function in other positions.