
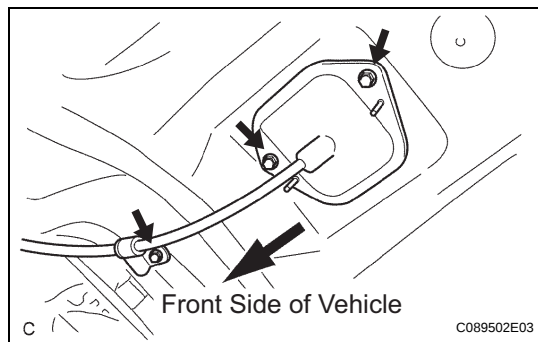



TRANSMISSION CONTROL CABLE ASSEMBLY

REPLACEMENT


1. **REMOVE CONSOLE BOX REAR COVER**
 - (a) Remove the console box rear cover (see page [IP-29](#)).
2. **REMOVE CONSOLE BOX CARPET**
3. **REMOVE REAR CONSOLE BOX ASSEMBLY**
 - (a) Remove the rear console box (see page [IP-29](#)).
4. **REMOVE FRONT EXHAUST PIPE ASSEMBLY**
 - (a) Remove the front exhaust pipe (see page [EX-3](#)).
5. **REMOVE FRONT NO. 1 FLOOR HEAT INSULATOR**
6. **REMOVE AIR CLEANER ASSEMBLY**
 - (a) Remove the air cleaner assembly (see page [ES-346](#)).
7. **DISCONNECT TRANSMISSION CONTROL CABLE ASSEMBLY**
 - (a) Remove the nut, and disconnect the transmission control cable from the floor shift assembly.
 - (b) Using a screwdriver, disconnect the transmission control cable assembly from the shift lever plate.

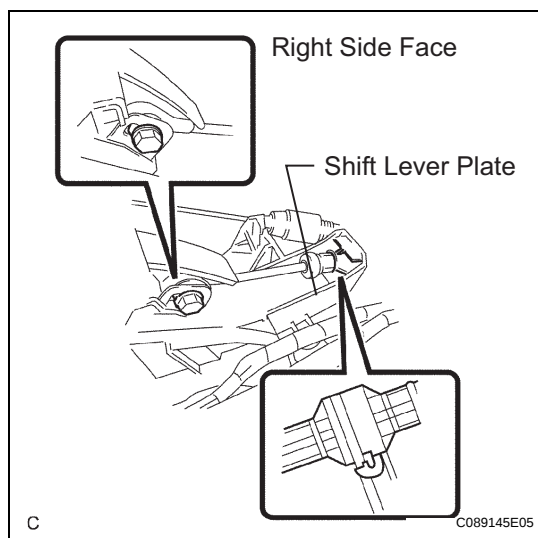


- (c) Remove the 3 bolts.
- (d) Pull out the transmission control cable from the body.

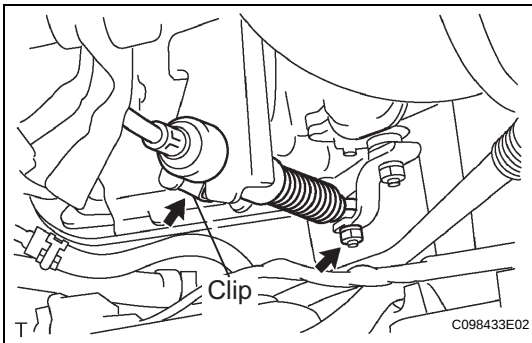

- (e) Remove the nut and disconnect the transmission control cable from the control shaft lever.
- (f) Remove the clip and disconnect the transmission control cable from the control cable bracket.

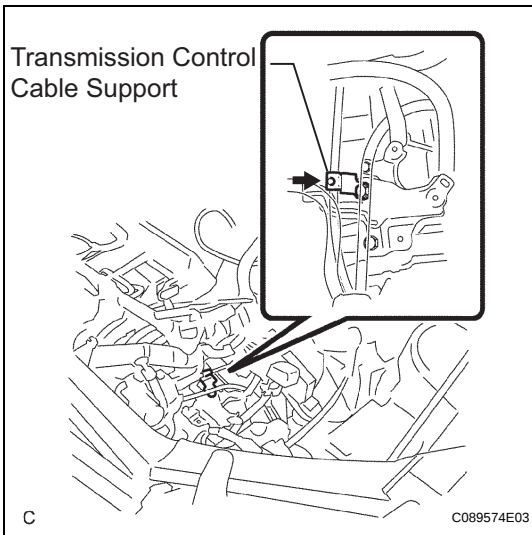


- (g) Disconnect the transmission control cable from the transmission control cable support.

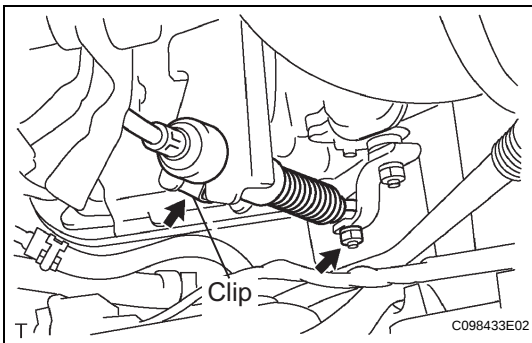


8. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY

- (a) Temporarily install the transmission control cable on the control shaft lever with the nut.
- (b) Connect the transmission control cable on the bracket with a new clip.

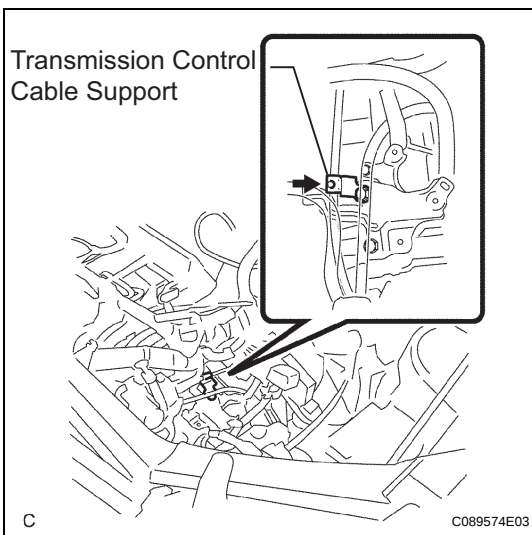


- (c) Connect the transmission control cable to the transmission control cable support.

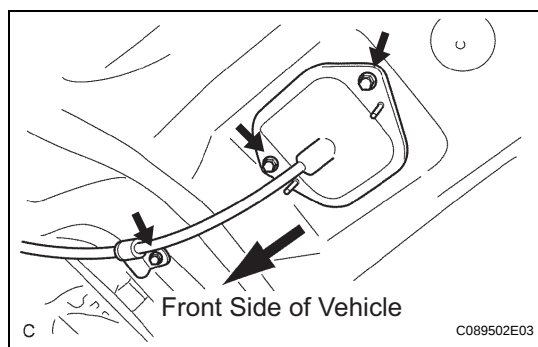

- (d) Install the transmission control cable on the body with the 3 bolts.

Torque: 5.0 N*m (51 kgf*cm, 44 in.*lbf)

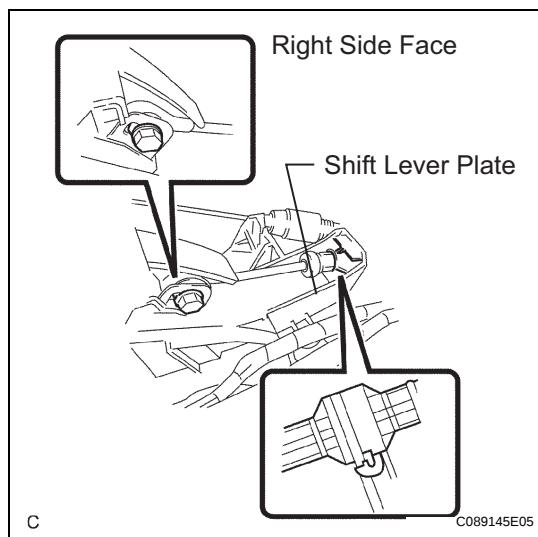

- (e) Connect the transmission control cable on the shift lever plate.
(f) Temporarily install the transmission control cable on the floor shift.

Torque: 2 N*m (122 kgf*cm, 9 ft.*lbf)

9. INSTALL AIR CLEANER ASSEMBLY

- (a) Install the air cleaner (see page [ES-348](#)).

10. INSTALL FRONT NO. 1 FLOOR HEAT INSULATOR

11. INSTALL FRONT EXHAUST PIPE ASSEMBLY

- (a) Install the front exhaust pipe (see page [EX-5](#)).

12. ADJUST SHIFT LEVER POSITION

- (a) Adjust the shift lever position (see page [AX-122](#)).

13. INSPECT SHIFT LEVER POSITION

- (a) Inspect the shift lever position (see page [AX-122](#)).

14. INSTALL REAR CONSOLE BOX ASSEMBLY

- (a) Install the rear console box (see page [IP-30](#)).

15. INSTALL CONSOLE BOX CARPET

16. INSTALL CONSOLE BOX REAR COVER

- (a) Install the console box rear cover (see page [IP-30](#)).