



REMOVAL

1. REMOVE CONSOLE BOX REAR COVER
2. REMOVE CONSOLE BOX CARPET
3. REMOVE REAR CONSOLE BOX ASSEMBLY

(a) Using a screwdriver, detach the 8 claws and remove the rear console box cover.

NOTICE:



Tape the screwdriver tip before use.

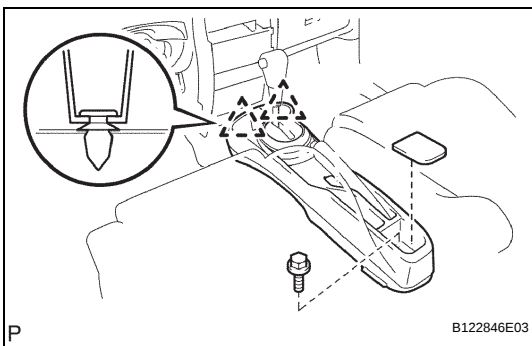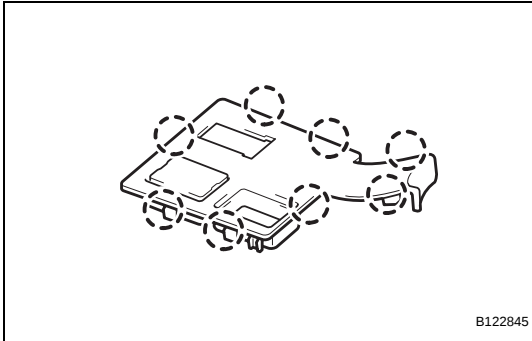


- (b) Remove the console box carpet.
- (c) Remove the screw.
- (d) Disconnect the connector.
- (e) Using a screwdriver, detach the 2 clips and remove the console box.

4. DISCONNECT FLOOR SHIFT PARKING LOCK CABLE ASSEMBLY

- (a) Rotate the adjust lock cap clockwise 90° so that it faces the front of the vehicle, and release it.
- (b) Push the claw and disconnect the floor shift parking lock cable from the shift lock release link.

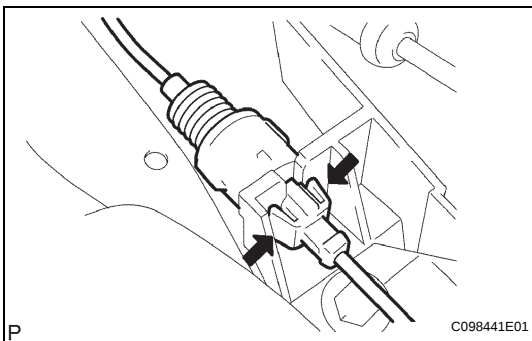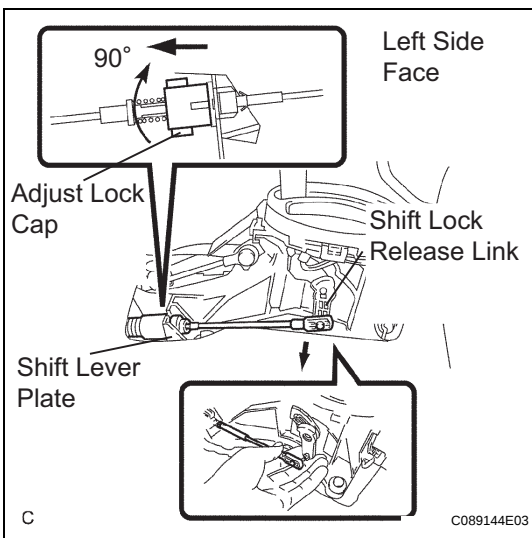


- (c) Using a screwdriver, disconnect the floor shift parking lock cable from the shift lever plate.

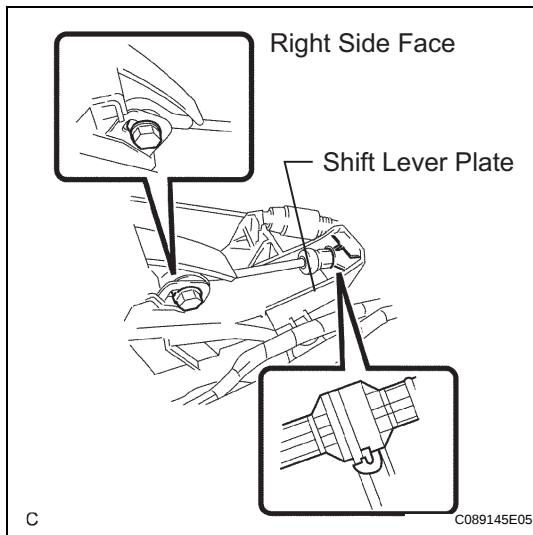

5. DISCONNECT TRANSMISSION CONTROL CABLE ASSEMBLY

- Remove the nut, and disconnect the transmission control cable from the floor shift.
- Using a screwdriver, disconnect the transmission control cable from the shift lever plate.

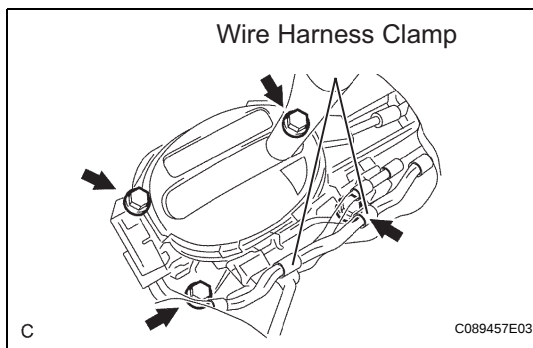



6. REMOVE FLOOR SHIFT ASSEMBLY

- Disconnect the 2 connectors.
- Remove the 2 wire harness clamps from the floor shift.
- Remove the 4 bolts and floor shift.


DISASSEMBLY

1. REMOVE TRANSMISSION CONTROL SWITCH

- Disconnect the connector from the shift lever plate.

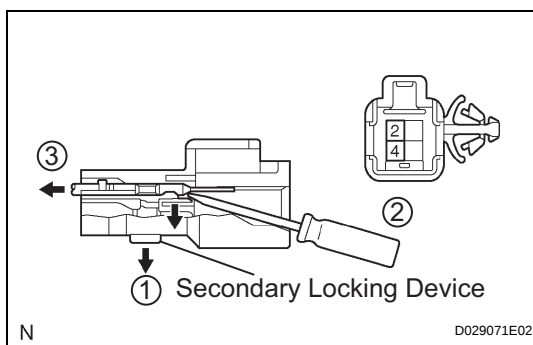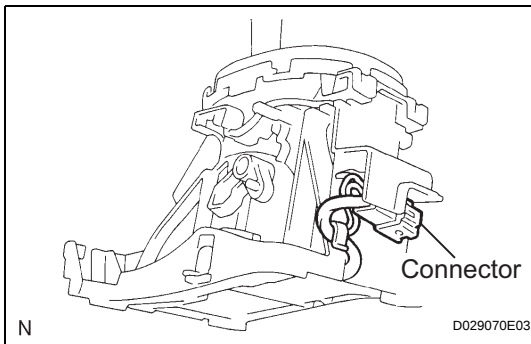

- Remove the transmission control switch connector from the shift lever plate.
- Disengage the secondary locking device.
- Release the locking lug of terminals 2 and 4, and then pull out the terminals from the rear.

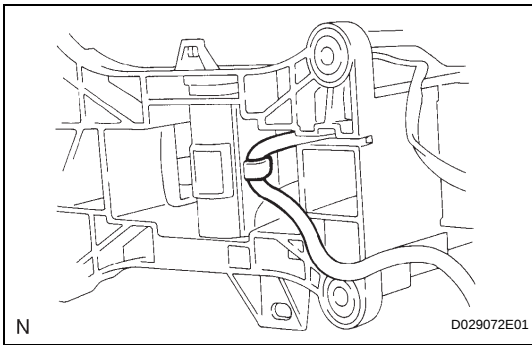


2. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY

- Separate the wire harness of the transmission control switch from the shift lever plate.
- Remove the 2 screws and shift lever knob.

NOTICE:


Be careful not to apply excessive force to the transmission control switch wire harness.

- Remove the shift lever knob cover.
- Remove the shift lever knob button and spring.
- Detach the 2 claws and remove the transmission control switch.

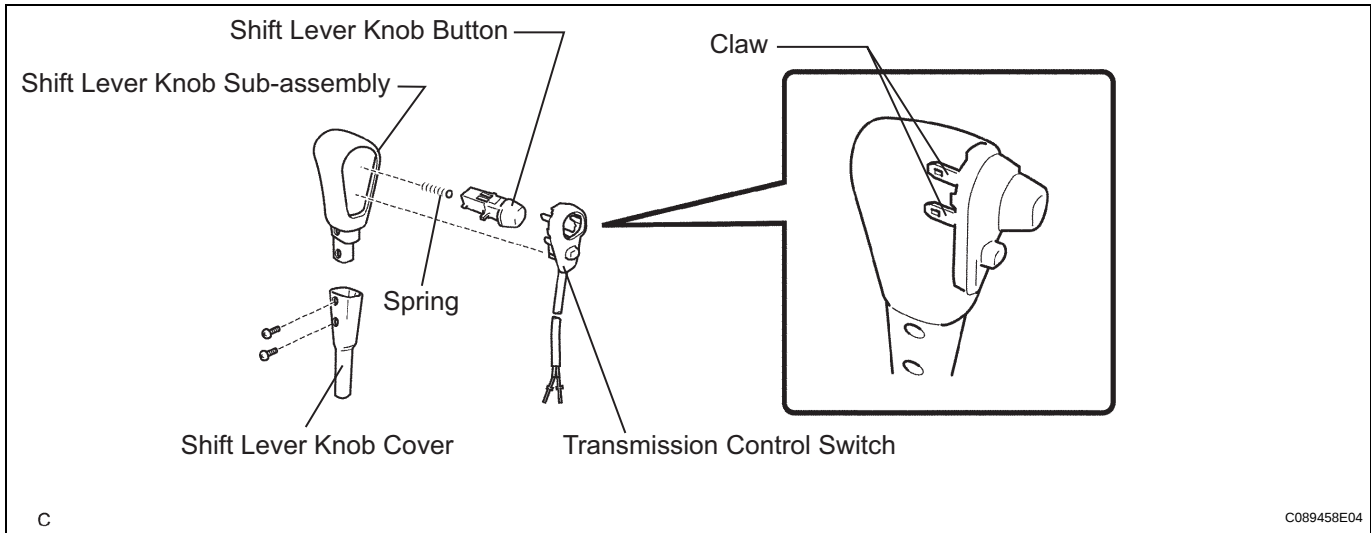


3. REMOVE POSITION INDICATOR UPPER HOUSING


- Remove the shift lock release button cover from the position indicator upper housing.
- Remove the position indicator upper housing from the shift lever.
- Remove the position indicator slide cover from the shift lever plate.
- Remove the position indicator plate from the position indicator upper housing.

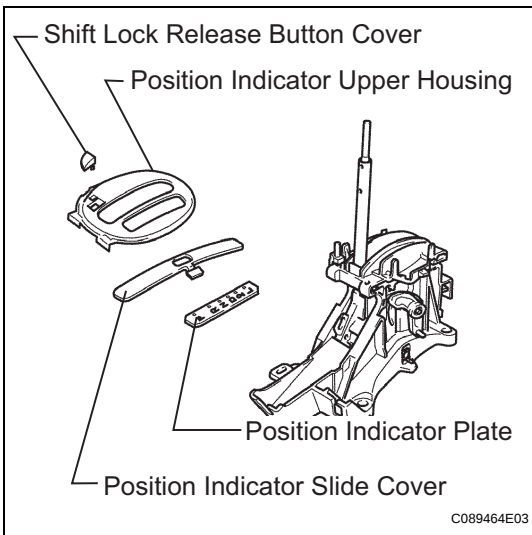


4. REMOVE SHIFT LOCK CONTROL SWITCH

- Remove the screw and shift lock control switch.

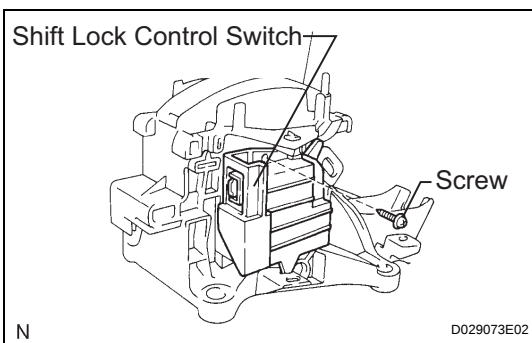


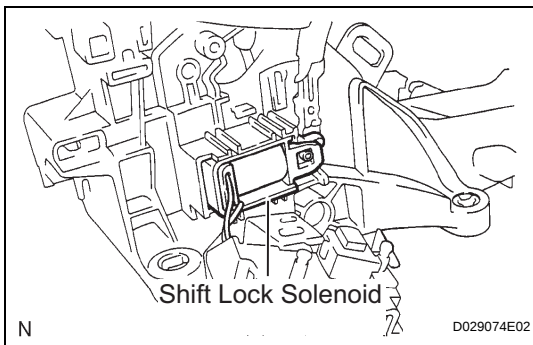**5. REMOVE SHIFT LOCK SOLENOID**

- (a) Remove the shift lock solenoid from the floor shift.

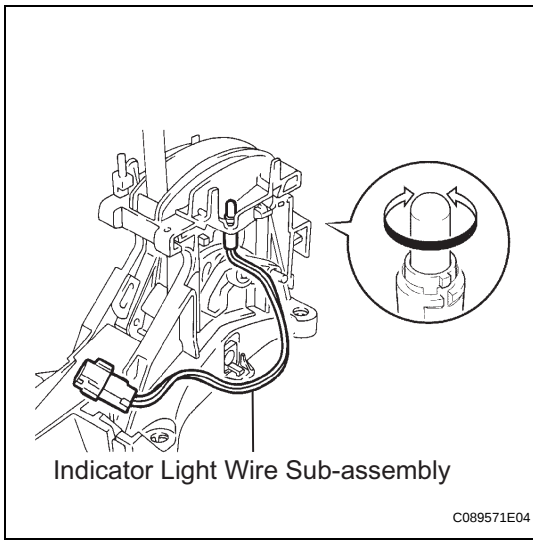**6. REMOVE INDICATOR LIGHT WIRE SUB-ASSEMBLY**

- (a) Remove the indicator light wire from the floor shift.

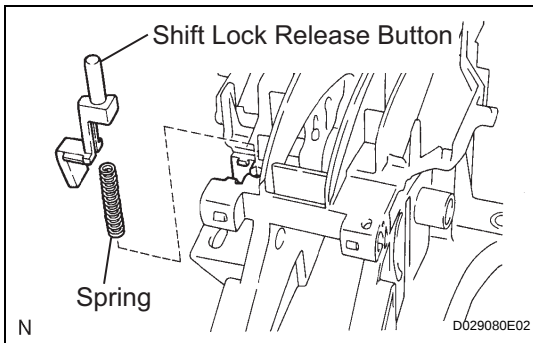**7. REMOVE SHIFT LOCK RELEASE BUTTON**

- (a) Remove the shift lock release button and spring from the floor shift.