


TC and CG Terminal Circuit


DESCRIPTION

Connecting terminals TC and CG of the DLC3 causes the ECU to display DTCs by flashing the ABS warning light.

WIRING DIAGRAM

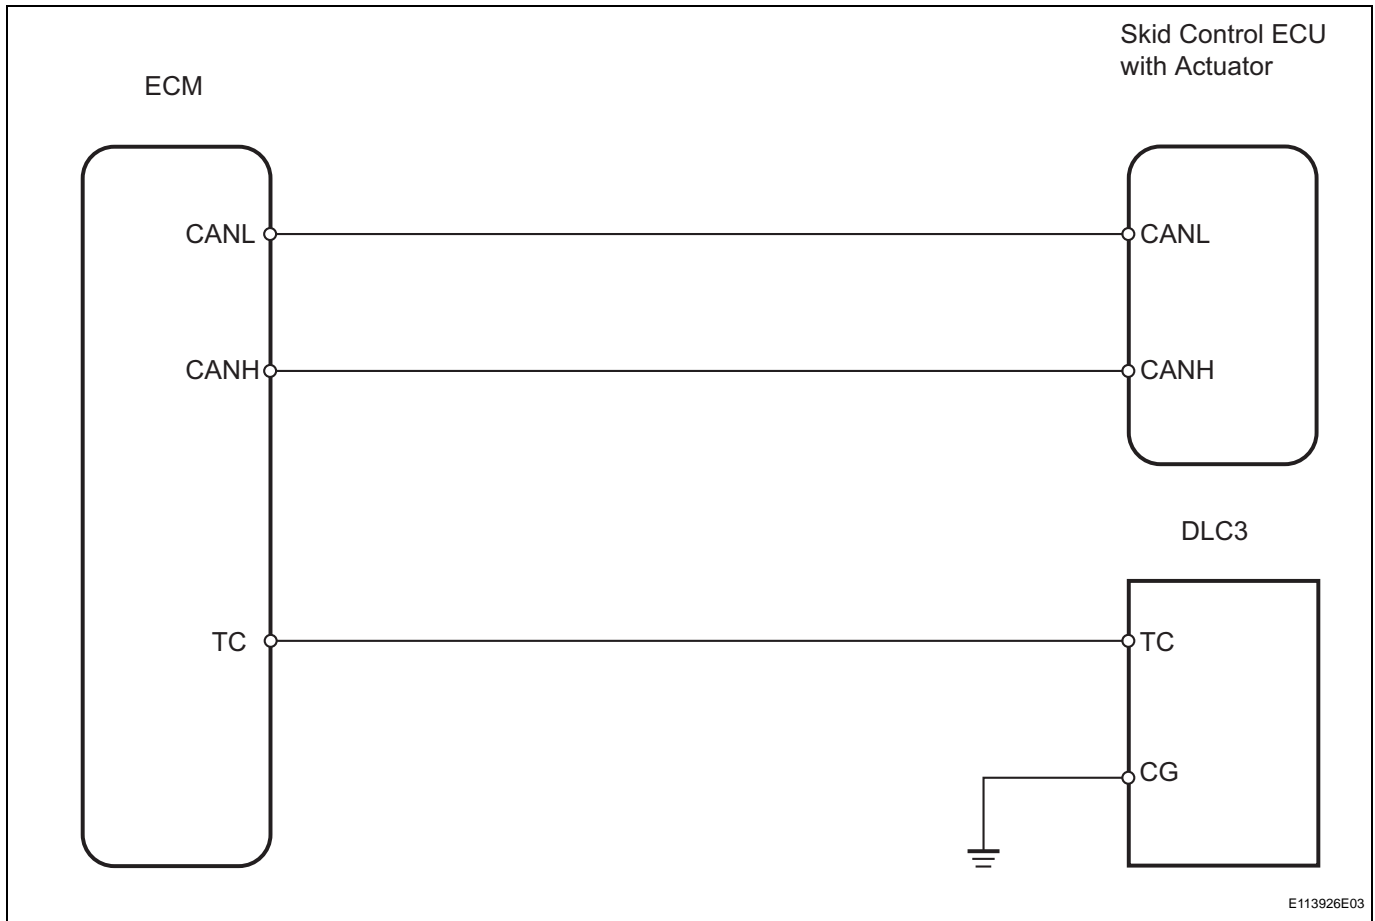

1 CHECK DLC3 (TC VOLTAGE)

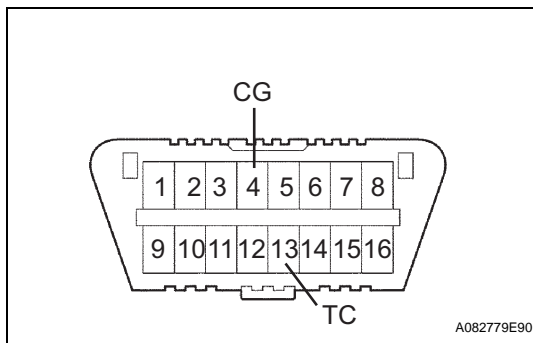

- (a) Measure the voltage of the connector.
Standard voltage

Tester Connection	Condition	Specified Condition
D1-13 (TC) - D1-4 (CG)	Ignition switch ON	10 to 14 V

OK


GO TO CAN COMMUNICATION SYSTEM

NG

BC

2

CHECK WIRE HARNESS (DLC3 - ECM AND BODY GROUND)

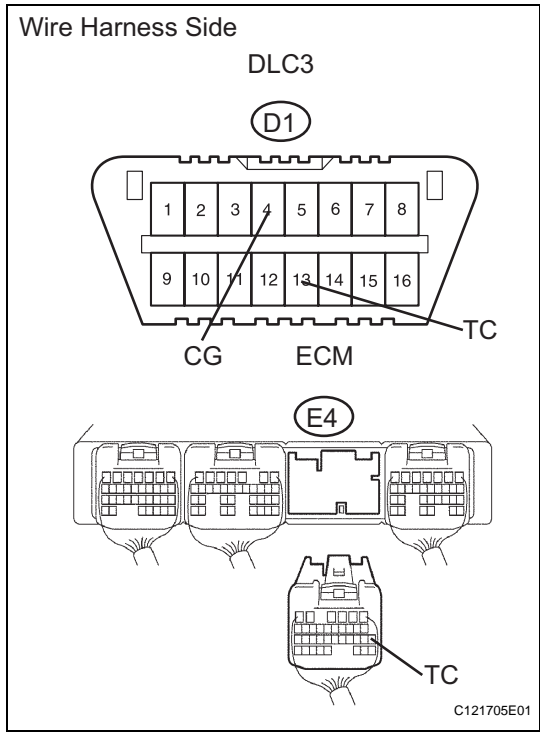

- (a) Disconnect the D1 DLC3 connector.
- (b) Disconnect the E4 ECM connector.
- (c) Measure the resistance of the wire harness side connectors.

Standard resistance

Tester Connection	Specified Condition
D1-13 (TC) - E4-17 (TC)	Below 1 Ω
D1-4 (CG) - Body ground	

NG

REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

GO TO CAN COMMUNICATION SYSTEM