

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **DRAIN BRAKE FLUID**

NOTICE:


Wash off brake fluid immediately if it comes in contact with any painted surface.

3. **REMOVE BRAKE ACTUATOR ASSEMBLY WITH BRACKET**


- (a) Release the latch of the actuator connector and disconnect the connector.
- (b) Using SST, disconnect the 6 brake lines from the brake actuator.

SST 09023-00101

w/o VSC

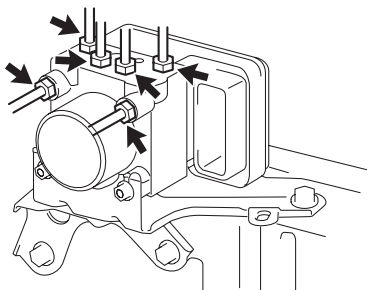


w/ VSC

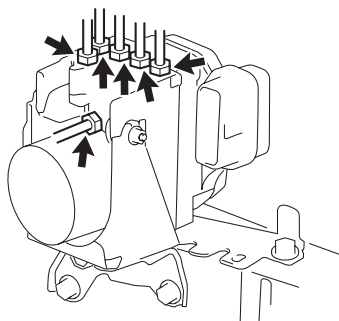


H

C117584E01

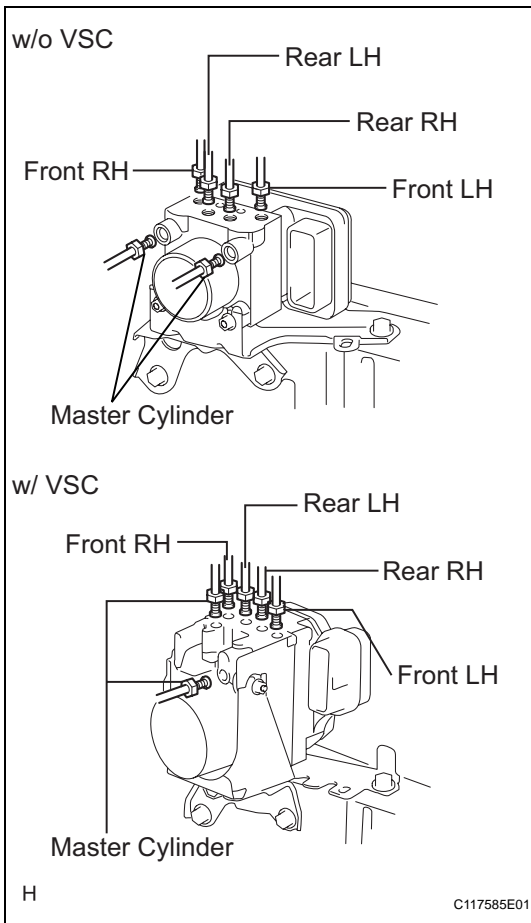

- (c) Place tags or marks to identify the installation locations of each brake line.

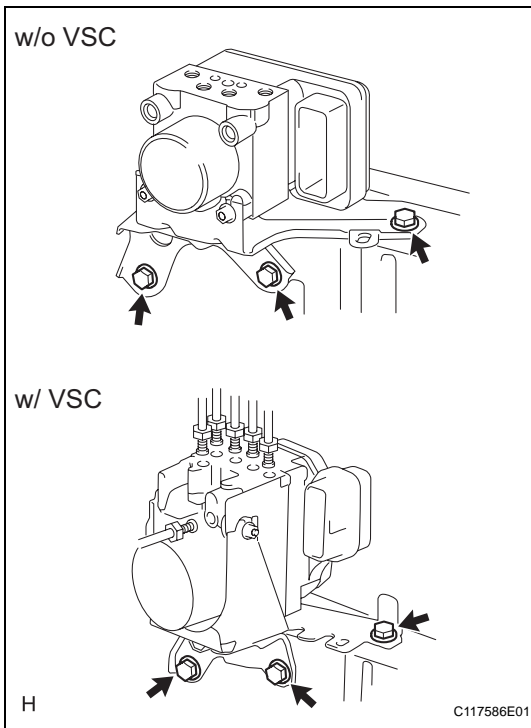

- (d) Remove the 3 bolts and brake actuator with the bracket.

4. REMOVE BRAKE ACTUATOR ASSEMBLY

- (a) Remove the 2 nuts and brake actuator from the bracket.