

## INSTALLATION

### HINT:

- Use the same procedures for the LH side and RH side.
- The procedures listed below are for the LH side.



### 1. INSTALL FRONT SPEED SENSOR LH

- (a) Install the speed sensor with the bolt.

**Torque: 8.0 N\*m (82 kgf\*cm, 71 in.\*lbf)**

#### NOTICE:

**Keep the sensor tip and sensor installation hole free from foreign matter.**

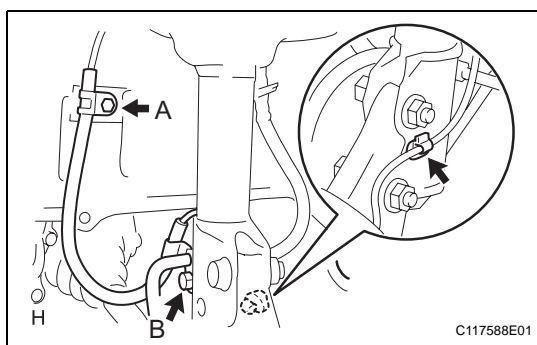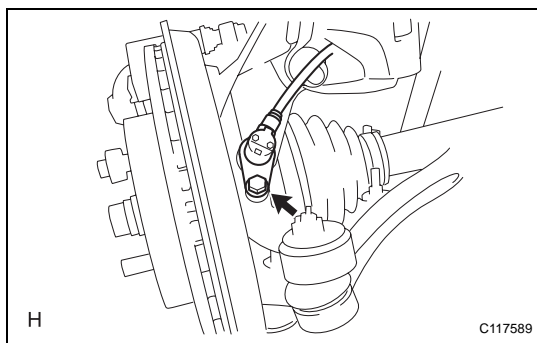

- (b) Install the speed sensor wire harness to the body and shock absorber with the 2 clamp bolts.

**Torque: 8.0 N\*m (82 kgf\*cm, 71 in.\*lbf) for bolt A**  
**29 N\*m (300 kgf\*cm, 21 ft.\*lbf) for bolt B**

#### NOTICE:

**Do not twist the sensor wire when installing it.**

- (c) Connect the resin clip and speed sensor wire harness to the shock absorber.


#### NOTICE:

**Do not twist the sensor wire when installing it.**

- (d) Connect the speed sensor connector.

#### NOTICE:

**Do not twist the sensor wire when installing it.**

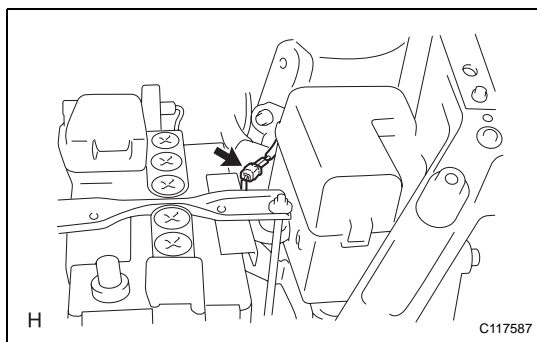

### 2. INSTALL FRONT WHEEL

**Torque: 103 N\*m (1,050 kgf\*cm, 76 ft.\*lbf)**

### 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

### 4. CHECK ABS SPEED SENSOR SIGNAL

- (a) Check the ABS speed sensor signal (see page [BC-7](#)).