


## INSTALLATION

### NOTICE:

- Do not use the dropped or damaged yaw rate sensor.
- Keep the area between the yaw rate sensor bracket and body free from foreign matter.
- Make sure of the sensor direction.

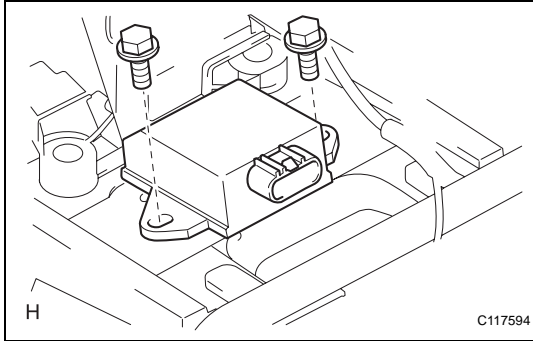

#### 1. INSTALL YAW RATE SENSOR

- (a) Install the yaw rate sensor with the 2 bolts.  
**Torque: 14 N\*m (143 kgf\*cm, 10 ft.\*lbf)**
- (b) Connect the yaw rate sensor connector.

#### 2. INSTALL REAR CONSOLE BOX ASSEMBLY

- (a) Install the rear console box (see page [IP-30](#)).

#### 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

#### 4. PERFORM YAW RATE SENSOR ZERO POINT CALIBRATION

- (a) Perform yaw rate sensor zero point calibration (see page [BC-11](#)).

#### 5. CHECK VSC SENSOR SIGNAL

- (a) Check the VSC sensor signal (see page [BC-7](#)).