


# YAW RATE SENSOR (w/ VSC)

## COMPONENTS

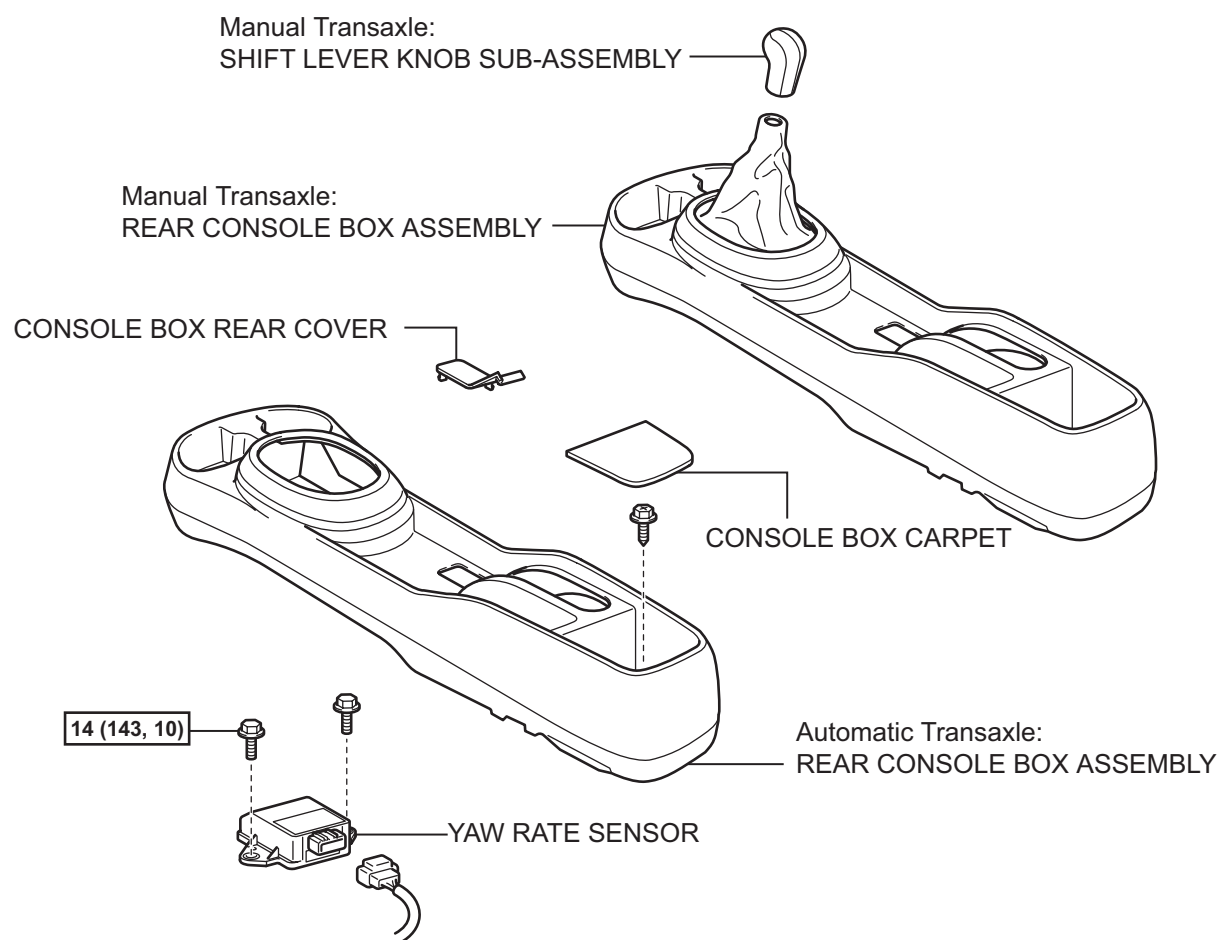

## REMOVAL

### NOTICE:

- Do not use the dropped or damaged yaw rate sensor.
- Keep the area between the yaw rate sensor bracket and body free from foreign matter.
- Make sure of the sensor direction.

### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

### 2. REMOVE REAR CONSOLE BOX ASSEMBLY

- (a) Remove the rear console box (see page [IP-29](#)).

### 3. REMOVE YAW RATE SENSOR

- (a) Disconnect the yaw rate sensor connector.  
(b) Remove the 2 bolts and yaw rate sensor.

