


STEERING SENSOR (w/ VSC)

COMPONENTS


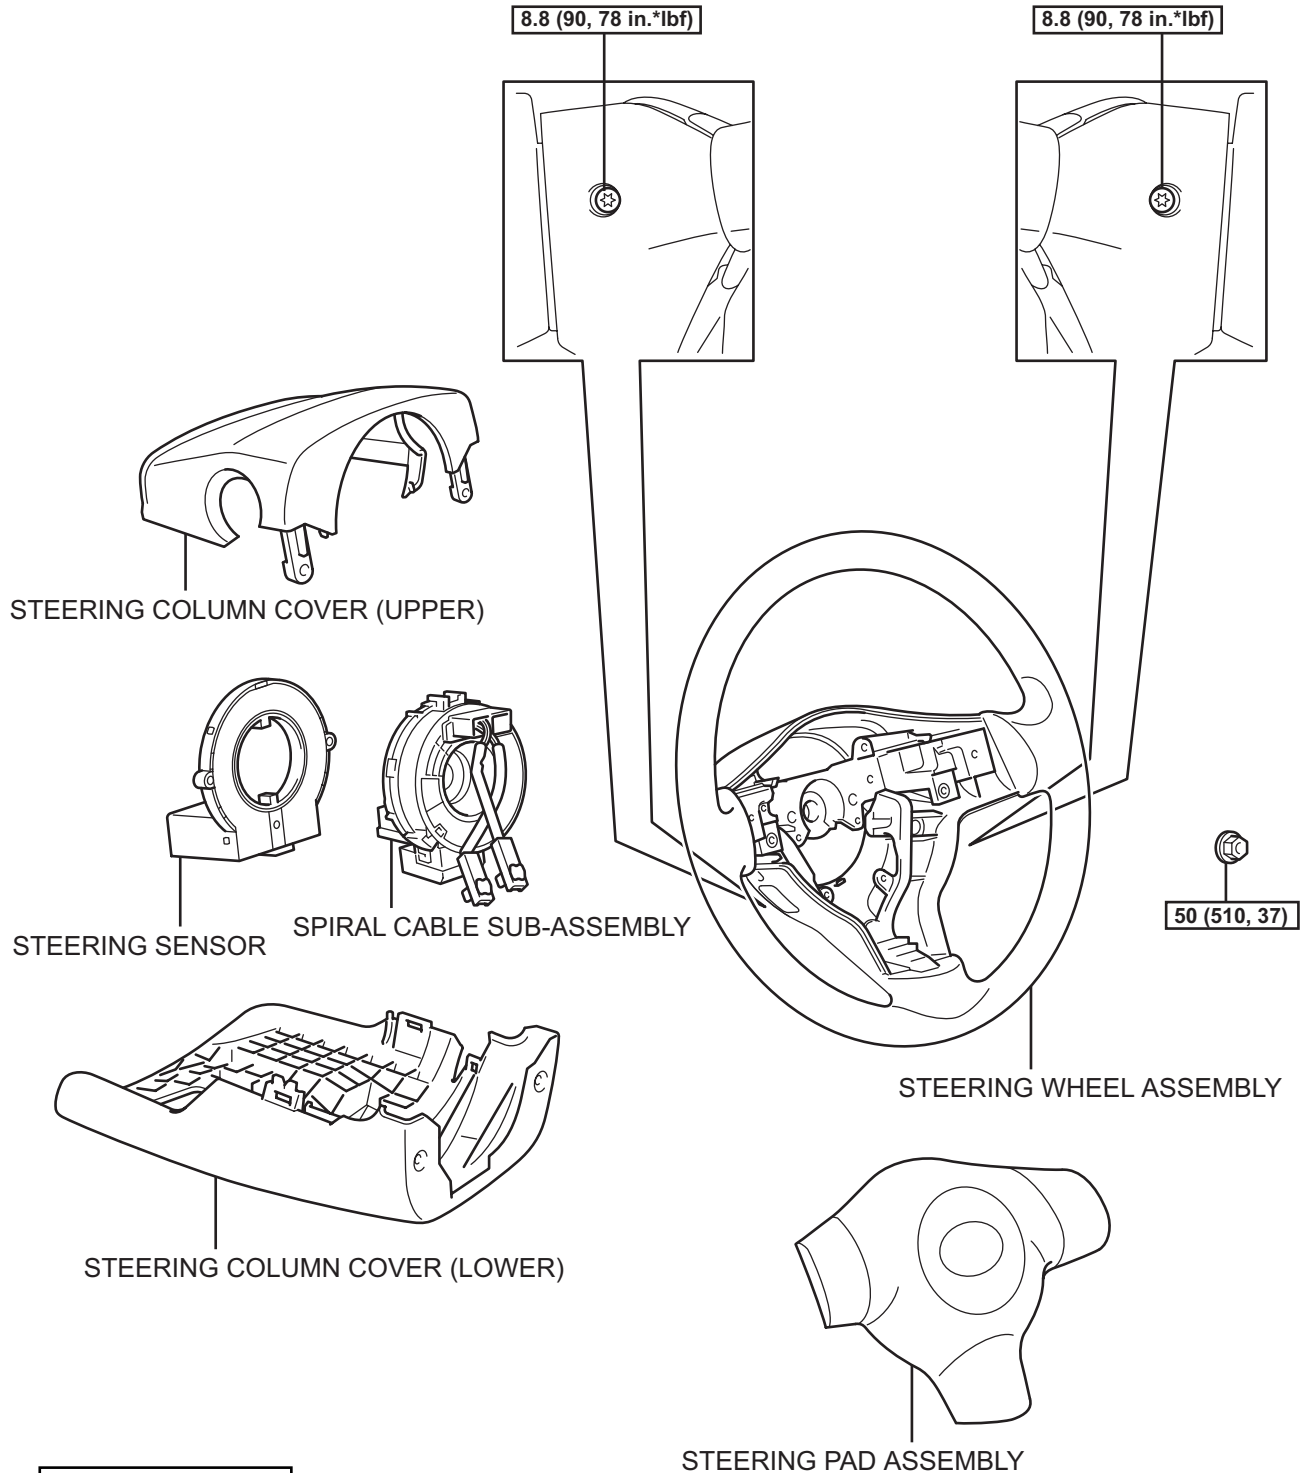


N*m (kgf*cm, ft.*lbf) : Specified torque

REMOVAL

1. **PRECAUTION**
 - (a) Follow the PRECAUTION (see page [RS-1](#)).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE STEERING PAD ASSEMBLY**
5. **REMOVE STEERING WHEEL ASSEMBLY**
6. **REMOVE STEERING COLUMN COVER**
7. **REMOVE SPIRAL CABLE SUB-ASSEMBLY**
8. **REMOVE STEERING SENSOR**
 - (a) Release the 4 claw fittings and remove the steering sensor from the spiral cable.

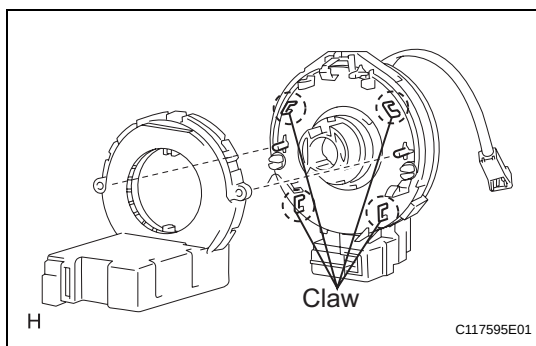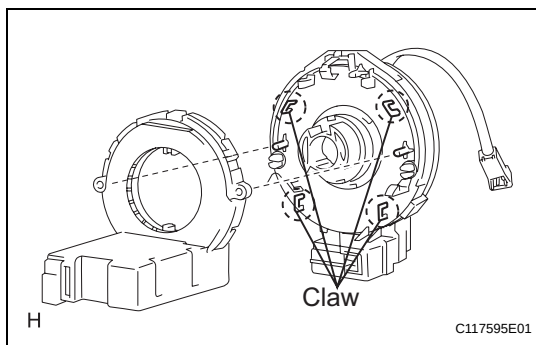

INSTALLATION

1. **INSTALL STEERING SENSOR**
 - (a) Install the steering sensor to the spiral cable.

NOTICE:

 - Install the claw securely.
 - Do not damage the claw fittings.
2. **ADJUST FRONT WHEEL TO CENTER**
3. **ADJUST SPIRAL CABLE SUB-ASSEMBLY**
4. **INSTALL STEERING COLUMN COVER**
5. **INSTALL STEERING WHEEL ASSEMBLY**
6. **INSPECT STEERING WHEEL CENTER POINT**
7. **INSTALL STEERING PAD ASSEMBLY**
8. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
9. **INSPECT STEERING PAD ASSEMBLY**
10. **CHECK SRS WARNING LIGHT**
 - (a) Check the SRS warning light (see page [RS-18](#)).
11. **PERFORM VSC SYSTEM CALIBRATION**
 - (a) Perform VSC system calibration (see page [BC-11](#)).

12. CHECK ABS WARNING LIGHT

- (a) Check the ABS warning light (see page).

13. CHECK VSC WARNING LIGHT

- (a) Check the VSC warning light (see page [BC-15](#)).