


# BRAKE MASTER CYLINDER

## COMPONENTS

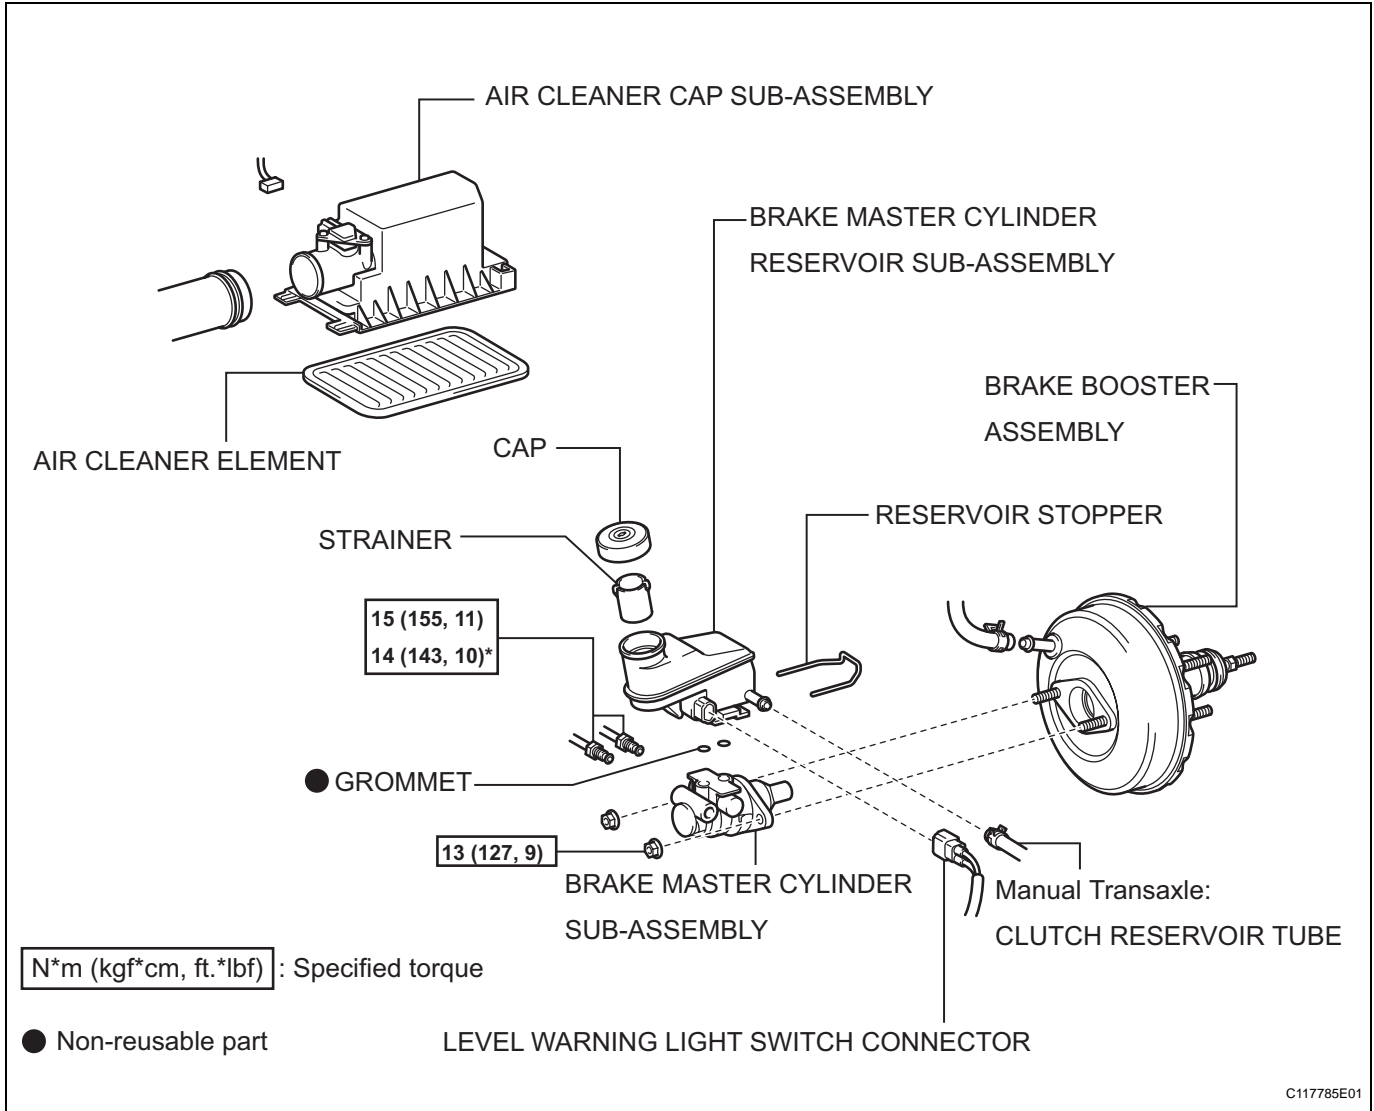

C117785E01

## REMOVAL

### 1. DRAIN BRAKE FLUID


#### NOTICE:

Wash off brake fluid immediately if it comes in contact with any painted surface.

### 2. REMOVE AIR CLEANER CAP SUB-ASSEMBLY

### 3. DISCONNECT CLUTCH RESERVOIR TUBE (for Manual Transaxle)


- (a) Slide the clip and disconnect the clutch reservoir tube.

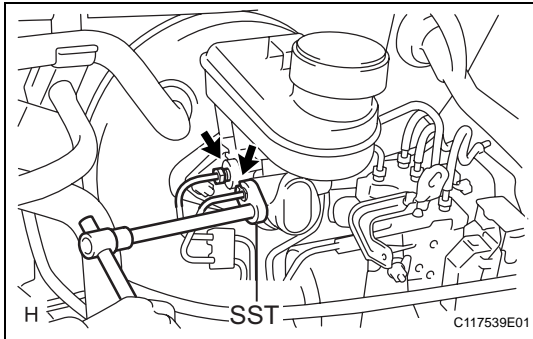

### 4. REMOVE BRAKE MASTER CYLINDER SUB-ASSEMBLY

- (a) Disconnect the level warning light switch connector.  
 (b) Using SST, disconnect the 2 brake lines from the brake master cylinder.


**SST 09023-00101**

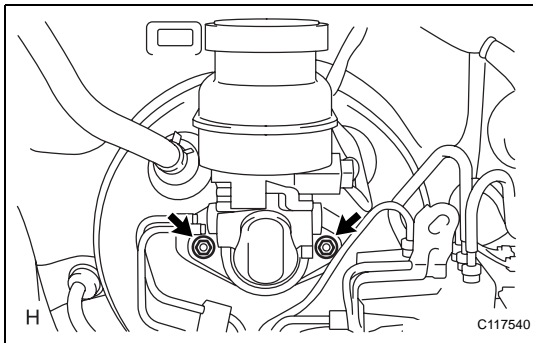


- (c) Remove the 2 nuts, and pull out the brake master cylinder.

### 5. REMOVE BRAKE MASTER CYLINDER RESERVOIR SUB-ASSEMBLY

- (a) Pull out the brake master cylinder reservoir stopper.

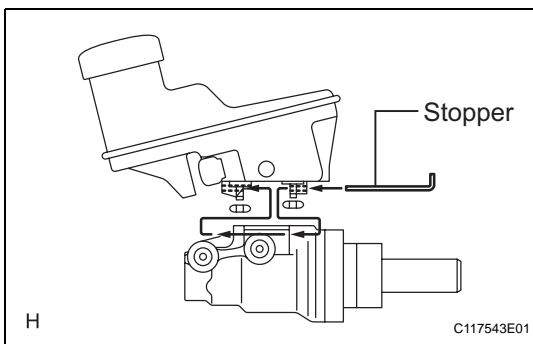

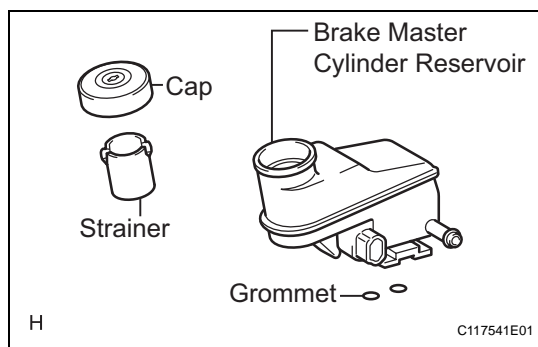

- (b) Remove the brake master cylinder reservoir and 2 grommets from the brake master cylinder.
- (c) Remove the cap and strainer from the brake master cylinder reservoir.