

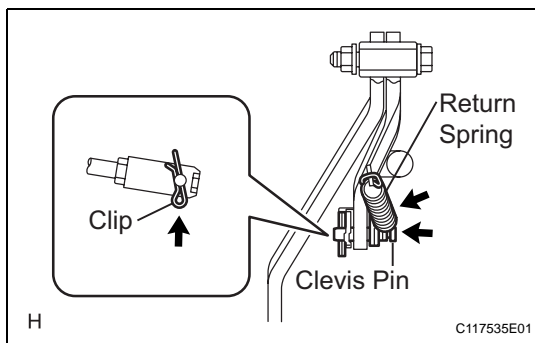


REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
 Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
2. **DRAIN BRAKE FLUID**
NOTICE:
 Wash off brake fluid immediately if it comes in contact with any painted surface.
3. **REMOVE AIR CLEANER CAP SUB-ASSEMBLY**
4. **DISCONNECT CLUTCH RESERVOIR TUBE (for Manual Transaxle)**
 - (a) Slide the clip and disconnect the clutch reservoir tube.
5. **REMOVE BRAKE MASTER CYLINDER SUB-ASSEMBLY**
 - (a) Remove the brake master cylinder (see page [BR-12](#)).
6. **REMOVE BATTERY**
7. **REMOVE BRAKE ACTUATOR ASSEMBLY WITH BRACKET**
 - (a) Remove the brake actuator with bracket (see page [BC-104](#)).
8. **REMOVE BRAKE BOOSTER ASSEMBLY**
 - (a) Slide the clip and disconnect the vacuum hose from the brake booster.

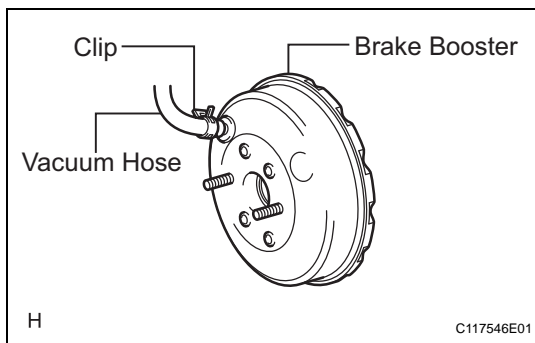

- (b) Remove the brake pedal return spring, clip and clevis pin.
- (c) Loosen the push rod clevis lock nut.

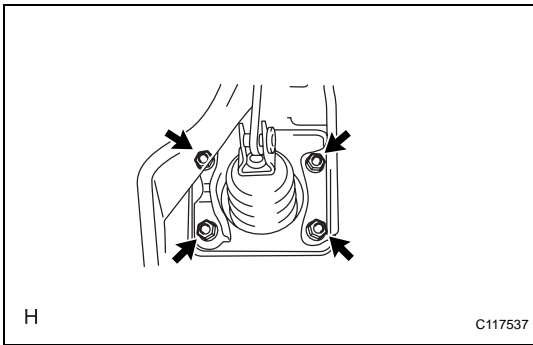

- (d) Remove the 4 nuts and push rod clevis.
- (e) Pull out the brake booster and gasket.